

DENVER[®]

 
PORTABLE BLUETOOTH SPEAKER

BTL-300




ALL RIGHTS RESERVED/COPYRIGHT DENVER ELECTRONICS A/S
www.denver-electronics.com/

PANEL DESCRIPTIONS

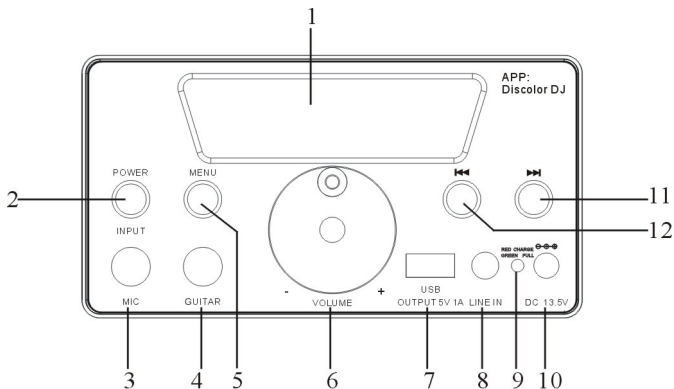

- 1.LED display
- 2.POWER/INPUT:POWER/USB/LINE IN/BLUETOOTH input switch button.
- 3.MIC: Microphone signal input.
- 4.GUITAR:Guitar input
- 5.Menu selecting button
- 6.VOLUME-/+ :Master volume adjustment.
- 7.USB: USB card input, please pay attention to the direction when. Inserting the card, USB charge 5V 1A.
- 8.Line input
- 9.LED light
RED Charging indicator light.
GREEN Fully charged indicator light.
- 10.DC 13.5V electrical interface
- 11.Next song
- 12.Previous song

 
REMOTE CONTROL DESCRIPTIONS

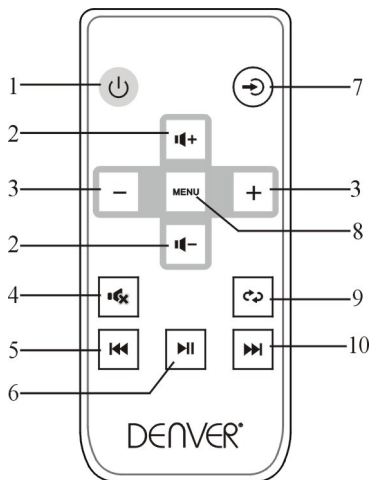

- 1.Standby
- 2.Master volume +/-
- 3.Menu selecting +/- button
- 4.Mute button
5. Previous/VOL-
- 6.Play/ Pause
- 7.Signal input button
- 8.Menu selecting button
- 9.Repeat button
- 10.Next/VOL+

Operation range of the remote control

 Infrared sensor

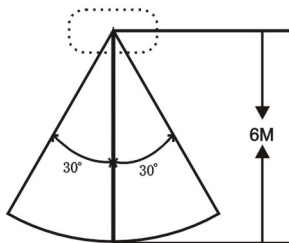

Notice:

There should be no big obstacle between the remote control and the main unit.

BASIC OPERATION

1. Switching the unit ON

Hold the STANDBY button on the panel for a few seconds and the unit will turn on, illuminating the LED light. If the unit has been in STANDBY mode for a long time, it will turn off automatically. To switch the unit on again, just press the STANDBY button on the panel (Standby mode) (Standby mode) on the remote control only works when the machine is standby mode).

2. Input mode selection

You can select the input mode by pressing the input mode selection button on the remote control or you can press the signal input selection button on the front panel.

3. Mute

To mute the unit, press the mute button once on the remote control. To cancel the mute option, press the mute button again.

4. Volume adjustment on the remote control

Press the VOL +/- button on the remote control to adjust the volume.

5. Volume adjustment on the unit

Turn the dial anti-clockwise to decrease the volume and clockwise to increase the volume.

6. MENU SELECTION

Press the MENU button on the front panel or remote control to choose below options (total 8 options):

6.1. bA-Bass 6.2. tB-Treble 6.3. 1U-Mic volume 6.4. 2U-Guitar volume

6.5. EC-Echo 6.6. dL-Delay 6.7. bR-Bright 6.8. bO-Light

After selecting one option then twist the VOLUME dial on the front panel or press +/- on remote control to adjust each option effect.

7. Repeat

During playback, press the repeat button on the remote control once to repeat playing the current track. To cancel the repeat option press the repeat button again.

8. PREV/NEXT

By pressing PREV/NEXT you can select a specific song from the play list.

9. USB Charge

USB charge power out 5V 1A for mobile phones etc.

Bluetooth:

 
Press the INPUT button on the panel/remote control to select Bluetooth mode. Simultaneously open the Bluetooth setting on your phone, tablet or any other Bluetooth enabled audio device and select "BTL-300". The unit and device will then connect via Bluetooth. To control the device via your phone, tablet etc please download the app "Discolor DJ".

Once the unit and device are connected via Bluetooth, open the "Discolor DJ" app on your phone, tablet etc and press the Bluetooth button. This will enable you to control the following five modes on the device from your phone: Music, Light, USB Card, Bluetooth and Equalizer. To cancel the app, press the exit button.

To control the device via your phone, please find and install the app "Discolor DJ". Use your smartphone via Wifi-download free program APP from Google Play or App Store


Open the APP "Discolor DJ" in your phone, there are 6 function icons on main page:

1. Bluetooth Music play
2. Control Bluetooth connect
3. Line In input - mute
4. Light control colour, brightness and light flash mode
5. Equalizer, volume adjustment for music, Microphone and guitar input.
6. USB card play

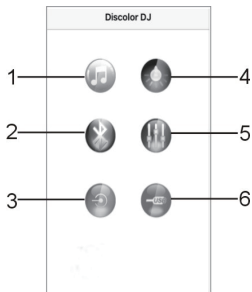


Discolor DJ




(1) Bluetooth Music play

 
Press  to enter into Bluetooth Music play page, Press "Pick songs to play" to Pick Song page to choose the song you want to play, press "Done" to return to Bluetooth Music play page, also you can operate pause, play, backward, forward& volume adjustment, repeat, random play. Press "Back" to return to the main page.

(2) Bluetooth connection

Press  to enter into Bluetooth Control connection page, then click "Discolor DJ BLE" to connect with the speaker.

(3) Line In input - mute


Press  to enter into Line IN input page, press  to mute music, press  to continue play. Press "Back" to main page.

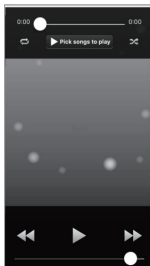

(1)



 
(2)

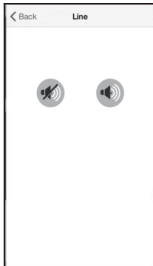

(3)

(4) Light control colours, brightness and colour change mode




Press  enter into Light control page, you can select any colour to show the light colour on the speaker, as well as adjust the brightness of the light. To go back to main page, press "Discolor DJ" in the left corner.

Press "Profiles" to enter into Light effect mode page, you can choose from a total of 12 well pre-set light effect modes. To return to Light Control page, press "Light" in the left corner.


(5) Equalizer, volume adjustment for music, microphone and guitar

 


Press  to enter into Sound Set page to adjust the volume for Music, microphone and guitar, there are 4 pre-set EQ modes : Pop, Classical, Jazz and Rock, you can also press G-Eq to access the graphic equalizer to set up your preferred equalizer specification.


(6)USB card play




When inserting to USB card on the speaker, press  to enter the USB Card play page, to choose a song and play music on the USB card, press "Play" to enter into the play control page, where you can operate pause, play, backward, forward & volume adjustment. Press "List" to return to USB list page, press "Back" to return to the main page.

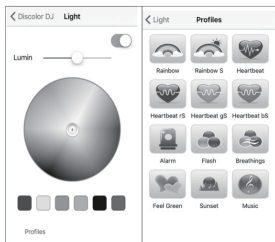

 (4)

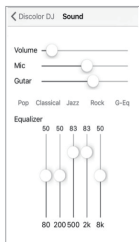

 (5)

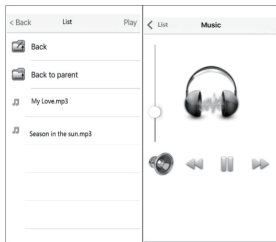

(6)

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:
DENVER ELECTRONICS A/S
Omega 5A
Soeften
8382 Hinnerup
Denmark
www.facebook.com/denverelectronics

Hereby, Inter Sales A/S, declares that this model DENVER (BTL-300) is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

A copy of the Declaration of Conformity may be obtained at
Inter Sales A/S
Omega 5A
Soeften
8382 Hinnerup
Denmark

