

DENVER[®]

DENVER BTS-21 Bluetooth Speaker

This speaker has three different modes. Bluetooth, Handsfree and Aux mode.

To switch to AUX mode when on Bluetooth mode, please push button from left (marked "BT") to middle (marked "AUX");

Mode 1: Bluetooth - How to pair.

Turn on the speaker by pushing the "OFF" button to left (marked "BT"), you will hear a beep sound. The light will blink blue. Now the speaker is ready to pair, Search for the speaker (device name: BTS-21) with your smartphone or pc. There will be a beep sound when connect successfully.

Mode 2: Bluetooth – Handsfree.

Music will stop while a phone call coming through Bluetooth.


Press "Pause/Play" button to pick-up, then you can answer the phone through the speaker.

When you finish, press "Pause/Play" to end the call.

Mode 3: AUX/ direct input mode.

Plug the mini USB plug into the speaker and the mini jack plug into the item you want to play music from. Push "OFF" button to middle (marked "AUX"), you will hear a beep. Then it's ready to play your music.

Buttons on the speaker:

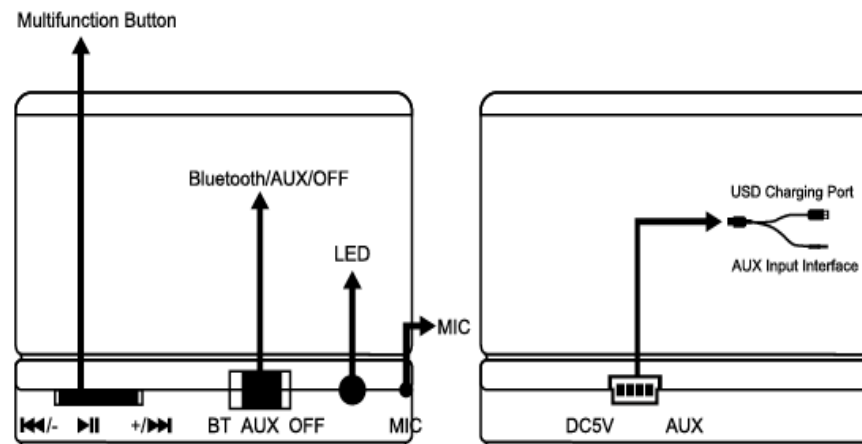

Off: turn off the unit

AUX: enter AUX mode and turn on the unit

BT: enter Bluetooth mode and turn on the unit

Pause/Play: pause play audio when in Bluetooth mode, pick up or cut off the calling

Volume +/-: Press and hold vol+ to increase volume, press and hold vol- to decrease volume, Press vol+ short to change to next song, press vol- short to change to previous song.

Charge BTS-21:

Charge your speaker, please connect the mini USB plug into the speaker and the another USB plug into a PC, or into an USB adaptor(not included). This will charge the speaker. You can play music while charging, but this will make the charging period longer.

Charge time when turned off: App. 2 hours

Play time when fully charged: App. 2 to 3 hours

ALL RIGHTS RESERVED COPYRIGHT DENVER ELECTRONICS A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S, declares that this product BTS-20 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of conformity may be obtained at:

Inter Sales A/S, Stavneagervej 22, DK-8250 Egaa, Denmark.

Importer:

DENVER ELECTRONICS A/S

Stavneagervej 22

DK-8250 Egaa

Denmark

www.facebook.com/denverelectronics