



# DENVER<sup>®</sup>

## IFI-140 User Manual Docking system for iPhone

### IMPORTANT SAFETY INSTRUCTIONS



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

 
Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.




## LOCATION OF CONTROLS

### TOP VIEW

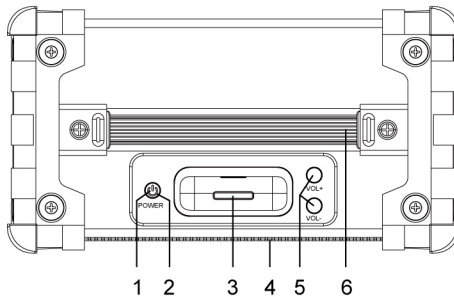

### REAR VIEW

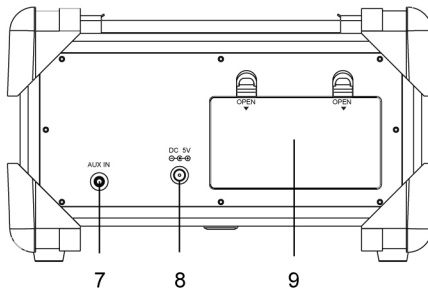 

#### 1. POWER button

Press the POWER Button to turn on the unit.

To power off (Standby mode) the unit, press and hold the POWER Button until Power LED OFF, then release the button.

#### 2. POWER indicator

#### 3. iPod/iPhone Docking Connector

#### 4. Speaker

#### 5. VOL+ / VOL- button

Press VOL+ or VOL- Button to adjust volume level desired.

#### 6. Handle

#### 7. Aux in jack

#### 8. DC Input Jack

#### 9. Battery Door



## GETTING STARTED

The unit is design to use the supplied AC/DC adaptor or 6 x AA size batteries (batteries not included).

Batteries:

### To install or replace batteries:

1. Open the battery door on the rear of unit.
2. Install 6 (six) AA size batteries into the battery compartment as the polarity markings inside.
3. Replace the battery door.

### NOTES:

1. Alkaline batteries are recommended for longer operation time.
2. In battery operation mode, for saving the battery power the connected iPod/iPhone will not be charging.

## BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. ( Follow battery manufacturer's instructions.)
6. Do not dispose of battery in fire. Battery may explodes or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.

## AC/DC Adaptor:

1. Insert the DC Plug from the supplied AC/DC Adaptor to the DC IN Jack on the **rear** of unit.
2. Insert the AC/DC Adaptor into wall outlet having AC 100-240~, 50/60Hz

### NOTES:

 
- ⚠ When AC/DC Adaptor was connected, the battery power will cut off automatically.
- ⚠ This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.
- ⚠ When connected the iPod/iPhone to the docking, it will be charging automatically.
- ⚠ If Apparatus will not be used in a long period of time. To avoid damage the unit. Unplug the AC/DC Adaptor from the wall outlet and take out all batteries.

## Docking and Charging The iPod/iPhone:

This unit is designed with the same connector found in most iPod and iPhone docks. When connecting the supported iPod/iPhone to the docking station on the top of the

unit. The connecting iPod/iPhone will start recharging. You can also playback the music files in the iPod/iPhone as follows:

1. Remove the cover of the iPod/iPhone Docking as shown on the figure below: Fig1
2. Insert the iPod/iPhone to the docking as shown below (If the power source of the unit is AC/DC Adaptor. When iPod/iPhone is inserted, it will recharge automatically) : Fig2

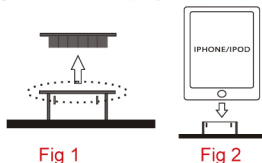

## AUX IN

To listen to the music from the external audio device or non-dockable iPods as follows:

- ☼ When insert the 3.5mm stereo plug to the AUX Jack on the rear of unit, it will convert to Aux in automatically; when extract the plug, it will convert to iPod automatically.
1. Connect the external audio device or iPods/iPhone by an audio connection cable with 3.5mm stereo plug on both ends(Cable not included).
  2. Insert one end to the AUX Jack on the rear of unit. Insert the other end to the Phones Jack; Line Out Jack or AUX Jack on the external audio device or iPods.

## Protect Your Furniture:

This model is equipped with non-skid rubber'feet'to prevent the product from moving when you operate the controls. These'feet'are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber'feet'to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber'feet'before you place the product on fine wooden furniture.

## CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
3. Unplug the unit from the electrical power outlet immediately in case of malfunction.

## CLEANING THE UNIT

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.

- ☼ The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, use caution when cleaning and wiping the plastic parts.
- ☼ If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- ☼ If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

**CAUTION:** Never allow any water or other liquids to get inside the unit while cleaning.

## TROUBLESHOOTING GUIDE

If you experience difficulties in the use of this Docking System, please check the following.

Symptom	Possible Problem	Solution
The unit does not respond (no power)	AC/DC Adapter is not plugged into a wall outlet or the connector is not plugged into the DC IN jack on the back of the unit	Plug the AC/DC adaptor into wall outlet and plug the connector into the DC IN jack on the unit
	Wall outlet is not functioning	Plug another device into the same outlet to confirm the outlet is working
iPod/iPhone does not respond to the speaker system	iPod/ iPhone is not installed properly	Remove your iPod/ iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/ iPhone. Then reseat it on the dock
	Your iPod/iPhone is locked up	Please make sure that your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for info on resetting the iPod/iPhone
iPod/iPhone does not charge	iPod/iPhone is not installed properly	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseat it in the dock.
	iPod/iPhone is locked up/frozen. iPod/iPhone battery has problem	Please make sure your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for details on resetting.
Sound is distorted	Volume level is set too high	If the iPod/iPhone original sound source is of poor quality, distortion and noise are easily noticed with high-power speakers. Try other file
	Sound source is distorted	If you are using an external sound source like older generation of iPod., try reducing the output volume on the device itself.

## SPECIFICATIONS

### General Specifications:

Power Source of Main Unit: DC---5V,2.5A,Center positive or 6 x AA size batteries(Not included)

### AC/DC Adaptor:

Input: AC100-240V~,50/60Hz,0.5A

Output: DC—5V,2.5A,Center positive

Audio Power: 2x2W

**SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE**



Accessories:

1 x User's Manual

1 x AC/DC Adaptor



[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)

DENVER<sup>®</sup>  
ELECTRONICS

[www.denver-electronics.com](http://www.denver-electronics.com)