





Thank you for purchasing our digital MP3 player. Before you use this player, please read through this manual book, so you can operate it correctly.

Before you start please make sure that you have switched the player to ON position and that you have inserted a Micro SD card in the Micro SD slot. Please notice that this model is sold without micro SD card memory.


## A. Shuffle function introduction

Long press , the unit turns on shuffle, music playing is in random by pressing  key.

Long press , the unit turns off shuffle, music playing is in sequence by pressing  key

## B. Key function and operating method

### 1. Key function:

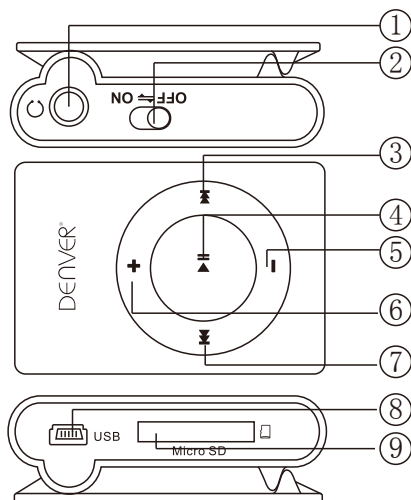

- |  |                                    |
|--|------------------------------------|
| 1. Earphone jack                       | 2. Switch on/switch off the player |
| 3. Next song ,fast forward             | 4. Play/Stop                       |
| 5. Volume down                         | 6. Volume up                       |
| 7. Previous song ,fast backward        | 8. USB connecting port             |
| 9. Micro SD (Micro SD card noti incl.) |                                    |

## 2. Operating method:

### Power on:

Please insert your SD card and earphone, press **PLAY** key for 3 seconds, the LED will light up and the player enter the playing status.

### Music playing:

When playing music, the LED will be flashing. Mp3 player will keep playing the song that unfinished last time if without pressing any key. When finishing playback of the last track, it will play from the first track again.

### Pause playing:

In playing status, press **PLAY** key, player stop temporarily (LED light on), pressing **PLAY** key again, it continues playing music (LED flashing).

### Power off:

In standby status, long press **PLAY** key for 3 seconds (or more than 3 Seconds) , this player will be powered off.

When you press **PLAY** key to pause playing and without pressing any keys, this player will be powered off automatically after 90 seconds.

## C. Connect with computer

1. Connect USB jack of this MP3 player with your computer USB socket, the green LED will be turn on, you can find the removable disk on your computer.
2. Copy your files from the computer into this MP3 player, this MP3 player also can be used as flash disk.

## D. How to charge

Turn ON the unit and connect it to PC MP3 will be, automatically charged. **When the unit is fully recharged the LED bulb will turn off.** Suggest charge for three hours around.

# DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:  
DENVER ELECTRONICS A/S  
Stavneagervej 22  
DK-8250 Egaa  
Denmark  
[www.facebook.com/denverelectronics](https://www.facebook.com/denverelectronics)