

Fixing the stand

Note: the pictures below are only for reference

1. The parts needed for installing the stand (supplied)



TV set



Stand



Screws(supplied)
4 x ST3 x 10



Before installing the stand, please check that you have all of the parts and that there is no visible damage. If a part is missing or appears damaged, please contact customer service.

2. How to install the Stand?

Place the TV face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.

 
Put the stand to the neck of the TV set as shown below.



1. Before you put on the stand, please make sure the direction is correct as shown below.

2. When you are putting on the stand, please make sure the neck of the TV set is in the correct position and attached tightly.


If you do not attach the stand correctly, it will make the TV unstable and may tip over.



Front
(Longer)

Back

 Attach the stand with the supplied screws.




When attaching the stand, make sure the screws are attached tightly.

If the screws do not attach tightly, it will lead the TV to be unstable or may even tip over.

3. Warnings.

a. It can not be tilted to the front or back as shown below. Doing so may damage the stand.

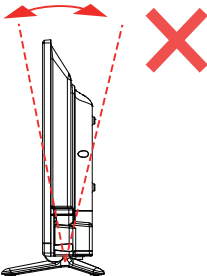

b. It can not be tilted to the left or right as shown below. Doing so may damage the stand.

