 


# DENVER<sup>®</sup>

---

## **4K UHD CURVED LED TV with DVB-T2/S2/DVB-C and DVB-T2/S2 4K Support**

**Model: LED-5573K**

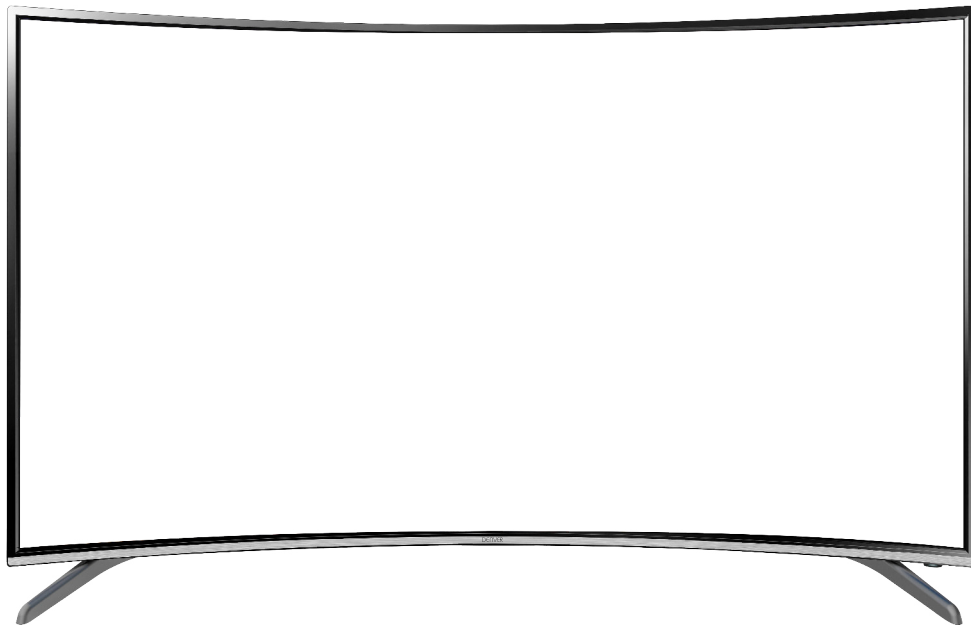

## **User's Guide**

### **NOTE:**

**Read all of the instructions before using this TV and keep the instruction manual in a safe place for future reference.**

# Contents

---

<b>Safety Information</b>	<b>1-3</b>
<b>Product Introduction</b>	<b>4</b>
<b>Connections</b>	<b>5</b>
<b>Remote Control</b>	<b>6-7</b>
<b>Auto Installation Setup</b>	<b>8</b>
<b>OSD MENU</b>	<b>9-15</b>
1.Channel Setting	9-13
2.Picture menu	13
3.Sound menu	14
4.Time menu	14
5.Setup menu	14
6.Lock menu	15
<b>Media Player</b>	<b>16</b>

# Safety Information

---

*IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY BEFORE USE.*

*Take note of the following safety information which appears on the back of the TV.*

---



CAUTION TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

---



This symbol indicates that there are important operating maintenance instructions in the literature accompanying this unit.

---



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

---

## *Keep these instructions*

- Do not use this TV near water.
  - Clean only with a slightly damp cloth.
  - Do not block any ventilation openings.
  - Install in accordance with the supplied Quick Start Guide and this User Guide.
  - Protect the power chord from being walked on or pinched, particularly at plugs, and the point where it exits from the TV.
  - Do not allow the power chord to overhang the edge of a table.
  - Unplug this TV during lightening storms or when unused for long periods of time.
- 



**WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE TV.**

---

NOTE: No naked flames such as candles should be placed on the TV.

---

## IMPORTANT SAFETY INFORMATION (Continued)

This unit has been produced according to all current safety regulations. The following safety tips should safeguard users against careless use and the dangers connected with such use.

- Although this appliance has been carefully manufactured and rigorously checked prior leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- This set should only be connected to a mains power supply which matches that stated on the label on the rear of the TV – do not attempt to connect it to any other type of supply.
- The socket – outlet must be installed near the equipment and easily accessible.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Apparatus with Class 1 construction shall be connected to a mains socket outlet with a protective earthing connection.
- Keep away from rodents. Rodents enjoy biting into electric flexes.
- Always hold the plug when pulling out the plug from the mains supply socket. Do not pull on the flex, the flex can become overloaded and cause a short circuit.
- Set up the unit so that no one is able to trip over the flex.
- Do not place heavy items on the flex, which may damage it.
- Take note that the flex cannot be reached and pulled by young children, avoiding injury.
- Do not set up the unit near to heat sources. The casing and the flex could be damaged by the impact of heat.
- The screen is made of plastic and can break if damage is done to it. Be careful when collecting sharp edged plastic splinters to avoid injury.
- Avoid placing the unit on any surfaces that may be subject to vibrations or shocks.
- To protect the unit during a thunderstorm unplug the AC power cable and disconnect the aerial. Caution: Do not touch the aerial (RF) connector.
- When you leave your home for long periods of time, unplug the AC power cable for safety reasons.
- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 5 cm (2") free space around the whole unit.
- Do not allow water or moisture to enter the TV. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Do not use this unit when moisture condensation may occur
- Any repairs must be carried out by qualified personnel only.
- Do not open this unit. A non – expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.

# Safety Information

---

## IMPORTANT SAFETY INFORMATION (continued)

- Liquids spilt into the unit can cause serious damage. Switch the set OFF and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.
- Do NOT remove the safety covers. There are no useable or serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.
- Do NOT tap or shake the screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- Never place hot objects or open flame sources on or close to the TV.
- High temperatures can melt plastic and lead to fires.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp cloth with dilute detergent.

## Headphone Warning

Loud music can damage your hearing irreversibly, therefore do not set the volume to a high level when listening through headphones, particularly for lengthy listening periods.

## Where to install

Locate the television away from direct sunlight and strong lights, soft indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place the TV on a sturdy platform of which the surface should be flat and steady. This will prevent it from falling over.

 
 
Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and so that small objects cannot be inserted into the ventilation slots or openings in the cabinet.

## Smell/odor from TV


New televisions may produce an unusual smell or odor when first turned on. Due to the manufacturing process of components, televisions and other electronic products can have parts that may produce a smell after the product is first turned on and warms up. The smell will usually dissipate within a few days of use and does not return. This is normal and occurs with many electronic products. Please ensure there is sufficient ventilation around the TV and in the room and the odor will dissipate.

---

## Front View

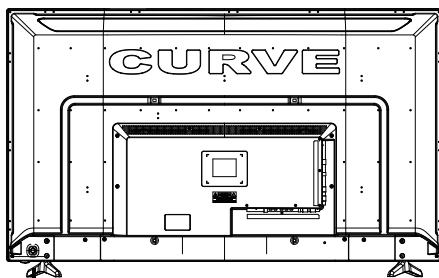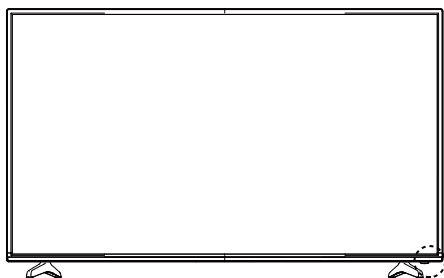

 LED indicator Remote Control window(keep clear)

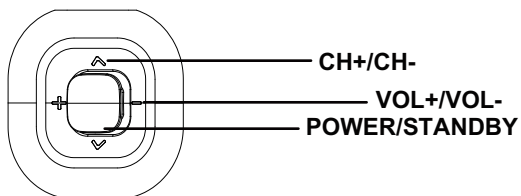

### The functions of the TV buttons are described below.

**CH+/CH-:** Press to scan through channels.

They are also can be used to move down/up in the OSD menu screen.

 
**VOL+/VOL-:** Press to adjust the volume.

They are also can be used to move left/right in the OSD menu screen.

VOL+ button can be used to skip forward to next menu.

**POWER/STANDBY:** Turn on/off the TV set.

# Connections

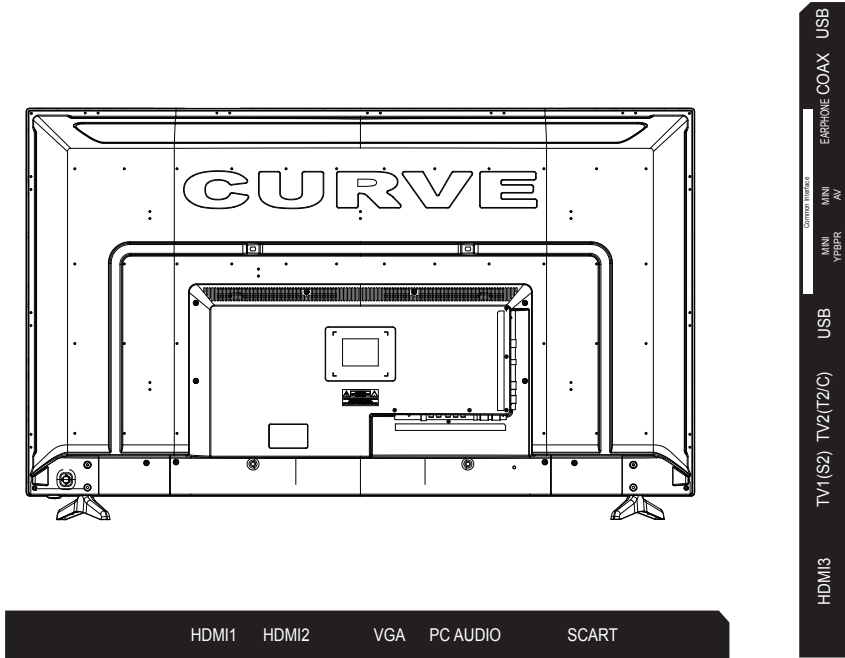

**HDMI 1:** Connect DVD/Blu-ray player or other equipment. Supports UHD 4K (2180P) resolution.

**HDMI 2:** HDMI 2.0 (HDCP 2.2). Supports UHD 4K (2180P) resolution.

**VGA:** For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

**PC AUDIO:** Connect it to the audio output terminal of PC.

**SCART:** Connect them to the SCART video output terminal of DVD.

**HDMI 3:** HDMI 1.4a (HDCP 1.4). Supports 1080P resolution only.

**TV1(S2):** Connect a Satellite signal. 4K tuner support for S2.

**TV2(T2/C):** To connect to the aerial socket on the wall with the RF coaxial cable. 4K tuner support for T2.

**USB:** Connect to USB device for multimedia (up to 1080P).

**Common Interface:** CI slot.

**MINI YPbPr:** Connect it to the YPbPr video output terminal of DVD with the Converter cable.

**MINI AV:** Connect it to the audio & video output terminal of DVD with the Converter cable.

(Audio terminals are shared with YPbPr)

**EARPHONE:** Connect it to your headphone or other audio equipment.

**Coax:** Digital output to AV receiver.

The remote control is using Infra-Red(IR). Point it towards the front of the LED TV. The remote control may not work correctly if it is operated out of range or out of angle.



**POWER**(red button): Turn the TV on/standby.  
**MUTE**: Press to mute the sound, press again or press VOL+ to unmute.

**PICTURE**: Select the picture mode.  
**SOUND**: Select the sound mode.  
**ASPECT**: Adjust picture size  
**SLEEP**: StandbyTimer  
**SUBTITLE**: Turn on/off the subtitle display in DTV mode  
**CH.LIST**: Display the programs list.  
**EPG**: To show the Electronic Program Guide during no-menu state only in DTV mode.  
**FAV**: Display the favorite program list.

**Buttons for Basic operating**

**TV/RADIO**: Switch to TV/RADIO.  
**INPUT** : Display the input source menu.  
**THUMBSTICK**( ◀ / ▶ / ▲ / ▼ **OK**): Allows you to navigate the on-screen menus and adjust the system settings to your preference.  
**MENU**: Press to display the OSD menu.  
**EXIT**: Press to exit the OSD menu.

**NUMBER BUTTONS**: Choose channel directly. Press number buttons and press **OK** button to play the channel.  
 ↶ : Return to the previous channel viewed.  
**DISPLAY**: Press to display the current mode's information.





**VOL +/-** : Volume +/-.

**CH ▲/▼**: Channel/Program +/-.

**▶||** : Play/pause program.

**■** : Stop program.

**◀◀** : Fast reverse.

**▶▶** : Fast forward.

**◀◀** : Previous chapter.

**▶▶** : Next chapter.

**Colour buttons** : Short cuts-follow the coloured links in the text.

**Buttons for TELETEXT operating**

***You could use the buttons only in TELETEXT .***

**TV/TXT**: Turn off/on the Teletext display.

**CANCEL**: Cancel the Teletext display.

**REVEAL**: Reveal any hidden text.

**NICAM/A2**: TV Nicam/A2 select.

**INDEX**: Go to index.

**HOLD**: Hold or carry on the current subpage.

**SIZE**: Press to see top half of page double size. Press again to see the bottom half of page double size. Press again for normal size.

**SUBPAGE**: Press to enter subpages, press again to cancel.

## Common Interface Slot

### USING YOUR COMMON INTERFACE SLOT

This TV set features a CI+ slot and supports the following digital standards: DVB-T, DVB-S(S2) and DVB-C.

 
#### Common Interface

The Common Interface (CI+) slot is designed to accept the Conditional Access Module (CAM) and Smart Card in order to view the pay TV programmes and additional services. Contact your Pay Per View TV service provider to get more information about the modules and subscriptions.

NOTE: Conditional Access Module and Smart Cards are sold separately.

WARNING! SWITCH OFF YOUR TV BEFORE ANY MODULE IS INSERTED INTO THE COMMON INTERFACE SLOT, THEN ADD THE SMART CARD TO THE CAM.

CI+ Slot

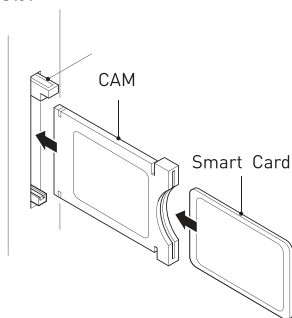

1. Turn on the TV and ensure 'DTV' Source is selected.
2. If the CAM is detected the TV will display the following message on the screen. "Common Interface Module inserted" wait for a few moments until the card is activated.
3. Select the relevant digital Pay Per View channel.
4. Detailed information on the Smart Card in use is displayed
5. Press the Ok button to access the card menu. Refer to the Module Instruction Manual for setting details.
6. When the module is removed, the following message will appear on the screen. "Common Interface module removed".

## Auto installation setup

 
### Power On / Off the LED TV

#### To turn on the LED TV

Press the power button on the LED TV or the POWER button on the remote control, the standby indicator will light blue.


#### To turn off the LED TV

Press the power button on the LED TV or the POWER button on the remote control, the standby indicator will light red.

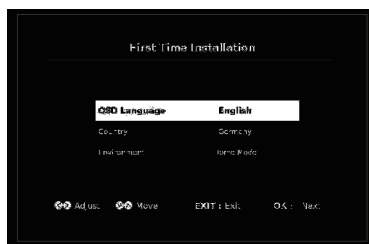

Use the Left/Right/Down keys to select your Language, Country and Environment.

 Press OK button and you will see the following menu.

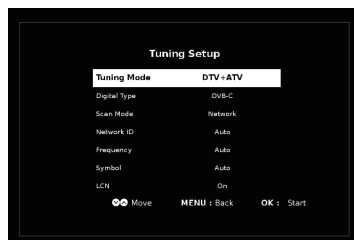

Ensure your aerial, cable or dish is plugged in to the TV and then press OK again.

The TV will start to install the service you have selected. This could take some time depending on your selected service.


# Channel Setting
 
## Antenna



1. Press the Menu button on the remote control on your LED TV to select the Channel menu.
2. Press the ▲ ▼ buttons to select the Antenna menu. Press OK to select it.
3. Press the ◀ ▶ buttons to select DVB-T or DVB-C.

## Auto Tuning

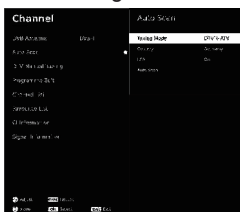

In the Auto Tuning menu there are 3 options for you to select from: Country, Tuning Mode LCN.

Press ◀ / ▶ to select Country, Tuning Mode LCN.

If you select DTV+ATV, the first 50% of the processing is for ATV tuning, while the second 50% represent DTV tuning. When ATV tuning, you can press MENU to Skip ATV tuning and start DTV tuning or press EXIT to exit tuning.




During the channel search a preview of the already-found channels is displayed.

Unlike QUICKSTART the satellite search will search the whole satellite for channels and will not be instant.

Also the channels will appear in the order on the satellite and not the pre-set order.

Auto search replaces any previous searched channels with those of the new search. To add an extra satellite if you have a suitable Dish/LNB/ Switch you must use the Dish Installation menu.


## ATV Manual Tuning

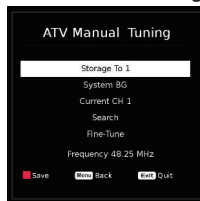 

You can manually tune ATV Manual Tuning in the CHANNEL Menu.


1. Current CH: Display the current channel number, press the buttons to choose the channel you wish to modify.
2. Sound System: Select the Sound System using the ◀ / ▶ buttons.
3. Fine Tune: In case of bad reception, you can press the ◀ / ▶ buttons to make fine adjustments to the tuning.
4. Search: Press the ◀ / ▶ buttons to scan through the frequencies to find new channels.

## DTV Manual Tuning

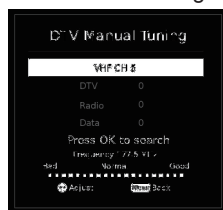 

You can manually tune DTV Manual Tuning in the CHANNEL Menu. Press the Left/Right arrow buttons to select the channel you wish to tune, then press OK button to scan for the channel.


## DVB-C Tuning

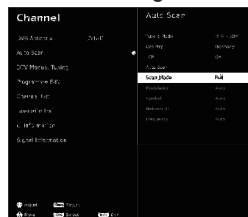 

When you choose "Cable" under TV connections, There are 2 options for Cable scan mode:

1. Full Search: Choose FULL SEARCH and choose "OK" to start Auto Search for the channels.
2. Network Search: Input the number of the Network ID of the channel and choose the frequency and choose "OK" to find specific TV channel. (please notice you need to know the network ID + start frequency from your TV provider).

## Programme Edit

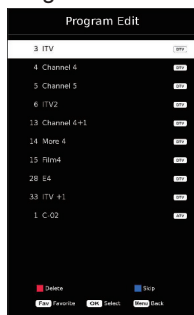 

Use up/down keys to select program edit.Press OK or Right button to enter the menu.Use up/down buttons to navigate through the menu.

### 1.Delete:

Press the RED button to delete the highlighted channel.

### 2.Skip:

Press ▲▼ to select the channel you wish to skip.

Press the BLUE button,a logo will appear next to the channel name and the channel will be skipped when you scroll through the channels.

Press the BLUE button again on the highlighted channel to disable the skip function.Press MENU to return to the main menu.

## Signal Information

Only available in DTV mode,Satellite Signal Information includes:channel/network/modulation/quality/strength/Frequency/Transport stream/Service/Software Version.

## CI Information

When insert CI Module,display CI Information.

Note:The following reception combinations are possible:ATV,DVB-C, DVB-T channels is not possible.

## Software Update{USB}

- 1.Download the software to the usb device,then insert the usb device to the unit.
- 2.Press the Menu button to select the Setup menu.
- 3.Press the ▲▼ buttons to select Software Update{USB} and then press the OK button to update software.
- 4.when the updating is completed,the unit will be reset to standby mode.

## Power-Off-No-Signal-Down

If no valid input signal is detected,the TV set will toggle to standby mode automatically after approx.10 minutes.

## Auto-Power-Down

4 hours maximum after the last user interaction and/or the last channel switching,the TV set will automatically toggle from On to standby mode.Prior to this automatic toggling,a message will be displayed allowing you to extend the delay time for another 4 hours.

## Guide{EPG-Electronic Program Guide}

Press the EPG button on the remote control to open the Electronic Program Guide.EPG contains a 7-day programme preview as long as the selected channel asupports this function. If there is more information about a programme,press the ▲▼ and ◀▶ buttons to scroll through the pages.Please note that the maximum viewable number of characters is limited.

## Dish Setup

 
1. If you do not have a fixed dish aligned to Astra 19.2E fitted with universal LNB you will need to use this section.
2. If you have a fixed Dish aligned to a different Satellite or with a different LNB you will need to use this section.
3. If you have a motorised Dish with a DiSEqC rotator and wish to tune more than one satellite you will need this section.
4. If you are on a DiSEqC switch system you will need this section.

The first 2 installations can be done by most people so long as you know what satellite your dish is aligned with and what type of LNB it is fitted with.


Installation of 3 & 4 require an experienced user or engineer.

## Satellite Tuning

Select “Dish Setup” item to enter the satellite system setting menu and the user operation interface as following:

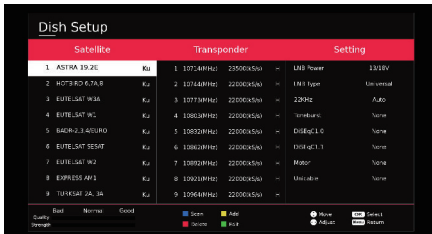

## Satellite edit menu

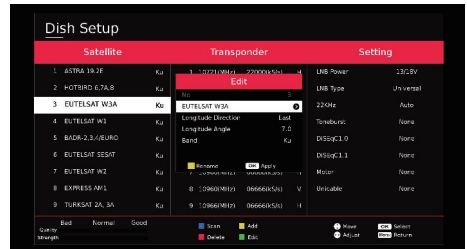 

Operations in satellite edit menu are shown in the following table :

Option	Value
Satellite	Press Yellow button to rename.
Longitude Direction	East ,West
Longitude Angle	Press num key to set the Angle
Band	C,Ku band choose


## Satellite List



 Operations in Satellite List Menu are shown in the following table:

Key Stroke	Action
KEY_UP	use cursor to up
KEY_DOWN	use cursor to down
KEY_LEFT	switch operation to satellite system parameters setting list
KEY_RIGHT	switch operation to Transponder list
KEY_MENU	Back to Channel Menu.
KEY_EXIT	Exit Main Menu.
KEY_GREEN	Enter satellite edit menu
KEY_BLUE	Enter satellite scan menu


## satellite Search menu

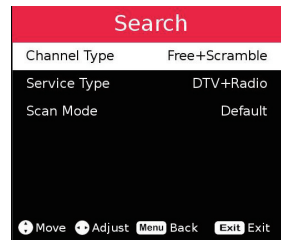

Operations in satellite scan menu are shown in the following table :

Option	Value
Scan Mode	BLIND SCAN Default,Network
Channel Type	Free+Scramble,Scramble,Free
Service Type	DTV+Radio,Radio,DTV


## Transponder List

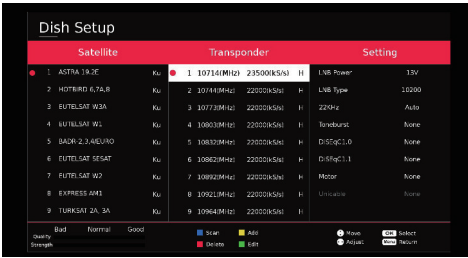 

Operations in Transponder List Menu are shown in the following table:

Key Stroke	Action
KEY_UP	use cursor to up
KEY_DOWN	use cursor to down
KEY_LEFT	switch operation to Satellite list
KEY_RIGHT	switch operation to satellite system parameters setting list
KEY_ENTER	Select/unselect cursor item Transponder.
KEY_MENU	Back to Satellite list.
KEY_EXIT	Exit Main Menu.
KEY_YELLOW	Enter Transponder Add menu
KEY_GREEN	Enter Transponder Edit menu
KEY_RED	Enter Transponder Delete confirm menu
KEY_BLUE	Enter Transponder scan menu


## Transponder Add menu

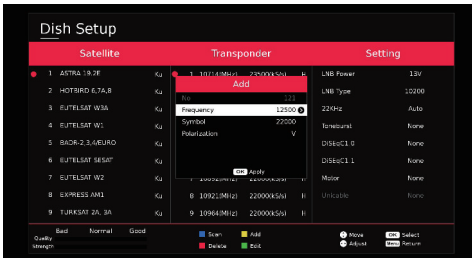 

Operations in Transponder Add menu are shown in the following table:

Option	Value
No	Can't edit .Auto addition
Frequency	Press num key to edit
Symbol(ks/s)	Press num key to edit
Polarization	H,V

## Transponder Edit menu

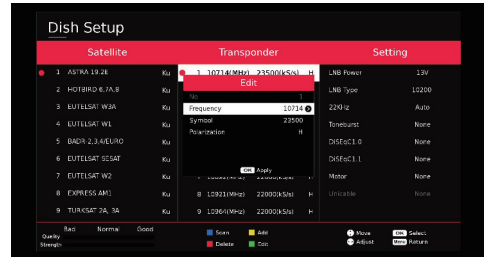 

Operations in Transponder Edit menu are shown in the following table:

Option	Value
No	Current edit item.Auto select
Frequency	Press num key to edit
Symbol(ks/s)	Press num key to edit
Polarization	H,V


## Setting



 
Operations in Setting Menu are shown in the following table:

Key Stroke	Action
KEY_UP	use cursor to up
KEY_DOWN	use cursor to down
KEY_MENU	Back to Transponder list.
KEY_EXIT	Exit Main Menu.

Operations in Setting item menu are shown in the following table: **Menu Settings**

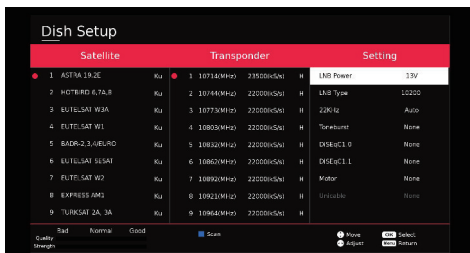

## Picture menu

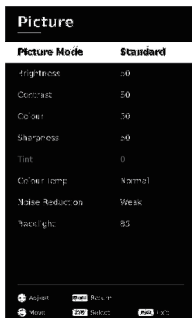 

**Picture Mode:** Choose from Standard, Dynamic, User and Mild.

**Note:** Contrast, Brightness, Colour and sharpness are only available and can be adjusted in the User mode option in the Picture Mode Settings.

**Contrast:** Controls the difference between the brightest and darkest regions of the picture.

**Brightness:** Controls the overall brightness of the picture.

**Color:** Control the color.

**Sharpness:** Increase this setting to see crisp edges in the picture; decrease it for soft edges.

**Tint:** Controls the tint ( NTSC mode only).

**Color Temp :**Choose from Warm,Personal ,Cool and Normal

**Noise Reduction:** Choose interference noise modes from Off,Weak Middle and Strong.

backlight

Option	Value
LNB Type	Universal,MDU1,MDU2,9750MHz,10600MHz,10750MHz,11250MHz,11300MHz,11475MHz,09750/10750MHz,10000/10450MHz,5150MHz,5750MHz,User Mode
LNB Power	off,13/18V,13V,18V
22KHz	Auto,off,on
DisEqC Mode	Off,LNB1,LNB2,LNB3,LNB4,Burst A,Burst B
Motor	None,DisEqC1.2,DisEqC1.3
Toneburst	None,BurstA,BurstB
Dis EqC1.0	None,LNB1,LNB2,LNB3,LNB4
Dis Eqc1.1	None,LNB1,.....,LNB16
Unicable	None,

## Audio menu



**Sound Mode:** Allows you to select among: Standard, Music, Movie, Sports and User.

**Treble** (Can be adjusted when the sound mode is set to User): Controls the relative intensity of higher pitched sounds.

**Bass** (Can be adjusted when the sound mode is set to User): Controls the relative intensity of lower pitched sounds.

**Balance:** To adjust the balance of the left and right speakers audio output, or turn off the volume of the left or right speaker.

**Auto Volume:** This feature automatically adjusts the audio level when the TV is turned on. This function is activated by selecting "On".

 
**Surround Sound:** Turn on / off the surround sound function by selecting "On" or "Off".

**SPDIF Mode:** Select the SPDIF Mode for the TV from off, PCM, Auto.

**AD Switch:** Turn on / off the AD Switch function by selecting "On" or "Off"

**Speaker Delay:** SPDIF Delay

## Time menu

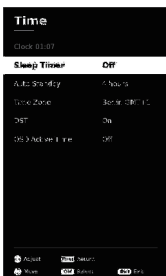

**Clock:** Press the up/down buttons to select the clock menu, then press the OK button to set date and time.

**Time Zone:** When you select a Time Zone city, the TV time is set by the time offset information based on Time Zone and GMT (Greenwich Mean Time) which is received with the broadcast signal and the time is set automatically by a digital signal.


**Sleep Timer:** Allows you to setup the sleep timer: 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.

**Auto Standby:** The unit automatically switch to standby mode 4 hours after the last time the remote control was used. A reminder screen will pop up and count down before the unit switches to standby mode. If you want to operate the TV for a long period of time, turn off auto standby function by selecting Never.

**OSD Time:** Press up/down buttons to select the display time of the on-screen menu: 5s / 10s / 15s / 20s / 25s / 30s / Never and then press the OK button to confirm.

## DST
 
## Setup menu

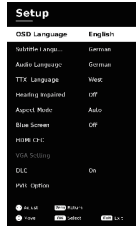

**OSD Language:** Allows you to select the on screen display menu language.

**Audio Language** (can only be selected in DTV mode): Select the audio language. The availability of this function depends on the tuned-in channel.

**Subtitle Language** (can only be selected in DTV mode): Select the subtitle language. The availability of this function depends on the tuned-in channel.

**TX Language:** West, Russian, East, Arabic, Farsi

**Restore Factory Default**

**Software Update(USB):** 1. Download the software to the usb device, then insert the usb device to the unit.  
2. Press the menu button to select the CHANNEL menu.  
3. Press the left/right buttons to select Software Update(USB) and then press the OK button to update software.  
4. When the updating is completed, the unit will be reset to standby mode.

**Hearing Impaired:** off/on

**Aspect Mode:** Auto, 4:3, 16:9, Zoom 1, Zoom 2

**Blue Screen**

**HDMI CEC**

**VGA Setting**

 
**DLC**

**PVR Option**

**Home Mode**



## LOCK menu

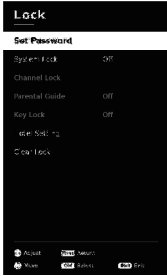

The password must be entered to access the Lock Menu. The default password is 0000. Once inside the menu you can change the password to your own choice.

**System Lock:** Enables or disables the system lock. After selecting ON, the settings made under "Lock Channel", "Parental Guidance" and "Hotel Settings" will be enabled and applied.

**Set Password:** If you had already changed the password, enter the current password.

**Please New Password:** Enter the new password.

**Confirm New Password:** Enter the new password.

You can use the Channel Lock to lock selected channels. Press the ▲▼ buttons to select the desired channel and then press the GREEN button on the remote control to lock it. To unlock a previously locked channel, select the channel and then press the GREEN button.

**Note:** In order to view locked channels, you have to enter your password.

Parental Guidance blocks programmes according to their parental level. This feature is available only for digital TV and the tuned-in channel must support it.

**Key Lock:** Press the ▲▼ buttons to select the "Key Lock" option and then press ► to choose between the options ON or OFF. After selecting ON, the front panel buttons TV/AV/ Menu/CH+/CH-/VOL+/VOL- of the device will be locked.

**Hotel Mode:** Opens the "Hotel Setting" menu.

## Hotel mode



Restricts access to tuning menus, limitation of maximum volume setting. Locks picture and signal menus.

**Hotel Lock:** Press the ▲▼ buttons to select the "Hotel Lock" option and then press ► to choose between the options ON or OFF. After selecting ON, the following options except the "Clear Lock" option are available.

**Source Lock:** Press the ▲▼ buttons to select the "Source Lock" option and then press OK to enable the menu. Press the ► button to toggle between ON and OFF. All signal sources labelled ON will not be available any more in the signal source selection menu.

**Max. Volume:** Press the ▲▼ buttons to select the "Max. Volume" option and then press ► to set the desired volume. Then the output volume will never exceed the set maximum value.

**export and import:** Allows Picture, Sound, Options, Lock and Hotel menus to be copied from one set to other sets, to make a group of sets all set up the same.

To export the settings to a file on a USB memory: Connect a USB memory stick to the USB1 port. Select "Database export". Press the ► button. When export is completed successfully "Export Success" is displayed.

To import the settings on the same type ALL model: Insert the memory stick containing the file in USB1 of the new TV. Select "Database import". Press the ► button. When complete the TV will turn off. When turned on again it will have same settings as the first TV.

**Clear Lock:** Press the ▲▼ buttons to select the "Clear Lock" option and then press ► to enable it. All hotel settings will remain disabled until you enable the Hotel Lock again.

 
# Media Player

In the option of Media Player on MainMenu, Press [OK] to enter the Media Player menu, see the picture as follows

Press ▲▼◀▶ to select Movie, Music or Photo.



Take Movie function for example, when there is focus point on Movie function, press [OK] button to enter into File Selector menu

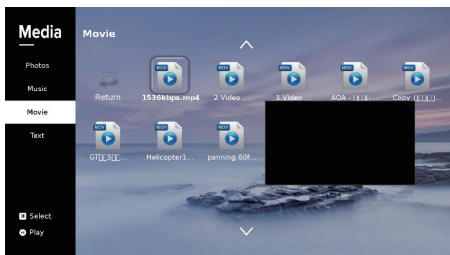

On FileSelector menu, select film source that needs to be play according to the hint. Press [PLAY/PAUSE] button to enter into the play mode of full screen; press [PLAY/PAUSE] to return to Media Player menu.


## 1. Movie

 press [OK] button to enter into FileSelector menu. Select the file you want to play, press [PLAY/PAUSE] to enter into full screen play. Press [LEFT]/[RIGHT] button to move cursor, and operate according to different hint.




## 2. Music

In the same way, on Media Player menu, move cursor to Music, press [OK] button to enter into FileSelector menu. Select the file you want to play, press [PLAY/PAUSE] to enter into full screen play. Press [LEFT] / [RIGHT] button to move cursor, and operate according to different hint.

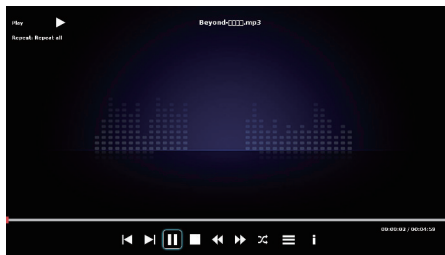

## 3. Photo

 In the same way, on Media Player menu, move cursor to Photo, press [OK] button to enter into FileSelector menu. Select the file you want to play, press [PLAY/PAUSE] to enter into full screen play. Press [LEFT]/[RIGHT] button to move cursor, and operate according to different hint.

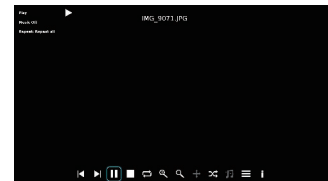

---

## Simple Troubleshooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

### **No power**

- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

### **No picture or sound**

- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different program.

### **Poor picture quality**

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings: brightness, color, sharpness, contrast, hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

### **No colour**

- Adjust the color setting.
- Check that the programme is broadcast in color.
- Check that the channel is tuned properly.

### **TV does not respond to remote control**

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This TV is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

# DENVER®

[www.denver-electronics.com](http://www.denver-electronics.com)



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type LED-5573K is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.denver-electronics.com/denver-led-5573k/>

Imported by:



DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)

 **ENERG**   
енергия - енерґія

DENVER LED-5573K


**A**

A++  
A+  
A  
B  
C  
D  
E

ENERGIA - ЕНЕРГИЯ  
ENERĢĒJA - ENERĢĪJA  
ENERGY - ENERGIE  
ENERGI

**110**  
Watt

**161**  
kWh/annum

**140**  
cm  **55**  
inch

2010/1062 - 2017

