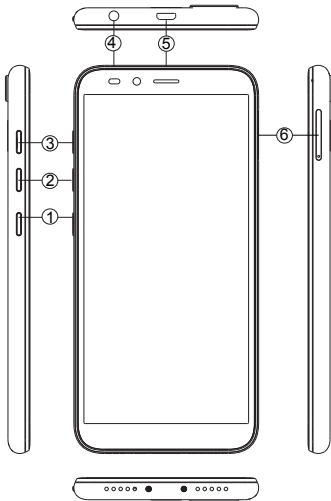

SDQ-57004L BLACK



ANVÄNDARMANUAL

DENVER[®]
denver-electronics.com



EN ÖVERSIKT ÖVER ENHETEN

Position of Keys

- | | |
|------------------|------------------|
| 1. Power Key | 2. VOL- |
| 3. VOL+ | 4. Earphone Jack |
| 5. USB Connector | |

1 KOMMA IGÅNG

1.1 INSTALLATION AV KORT

Please switch off your device before inserting or removing the SIM card or memory card.

Installera SIM-kort och minneskort

Your device is provided with two SIM slots for two different SIM cards. In order to install SIM card in the device, please follow the steps mentioned below:

- Hitta luckan till SIM-kortfacket på höger sida.
- Sätt försiktigt in verktyget (medföljer) eller ett gem i hålet på sidan av SIM-kortfacket. Tryck för att öppna det.



- Vänd den smarta telefonen upp och ned.
- Använd din hand för att ta ut facket.
- Sätt in ditt Nano SIM-kort och T-flash-kortet i SIM-facket.



- Skjut in SIM-facket.
OBS: Platsen för T-flash och SIM2 är densamma, vilket innebär att du bara kan använda ett av dem åt gången.

Laddbatteriet

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging.....  Fully Charged..... 

You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

1.2 STRÖM PÅ/AV FÖR ENHETEN

När man ska slå på enheten

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon towards to unlock the screen.
- If the screen turns off, then press the Power Key to turn on the display.

När man ska slå av enheten

- Press and hold the Power Key for 2 seconds.
- A pop-up window appears, select Power off.



2 INSTÄLLNINGAR



Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Device, Personal, Account and System.

NÄTVERK OCH INTERNET

Access this sub-menu to view and manage the roaming settings of the SIM cards, view and change the Wi-Fi, Data usage, Mobile Networks, VPN and so on. Please refer to network section for detailed information on Wi-Fi and.

WIFI

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap '  ' to activate Wi-Fi.
- Tap Wi-Fi to start detecting networks. The available networks will then be listed.
- Tap  to add a connection.

OBS:

- If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.
- If the device does not encrypt selected connection in the pop-up window to connect.
- If the device is encrypted, the pop-up window will appear, enter the password.
- Network connection is successful; the status bar icon appears Wi-Fi connection.

3G / 4G


The device supports WCDMA/LTE protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

Inställningar > Nätverk och Internet > Mobilt nätverk

- Power off, insert SIM card.
- Power on.
- Open setting, select Networks och Internet.
- Select mobile network, enter 'Access Point Names' interface.
- Touch menu button, select New APN;
- Set as below:
- Name: (any name like airtel).
- APN: airtelgprs.com.
- Touch menu button, select save.
- Go back to access point names interface, confirm the new APN selected.

BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu.
- Click  to turn on Bluetooth.
- To make your device discoverable, select Bluetooth settings and check discoverable.

DISPLAY

Med den här funktion kan du konfigurera egenskaperna för bildskärmen på apparaten, inklusive ljusstyrka, bakgrundsbild, etc.

LAGRING

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music,

and other files.

Un-mount SD Card: Un- mounts the microSD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

BATTERI

You can check the battery status of the device by accessing this sub-menu.

APPAR

This sub-menu enables you to manage all the installed, that saved in the device memory and SD card. You can remove and manage installed applications, allow installation of non Spice build in market applications.

KONTON

Use this function to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

PLACERING

Your device supports Global Positioning System. Inställningarna relaterad till plats och AGPS kan konfigureras med hjälp av denna undermeny.

SÄKERHET

You can protect your device from unauthorized users by setting the PIN code or entering a password.

ANPASSA SKÄRMLÅSET

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security.
- Set up screen lock.
- Select a desired form (Slide, Pattern, PIN, or password).

AKTIVERA ELLER INAKTIVERA SIM-KORTETS PIN-KOD

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Use PIN to Lock SIM card. Click to enable/disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

SPRÅK OCH INMATNING

Use the Language & input settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

SÄKERHETSKOPIERING OCH ÅTERSTÄLLNING

You can use the Privacy settings to manage your personal information, such as backup of the data, automatic restore and factory date reset.

DATUM OCH TID

You can select to set date, time and time zone using this sub-menu.

Use Automatic unless you need to override the network values.

Use 24-hour format: Select to set 24-hour formats on or off.

TILLGÄNGLIGHET

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

OM TELFEONEN

You can view system information including Build number, Status, Legal information, Model number, Android version and so on.

DENVER®

www.denver-electronics.com



Elektrisk och elektronisk utrustning och tillhörande batterier innehåller material, komponenter och ämnen som kan vara skadliga för hälsan och miljön om avfallet (kasserad elektrisk och elektronisk utrustning och batterier) inte hanteras korrekt.

Elektrisk och elektronisk utrustning och batterier är märkta med en symbol i form av en överstruken soptunna (syns nedan). Denna symbol visar att elektrisk och elektronisk utrustning och batterier inte bör slängas tillsammans med annat hushållsavfall, utan ska istället slängas separat.

Som slutanvändare är det viktigt att du lämnar in dina använda batterier i en för ändamålet avsedd facilitet. På det viset säkerställer du att batterierna återvinns lagenligt och att de inte skadar miljön.

Alla kommuner har etablerat uppsamlingsställen där elektrisk och elektronisk utrustning och batterier antingen kan lämnas in kostnadsfritt i återvinningsstationer eller hämtas från hushållen. Vidare information finns att tillgå hos din kommuns tekniska förvaltning.

Importör:

Inter Sales A/S

Omega 5A, Soefthen

DK-8382 Hinnerup

www.facebook.com/denverelectronics

Inter Sales A/S förklarar härmed att denna modell DENVER SDQ-55044L överensstämmer med väsentliga krav och övriga relevanta bestämmelser i direktivet 2014/53/EU. En kopia av försäkran om överensstämmelse finns på Inter Sales A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Wifi Driftsfrekvensområde: 2412MHz ~ 2472MHz.

Maximal utgående ström: 10dbm

Bluetooth Driftsfrekvensområde: 2402MHz ~ 2480MHz

2G/3G/4G Driftsfrekvensområde: 880MHz ~ 2170MHz

Google™, Google Play och andra märken är varumärken som tillhör Google™ LLC.