


DENVER[®]
denver-electronics.com




KIDS CAMERA


**KCA-1320
GREEN 5 GAMES**

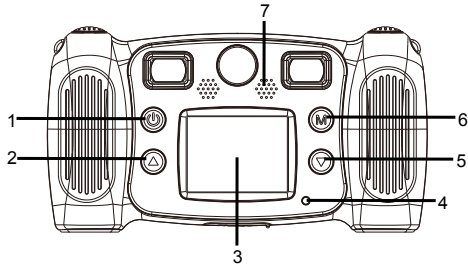

1. Power Button
2. Page Up Button
3. LCD
4. Busy indicator light
5. Page Down Button
6. Mode Button
7. Speaker

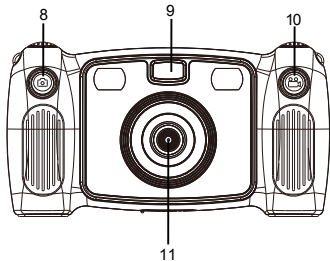

8. Take Photo Button 9. Fill Light
10. Recording Button 11. The Rear Lens

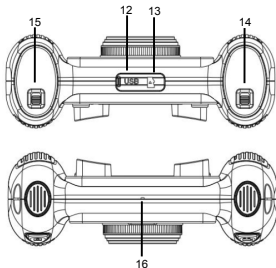

12. Micro USB 13. Micro SD Card
14. Battery Door switch 15. Battery Door switch
16. Microphone

Load battery ▼

1. Open the battery door with the Battery door switch, then insert 4 AA alkaline batteries.
2. Close the battery door with the Battery door switch.


Load a SD card ▼

The camera has no internal memory. Before you use the camera, insert a SD card to store photos and videos.

1. Remove the rubber cover located at the bottom of the camera to find the SD card slot, then insert a SD card properly.
 - To remove the SD card, press slightly the SD card to unlock the card, then take it out.




Turn on/off the camera ▼

1. Press and hold  until the welcome message is displayed on the camera screen.

2. To turn off the camera, press and hold  for 3 seconds.


■ To save power, the screen turns off automatically when there is three-minute inactivity on the camera.

Take photo

1. In the main menu, select .
2. Press  to enter the photo taking mode.
3. To take a photo, press the Photo button on the top of the camera.
4. To exit the mode, press .
 - It returns to the main menu.

To set a timer

A photo can be shot after five seconds you press the shutter.

1. In the photo taking mode, press and hold  for about 3 seconds.
 - The photo is shot after five seconds countdown.

To select a photo frame

The camera offers 10 types of predefined photo frames.

1. Press the Up and Down button to select a photo frame.






Main menu



Photo mode

Record video ▼

1. In the main menu, select .
2. Press  to enter the video recording mode.
3. To record a video, press the Video button on the top of the camera.
4. To stop recording, press the Video button again.
5. To exit the mode, press .
 - It returns to the main menu.









Main Menu








Video Mode

Record sound ▼




1. In the main menu, select .
2. Press  to enter the sound recording mode.
3. To record sound, press .
4. To stop recording, press again .
 - The list for the recorded sound files is displayed.
5. To playback a recorded sound file, press . To select a file, press the UP and Down button.
6. To shift from the playback mode to sound recording mode, press the Video button on the top of the camera.
7. To exit playback mode or sound recording mode, and return to the main menu, press .

Playback video/photo ▼

1. In the main menu, select .
2. Press  to enter the playback mode.
3. Press the Up and Down button to select a video or photo for playback.
4. To playback, press .
5. To stop playback, press again .
6. To exit the mode and return to the main menu, press .

Play Game ▼

The camera offers five built-in games.


1. In the main menu, select .
2. Press  to enter the game mode.
3. Press the UP and Down button to select a game.
4. To confirm selection or start a game, press .






Main Menu



Game

5. To exit the game and return to the main menu, press .

Change system settings

1. In the main menu, select .
2. Press  to enter the system setting mode
3. Press the Up and Down button to select a setting option.
4. To confirm selection, press  .
 - You may set audio volume, time and date, and format SD card.






Main Menu






System Settings

To format a SD card




1. In the system setting mode, press the Up and Down button to select  .
2. Press  to confirm the selection.
3. Press and hold  for about 3 seconds.
 - The message prompts whether or not to format the SD card.

Note: Formatting a SD card erases all the stored data.

Transfer files to PC and Webcam Function ▼

1. Use the USB cable to connect the camera to your PC.
 -  is displayed on the camera screen.
2. Press the Up and Down button to select , then press  to confirm.
 - The files from the camera are transferred to the computer.
3. On the computer, the following 4 folders from are displayed.
 - MUSIC folder: store the recorded sound files from the camera.
 - PHOTO folder: store the photos taken from the camera.
 - STICKER folder: store the photos made with a predefined photo frame.
 - VIDEO folder: store the videos recorded from the camera.

Use as Webcam ▼

1. Use the USB cable to connect the camera to your PC.
 -  is displayed on the camera screen.
2. Press the Up and Down button to select , then press  to confirm.
 - Webcam is activated on your PC.
 - You may use the webcam function operated in Windows 7 and Windows 10.

ALL RIGHTS RESERVED, COPYRIGHT
DENVER ELECTRONICS A/S

DENVER[®]
denver-electronics.com

CE



– ENG 09 –

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly. Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately. As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment. All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics