


# Sound Bar User Manual

## Operating Introduction

- a. Place the Soundbar on a flat and solid surface. Alternatively, you can wall mount the Soundbar with the screws provided. You can hear audio through the Soundbar using ONE of the following connections.
  1. Connect to your television using one of the connectors.
    - HDMI-ARC connector on the TV (using an HDMI cable)
    - Optical output connector on the TV (using an optical cable)
    - Headphone jack (using the supplied audio cable with 3.5mm plug)
  2. Connect to a Bluetooth enabled device.
  3. Connect to a USB drive (stick) loaded with music files

- b. Illustration of the Soundbar connectors for different connections

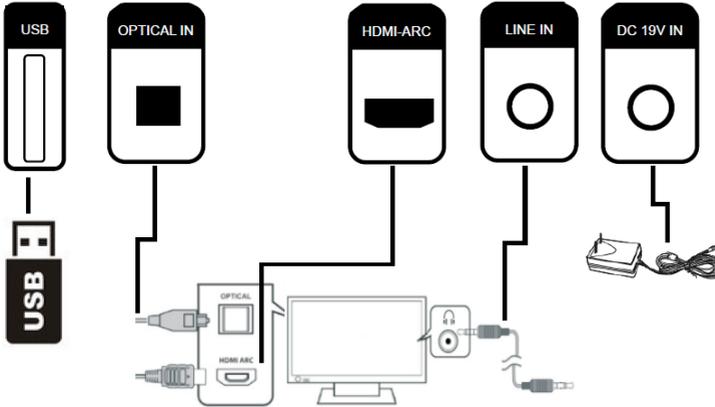

EN	EN
OPTICAL IN	OPTICAL IN
HDMI-ARC	HDMI-ARC
LINE IN	LINE IN
DC 19V IN	DC 19V IN

- c. The control panel on the Soundbar

	<b>EN</b> Hold down <b>⏻/MODE</b> for <b>Power On/Standby</b> .	<b>EN</b> Hold down <b>⏻/MODE</b> for <b>Power On/Standby</b> .
	Press the <b>⏻/MODE</b> button to toggle the sources: <b>Bluetooth -&gt; USB Drive -&gt; Line In -&gt; HDMI-ARC -&gt; Optical In</b>	Press the <b>⏻/MODE</b> button to toggle the sources: <b>Bluetooth -&gt; USB Drive -&gt; Line In -&gt; HDMI-ARC -&gt; Optical In</b>
	Press/Hold down <b>▶II / MUTE</b> for <b>Pause/Play</b> . (USB Drive)	Press/Hold down <b>▶II / MUTE</b> for <b>Pause/Play</b> . (USB Drive)
	Press/Hold down <b>▶II / MUTE</b> for <b>Mute / No Mute</b> . (Line In)	Press/Hold down <b>▶II / MUTE</b> for <b>Mute / No Mute</b> . (Line In)
	Hold down <b>VOL+ /▶I</b> for <b>Volume up</b> .	Hold down <b>VOL+ /▶I</b> for <b>Volume up</b> .
	Press <b>VOL+ /▶I</b> for <b>Next USB Drive Song</b> .	Press <b>VOL+ /▶I</b> for <b>Next USB Drive Song</b> .
	Hold down <b>VOL- /◀I</b> for <b>Volume down</b> .	Hold down <b>VOL- /◀I</b> for <b>Volume down</b> .
Press <b>VOL- /◀I</b> for <b>Previous USB Drive Song</b> .	Press <b>VOL- /◀I</b> for <b>Previous USB Drive Song</b> .	

d. Source selection shown on the LED display

	Line In source
	Bluetooth source
	USB source when connecting to a USB drive. USB source cannot be selected if no USB drive is connected.
	HDMI-ARC source
	Optical In source

**Notes:**

- “bt” (Bluetooth) flashes if the Soundbar is not paired or connected to a Bluetooth device.
- “bt (Bluetooth) lights up if the Soundbar is paired or connected to a Bluetooth device.
- When the Soundbar is switched to standby, the red light is turned on.

e. Remote control buttons



	Switch the product on or to standby
	Mute or restore volume
	Increase volume
	Decrease volume
	Skip to previous audio file during USB play
	Skip to next audio file during USB play
	Start or pause play during USB play
	Repeat audio play during USB play
EQ	Select different preset sound settings
MODE	Select an audio source

Press the EQ button to toggle different preset sound settings shown below.

Display	EQ mode
Eq0	Normal
Eq1	Rock
Eq2	Pop
Eq3	Classic
Eq4	Jazz
Eq5	Country

f. **Importance Notice for soundbar mounting on the wall:**

- 1) Wall- mounted installation must be carried out by qualified personnel only.  
Incorrect assembly can result in severe personal injury and property damage! (If you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing, which may be hidden inside or behind the wall.)
- 2) It is the installer's responsibility to verify and confirm that the wall will safely support the total load of the unit and wall brackets.
- 3) Additional tools (not included) are required for the installation.
- 4) Do not overtighten screws.
- 5) Use an electronic stud finder to check the wall type before drilling and mounting
- 6) The proposed height on the wall is 1.0~1.5meters

**Technical Specification**

Power/Amps: Input:	AC110~240V, 50/60Hz, Output: DC19V, 1.5A
Power consumption:	28.5W
Max output power:	40W
Working temperature:	0~35° C
Bluetooth version:	5.0
Operating frequency range:	2402-2480Mhz
Soundbar measurement:	80cm x 6cm x 6cm
Bluetooth name:	DSB-4010MK2

**Packing List**

- . Sound bar
- . Manual
- . 3.5mm to 3.5MM audio cable
- . Flat head screws (D7.5 \* L25mm) x 2
- . Remote control with batteries
- . Mains Power supply

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

# DENVER®

[www.denver-electronics.com](http://www.denver-electronics.com)



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type DSB-4010MK2 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

[www.denver-electronics.com](http://www.denver-electronics.com) and then click the search ICON on topline of website.

Write modelnumber: DSB-4010MK2. Now enter product page, and red directive is found under downloads/other downloads

Operating Frequency Range: 2402-2480Mhz  
Max Output Power: 40W

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denverelectronics](https://www.facebook.com/denverelectronics)