

DENVER[®]

USER MANUAL


BTS-120









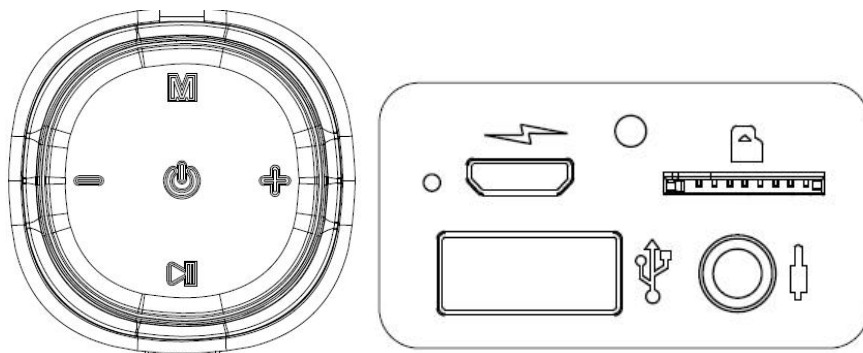


www.facebook.com/denverelectronics

Thank you for choosing our Bluetooth speaker. Before using the product, read this user manual carefully to be familiar with the product for proper use of the product. Keep this manual in a safe place for future reference.


Product overview:





	<p>Power on and off</p>
	<p>Select a source (Bluetooth , FM , Micro SD card and USB flash drive)</p>
	<p>Increase volume/skip to a next track</p>
	<p>Decrease volume/skip to a previous track</p>
	<p>Start/pause music playback/answer a phone call</p>
	<p>Micro USB charging port</p>
	<p>Micro SD card slot (support up to 32GB)</p>
	<p>Standard USB port to play music</p>
	<p>Aux input connector</p>



Use

Bluetooth mode



Press  to turn the product on, and Bluetooth mode is activated.

On your mobile phone, activate Bluetooth and search for Bluetooth devices then select “BTS-120” to pair your mobile with this product. If a password is prompted for connection, input “0000”. For details on Bluetooth connection, refer to the user manual of your mobile phone.


After pairing, music from your mobile phone can be streamed to this product. Start music playback on your mobile phone, use  /  buttons to adjust volume and select next or previous track.




When a phone call comes in, press  to answer. To end the call, press  again, and Bluetooth speaker resumes music playback.

Music playback from USB

Connect a USB flash drive, and press  to enter USB mode. Music playback will start. Press  to pause or resume music playback.


Aux-in mode


Press  to turn the product on. Using an audio cable, connect the Aux input connector on the product to an external audio device (e.g. mobile phone, MP3 player or PC). Then music from the external audio device can be played through the speaker of the product.

During playback, press and hold  /  to adjust volume. To switch to other source, press .


FM mode

Press  to turn the product on. Press  until the prompt for radio is heard. For better radio signal reception, connect an audio cable as an FM antenna.

Press  to search for all FM radio stations. After the searching completes, press  /

 to select a radio station.

True wireless stereo (TWS) via Bluetooth for two speakers

1. Turn two Bluetooth speakers on. Bluetooth mode is activated. The LED on the top of the Bluetooth speaker flashes.
2. Make sure Bluetooth on your mobile phone and other Bluetooth device is deactivated. Press and hold  on either of the Bluetooth speaker. “Didi” sound is heard, then “Dingdong” sound is heard to indicate the two Bluetooth speakers are paired.
3. On your mobile phone, activate Bluetooth and search for Bluetooth devices.
4. Select “BTS-120” to pair with the Bluetooth speakers.
5. “Dingdong” sound is heard to indicate your mobile phone is paired with the Bluetooth speakers. Then music from your mobile phone can be streamed to the two Bluetooth speakers.

Note: If a password is prompted for Bluetooth connection, input “0000” on your mobile phone.

Charging

Turn the product off. Then using a USB cable, connect the Micro USB port on the product to a computer or power adapter. The LED indicator turns red during charging. The LED indicator turns off after fully charged.

Notes:

Do not let children play with the product.

Do not throw the product into fire.

Do not use the product in very humid or high/low temperature environments. Product performance will decrease when used in such environments.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type BTS-120 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: BTS-120. Now enter product page, and red directive is found under downloads/other downloads.

Operating Frequency Range: 2402MHz~2480MHz

Max Output Power: 42dBm

FM frequency: 87.5~108.0MHz

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics