 


DENVER[®]

SMART TV with DVB-T2/S2/DVB-C and H.265/HEVC Support

Model: LDS-4075

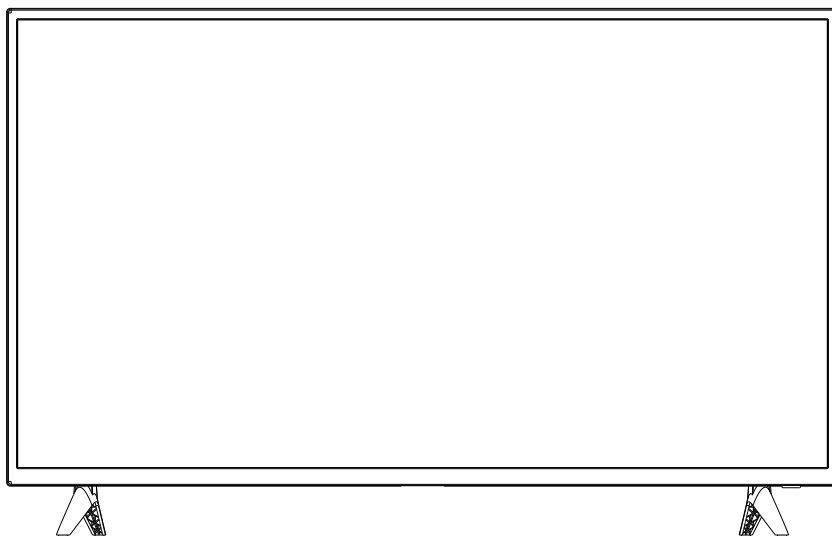

Quick start guide

The full user manual can be found by searching for this model number at www.denver-electronics.com.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS-READ CAREFULLY BEFORE USE.

Take note of the following safety information which appears on the back of the TV.



CAUTION: TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY SCREWS AND COVERING, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates the important information in the accompanied operating instructions. Always read this information carefully.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read and keep these instructions.

- Do not use this product near water.
- Clean the product only with a slightly damp cloth.
- Do not block any ventilation openings on the product.
- Install this product in accordance with the supplied Quick Start Guide and the User Guide.
- Protect the power cable from being walked on or pinched, particularly at plugs and the point where it exits from the TV.
- Do not allow the power cable to overhang the edge of a table.
- Unplug the product during lightning storms or when unused for a long period of time.



WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED NEAR THE TV.

NOTE: No naked flames such as candles should be placed near the TV.

Smell/odor from TV

 
New televisions may emit an unusual smell or odor when first turned on.

Due to the manufacturing process of components, televisions and other electronic products can have parts that may emit a smell after the product is first turned on and warms up.

The smell will usually dissipate within a few days of use and does not return.

This is normal and occurs with many electronic products. Please ensure there is sufficient ventilation around the TV and in the room and the odor will dissipate.

Front View

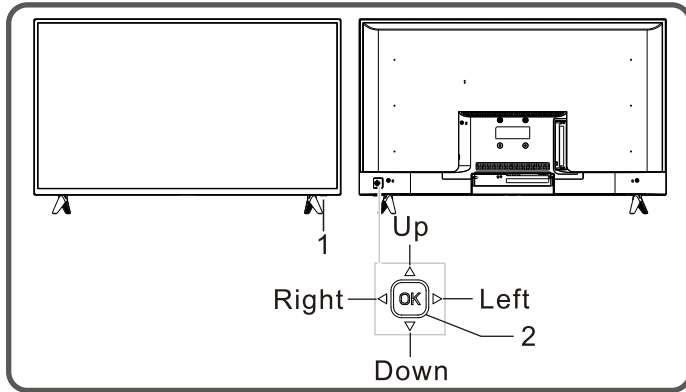

1. Power LED indicator and remote receiving window.
2. Rocker button combination key:

Power on or standby with **OK** rocker:

- ①. When Plugged power cord into the electrical socket, you can press **OK** rocker to turn on the TV.
- ②. In power on state, press **OK** rocker to display the function menu, then move rocker **Left/Right** to select \odot and press **OK** rocker to switch to standby mode.

After turn on the TV, Press **OK** Rocker:

- ①. In non-OSD menu operation, press **OK** rocker to display the function menu which includes 4 sorts.
- ②. During the menu operation, press **OK** rocker to confirm the operation and the function is the same as [**OK**] key on the remote control.

Move rocker **Left/Right**:

 
- ①. In non-OSD menu operation, move rocker **Left/Right** to decrease/increase the volume, the function is the same as [**VOL-**]/[**VOL+**] key on the remote control.
- ②. In OSD menu operation, move rocker **Left/Right** to adjust the analog value of selected item, the function is the same as [**◀**]/[**▶**] key on the remote control.

Move rocker **Up/Down**:

- ①. In non-OSD menu operation, move rocker **Up/Down** to select the channel, the function is the same as [**CH▲**]/[**CH▼**] key on the remote control.
- ②. In OSD menu operation, move rocker **Up/Down** to select the adjustment items, the function is the same as [**▲**]/[**▼**] key on the remote control.

Note: Different models may have different appearances; please refer to the actual device.

Connections

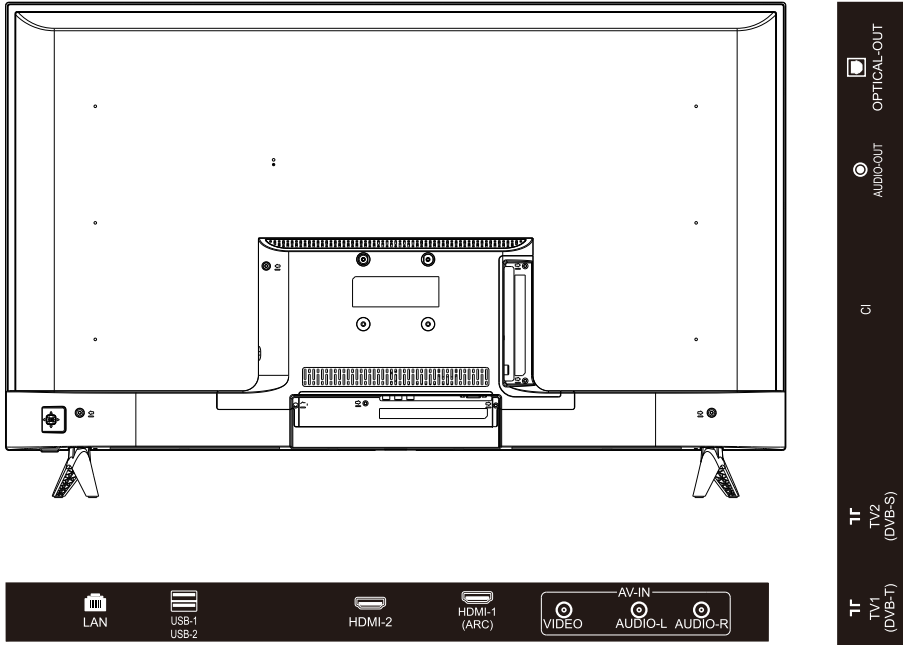

LAN(RJ45): RJ45 plug for connecting to external modem or network access equipment.

HDMI: Connect DVD/Blu-ray player or other equipment.

TV2(DVB-S) :Connect a Satellite signal.

TV1 (DVB-T) :To connect to the aerial socket on the wall with the RF coaxial cable.

Common Interface: CI slot.

AV: Connect it to the audio & video output terminal of DVD.

USB: Connect to USB device for multimedia .

Audio out :connect it to other audio equipment.

OPTICAL-OUT : Connect it to an external digital audio device

Installation of TV channels

This TV comes with a triple digital tuner:

- used for digital terrestrial TV: DVB-T2 - H.265 HEVC;
- used for digital cable TV: DVB-C;
- used for digital satellite TV: DVB-S2.

The TV also has an analogue tuner.

When you start the TV for the first time, first time setup will appear. You can select a language and country by using the left/right arrow buttons.

After making the settings, press the OK button. The auto tuning menu screen appears.

LANGUAGE SETTINGS

Confirm your language setting

- Deutsch
- ✓ English
- Español
- Français
- Polski
- Português
- Русский

Select a tuning mode: DTV (digital TV), ATV (analogue TV) or both.

Then select a digital tuning mode: DVB-T for terrestrial (if you have own antenna on the roof), DVB-C (if you have digital cable TV, and you need to know the DVB-C information from your cable provider) or DVB-S (if you have a satellite dish).

If selecting DVB-T, you can just make an auto scan, and it will scan all available channels.

If selecting DVB-C, you can use either full scan or network scan (some countries demand this), and input Network ID, Frequency, Symbol rate and LCN on/ off.

If selecting DVB-S, you have to know what satellite your dish is pointing towards, and select this option in the setup menu.

PROGRAMME TUNING

 
Select programme tuning modes

- ✓ DVBT
- DVBC
- DVBS
- Skip

The TV has a common interface+ input. This allows you to insert a CA module from your TV/cable provider to watch pay-to-view channels and selectable channels outside of your package.

Read the instructions shown on the back of the TV on how to insert a CA module.

Streaming

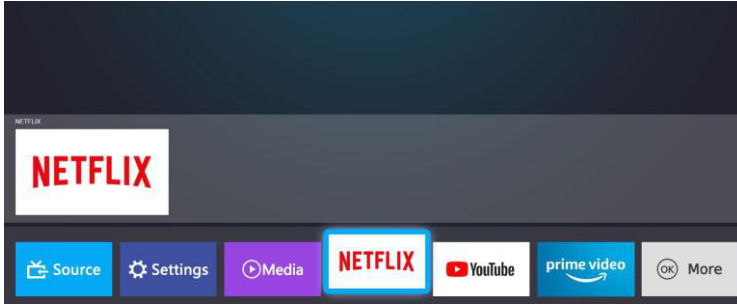

Press **⬆** button on the remote control to display the home menu. Use the arrow buttons to select an item or app on the home menu then press **OK**. You may also press the hotkey on the remote control to access the desired app directly.

Network Settings

GET CONNECTED

Connect your SmartTV to the internet to enjoy great services like Netflix to watch TV shows and movies.

- ✓ Wired
- Wifi
- Skip

Select wired, wifi or skip this step.

Attaching the stand

The pictures below are only for reference.

1. The supplied accessories for attaching the stand to the TV



Before installing the stand, please check that you have all of the parts and that there is no visible damage. If a part is missing or appears damaged, please contact customer service.



TV set



Stand

 


Screws(supplied)
2xM4x15

2. How to install the stand?

Place the TV face down on a soft and flat surface (e.g. blanket, foam, cloth, etc.) to prevent any damage to the TV.


Attach the stand to the bottom of the TV as shown below.

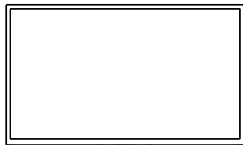

Before you put on the stand, please make sure the direction is correct as shown below.

When you are putting on the stand, please make sure the neck of the TV set is in the correct position and attached tightly.

 If you do not attach the stand correctly, it will make the TV unstable and may tip over.



Secure the stand with the supplied screws.

 


When attaching the stand, make sure the screws are attached tightly.


If the screws do not attach tightly, it will lead the TV to be unstable or may even tip over.

3. Warnings.

a. Do not tilt the stand forward or backward as shown below. Doing so may damage the stand.

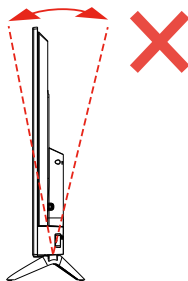

 b. Do not tilt the stand leftward or rightward as shown below. Doing so may damage the stand.

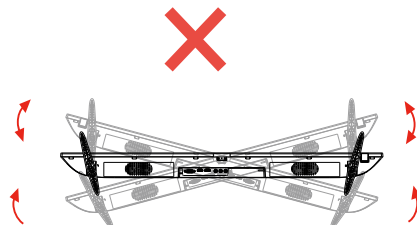

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COP YR:JGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S, declares that this model DENVER LDS-4075 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the Declaration of Conformity may be obtained at: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: LDS-4075. Now enter product page, and red directive is found under downloads/other downloads

Operating Frequency Range: (VHF)174-230MHz; (UHF)474-862MHz

Max Output Power: 55W

WI-FI Frequency: 2.4GHZ ~ 2.4835 GHz

DENVER ELECTRONICS A/S

Omega 5A, Soeflen

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics