

DENVER®

User Manual

ENGLISH



Model: LED-3279

To obtain the best performance and safety, please read this manual carefully.
Please keep this manual for future reference.

CONTENTS

SAFETY INSTRUCTIONS	2
EXTERNAL SCHEMATIC AND INSTALLATION	3
Antenna/Cable Connection	4
REMOTE CONTROLLER	5
SOURCE	7
BASIC OPERATION	7
First Time Installation	7
Setup	9
Picture	12
Sound	14
Channel	16
Time	23
Lock	25
Hotel	27
MULTIMEDIA OPERATION	28
Movie	28
Music	29
Photo	30
Text	31

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS - PLEASE READ CAREFULLY BEFORE USE.

The following safety instructions are located on the back of the TV.



DANGER OF ELECTRIC SHOCK! NEVER REMOVE THE SCREWS OF THE COVER. NO USER-SERVICEABLE PARTS IN THE DEVICE. REPAIR ONLY BY QUALIFIED SERVICE PERSONNEL.



The exclamation mark in the equilateral triangle indicates important operating and maintenance instructions



The flash in the equilateral triangle indicates high voltage in the device, which can lead to electric shock

Please follow the instructions below:

- ❖ Do not use this TV near water.
- ❖ Only clean the device with a damp cloth.
- ❖ Do not block any ventilation openings.
- ❖ Set up the television in accordance with the supplied quick guide and these operating instructions.
- ❖ Lay the power cable so that it cannot be stepped on or pinched. Pay special attention to the plug and the point at which the cable is led out of the television.
- ❖ Do not let the power cord hang over the edge of the table.
- ❖ Disconnect the TV from the mains if there is a thunderstorm or if it is not used for a long period



WARNING! EXPOSE THE TELEVISION TO AVOID FIRE OR ELECTRIC SHOCK OR RAIN OR MOISTURE. THE TELEVISION SHOULD NEVER BE EXPOSED TO SPLASH / DRIP WATER AND NO OBJECTS FILLED WITH LIQUID ON THE TELEVISION

NOTE: Open flames (such as candles) should never be placed on the TV

 
Smells from the TV

New TVs can cause unusual smells when they are switched on for the first time.

Due to the manufacturing process of the components, the television and other electronic products may have parts that produce odors when they are first turned on and warmed up. The smell usually disappears after a few days of use and does not return.

This is normal and occurs with many electronic devices. Ensure that there is sufficient ventilation in and around the device so that the smell can disappear.

EXTERNAL SCHEMATIC AND INSTALLATION

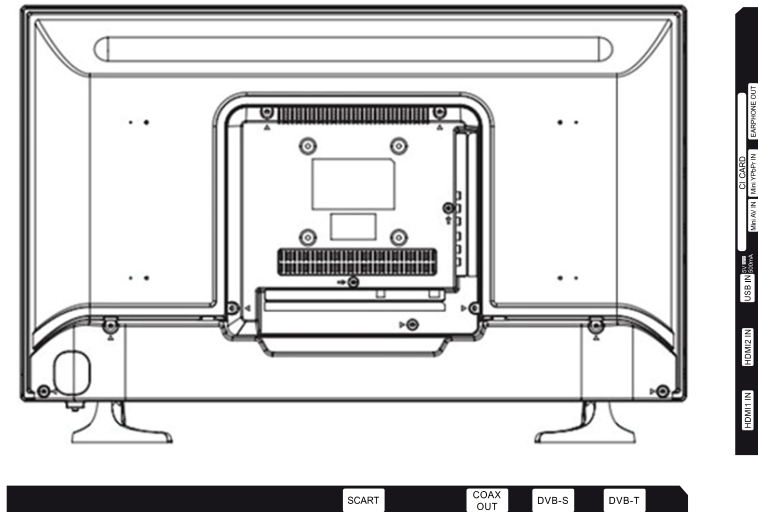

SCART: AV input from a device like VCR

Coax Out: Digital Audio Output from TV

DVB-S: Connect RF signal from satellite/DVB-S

DVB-T: Connect Analog/ATV signal or Digital/ DVB-T or DVB-C signal

HDMI1/HDMI2: Connect HDMI input signal from signal source such as DVD

USB: USB support multimedia playback and software upgrade

CI Slot: Insert CI card for Digital TV

 
Mini AV In: Mini AV input from video playback device

Mini YPbPr In: Mini component input from a video playback device

Earphone Out: Audio output from TV through Earphone

EXTERNAL SCHEMATIC AND INSTALLATION

Antenna/Cable Connection

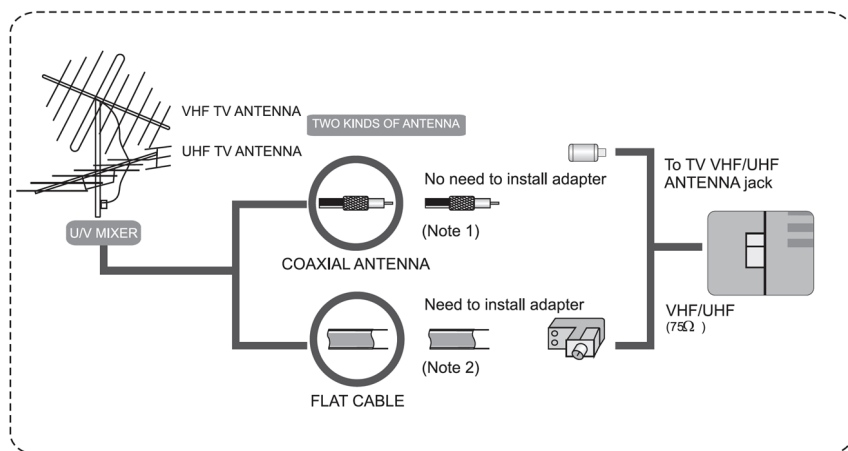


- Connect the Plug of the antenna cable or CATV cable to the cable (not provided with this unit), then connect to the antenna input of this unit for best reception.
- If the antenna cable in your home is other than the above two or you have problems in installing the antenna, please contact your dealer.

Notes:


- Current outdoor antenna or cable TV use 75 OHM coaxial antenna cable. For better reception suggest this kind of antenna cable
- Flat cable or indoor antenna are old designed, the reception may not be good enough

 REMOTE CONTROLLER

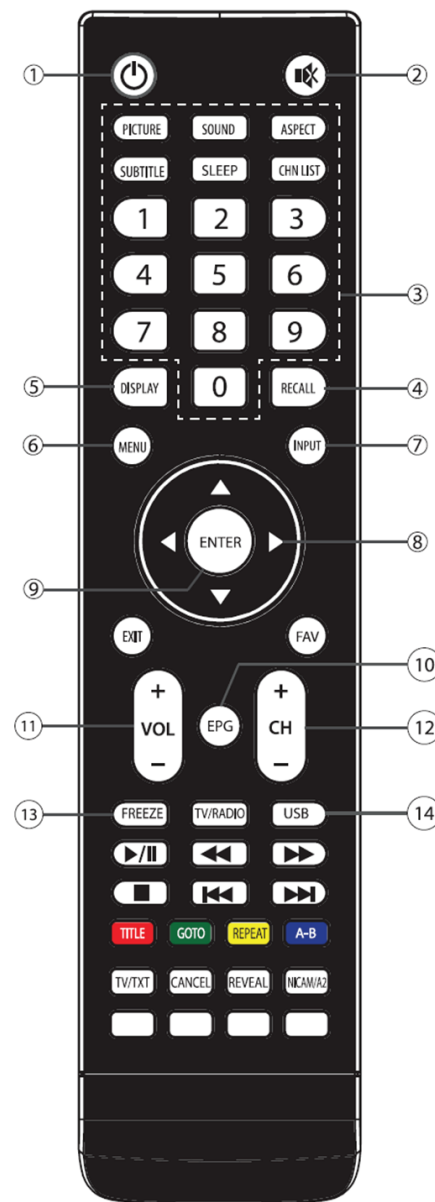

- POWER (⏻)**
Press to turn the TV on or off (Standby).
- MUTE (🔇)**
Press to mute or restore the volume.
- PROGRAM SELECT (0-9)**
Press to select the TV channel directly.
- RECALL**
Press to return to the previously viewed channel/ Press to back in previous state (Optional).
- DISPLAY**
Press to display relevant information such as screen format, source, etc.
- MENU**
Press to enter or exit from the TV menu.
- INPUT**
Press to select the input source mode.
- UP/DOWN/LEFT/RIGHT Cursor (⬆️/⬇️/⬅️/➡️)**
Navigate the menu.
- ENTER**
Press to confirm and execute the selection.
- EPG**
Display the EPG interface in DTV mode
- VOLUME UP/DOWN (V+/V-)**
Press to adjust the volume.
- PROGRAM UP/DOWN (CH+/CH-)**
Press to select previous/ next channel.
- FREEZE**
Press to hold/ freeze the current screen without update & change. Press again to release the freeze state (RF Source only.)
- USB**
Press to select USB mode directly (Optional).

 REMOTE CONTROLLER

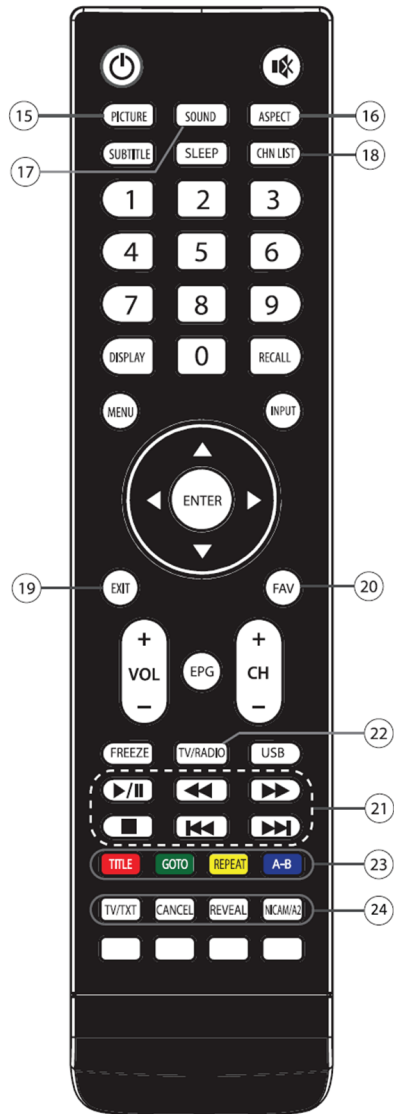

- 15. Picture Mode (P.M.)**
Press to select the desired picture mode.
- 16. ASPECT**
Press to select the desired picture aspect ratio.
- 17. Sound Mode (S.M.)**
Press to select the desired sound mode.
- 18. CHN LIST**
Press to go to channel list.
- 19. EXIT**
Press to exit default browser.
- 20. FAV**
Press to view your favorite channel list.
- 21. USB Play Control Buttons ***
Play & Pause (⏮)
Press to stop the running media file.
Stop (■)
Press the stop button to exit full-screen playback, access to the preview.
Fast Backward (⏮)
Press to fast reverse.
Fast Forward (⏭)
Press to fast forward.
Previous (⏮)
Press to play the previous file.
Next (⏭)
Press to play the next file.
- 22. TV/RADIO**
Switch between TV and Radio
- 23. Color Buttons (R,G,Y,B)**
TITLE: Shows the title of the media
GOTO: Go to the desired time
REPEAT: Repeat the media playback
A-B: A-B Repeat function enables playback to a specific section repeatedly by setting the start point (A) and end point (B)
- 24. Teletext Keys**
TV/TXT: Load or exit teletext menu
CANCEL: Back to TV Program while searching a teletext page
REVEAL: Display or hide hidden information
NICAM/A2: Select the desired sound playback depending on the channel

SOURCE



Press **INPUT** button to display the input source list
Press **▼ / ▲** or **OK** button to select the input source you want
Press **OK** button to enter the input source
Press **EXIT** button to quit

BASIC OPERATION

First Time Installation

Connect an RF cable from the TV's input called "RF-In" and to your TV Aerial socket.

 
Select Language

Press **◀ / ▶** button to select the language to be used for menus and message.

Select Country

Press **▼ / ▲** button to highlight country menu.



Press **◀ / ▶** button to select the country you want to

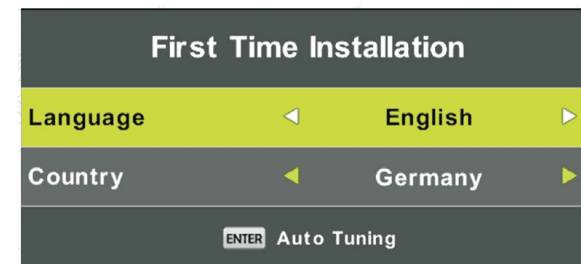

BASIC OPERATION

Auto Tuning

  First tuning ATV, press Menu and left arrow button to skip ATV tuning,
Second tuning DTV, press Menu and left arrow button to skip DT

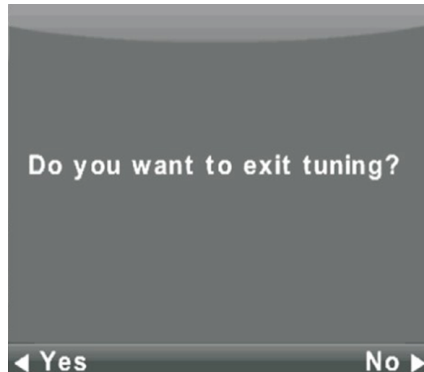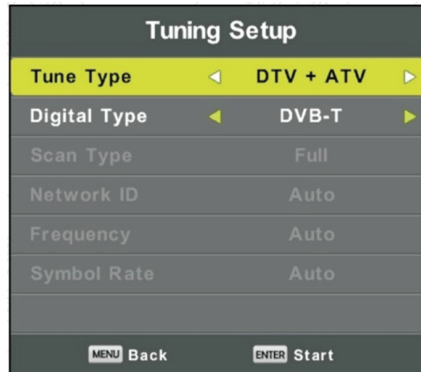

BASIC OPERATION

Setup

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **SETUP** in the main menu.



Press ▼ / ▲ button to select the option that you want to adjust in the **SETUP** menu.

Press **Enter** button to adjust.

After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Language

Select an OSD menu language can be displayed. Default English is selected as menu language.

Press ▼ / ▲ / ◀ / ▶ button to select Menu Language.



TT Language

Press ▼ / ▲ button to select TT Language, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ / ◀ / ▶ button to select TT language.

BASIC OPERATION

Audio Languages

Press ▼ / ▲ button to select Audio Languages, then press **Enter** button to enter sub-menu.

Press ◀ / ▶ button to select the primary of Audio Languages.

Press ▼ / ▲ / ◀ / ▶ button to select the Audio Languages.



Subtitle Language

Press ▼ / ▲ button to select Subtitle Language, then press **Enter** button to enter sub-menu.

Press ◀ / ▶ button to select the primary of Subtitle Language.

Press ▼ / ▲ / ◀ / ▶ button to select the Subtitle Language.



Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired, then press **Enter** button to select On or Off.

PVR File System

Press ▼ / ▲ button to select PVR File System, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ button to select Check PVR File System,

Then press **Enter** button to enter, it will check the USB speed.



BASIC OPERATION

Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ button to select aspect ratio. (Available options are: Auto, 4:3, 16:9, Zoom1, Zoom2)



Blue Screen

Press ▼ / ▲ button to select Blue Screen, then press **Enter** button to select On or Off.

First Time Installation

Press ▼ / ▲ button to select First time installation, then press **Enter** button to enter.

Reset

Press ▼ / ▲ button to select Reset, then press **Enter** button to enter sub-menu.

Software Update (USB)

Press ▼ / ▲ button to select Software Update (USB), plug your USB device in the USB slot,

then press **Enter** button to update the right software.

HDMI CEC

Press ▼ / ▲ button to select HDMI CEC, then press **Enter** button to enter the sub-menu.

HDMI CEC Press ◀ / ▶ button to turn the HDMI CEC On or Off.

HDMI ARC Press ◀ / ▶ button to turn the HDMI ARC On or Off.

Auto Standby Press ◀ / ▶ button to turn the Auto Standby On or Off.

Device List Press **Enter** button to open the main menu of device.

 


BASIC OPERATION

Picture

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **PICTURE** in the main menu

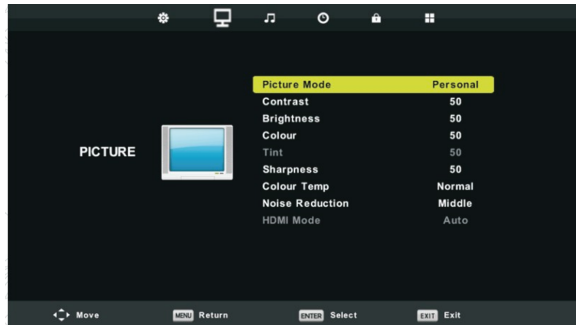

Press ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.

Press **OK** button to adjust.

After finishing your adjustment, Press **MENU** button to save and return back to the previous menu

Picture Mode

Press ▼ / ▲ button to select Picture Mode, then press **OK** button to enter sub-menu.

You can change the value of contrast, brightness, color, sharpness and tint when the picture is in

Personal mode.

TIPS: You can press PMODE button to change the Picture Mode directly



BASIC OPERATION

Contrast/ Brightness/ Color/ Tint / Sharpness

Press ▼ / ▲ button to select option, then press ◀ / ▶ button to adjust.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Brightness Adjust the optical fiber output of the entire picture, it will affect dark region of the picture.

Color Adjust the saturation of the picture based on your own liking

Tint Use in compensating color changed with the transmission in the NTSC code.

Sharpness Adjust the peaking in the detail of the picture

 
Color Temp

Change overall color cast of the picture

Press ▼ / ▲ button to select Color Temperature, then press **OK** button to enter sub-menu.

Press ▼ / ▲ button to select Color Temperature. (Available Picture mode: Cold, Normal, Warm).

Change the value of red, green and blue when the color temperature is in **User** mode

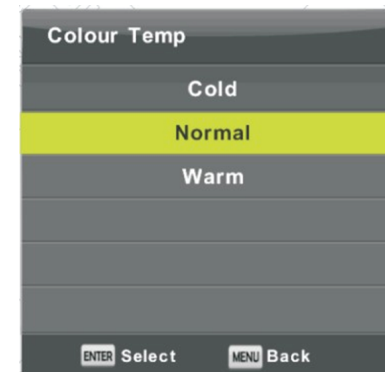

Cold Increase the blue tone for the white.

Normal Set to default color temperature.

 
Warm Increase the red color for the white

Noise Reduction

Filter out and reduces the image noise to improve picture quality.

Press ▼ / ▲ button to select Noise Reduction, then press **OK** button to enter sub-menu.

BASIC OPERATION

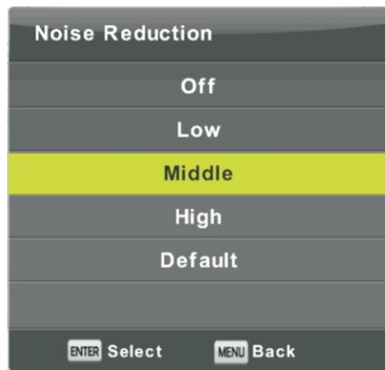

Off Select to turn off video noise detection.

Low Detect and reduce low video noise.

Middle Detect and reduce moderate video noise.

 
High Detect and reduce enhanced video noise.

Default Set as Default.

Sound

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SOUND** in the main menu

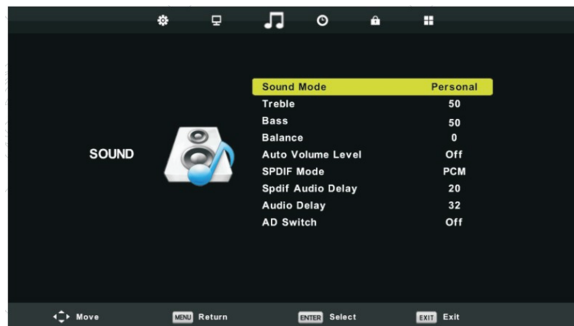

Press **▼ / ▲** button to select the option that you want to adjust in the **SOUND** menu.2.

Press **Enter** button to adjust.

 
After finishing your adjustment, Press **Enter** button to save and return to the previous menu

BASIC OPERATION

Sound Mode

Press **▼ / ▲** button to select Sound Mode, then press **Enter** button to enter sub-menu.

Press **▼ / ▲** button to select.

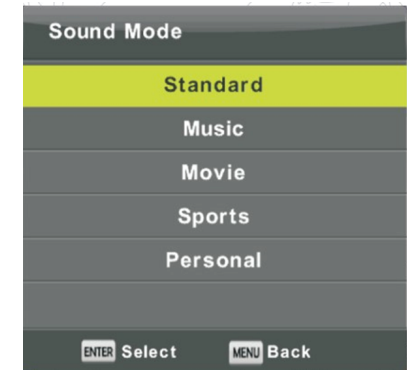

You can change the value of Treble and Bass when the sound is in Personal mode.

TIPS: You can press **SMODE** button on the remote control to change the Sound Mode directly.

Standard Produces a balanced sound in all environments.

Music Preserves the original sound. Good for musical programs.

Movie Enhances treble and bass for a rich sound experience.

Sports Enhances vocals for sports.

Personal Select to customize sound settings

Note: The treble and bass are only available in **Personal** mode, you can adjust them as you like.

Balance

Press **▼ / ▲** button to select option, Press **◀ / ▶** button to adjust.

Auto Volume level

Press **▼ / ▲** button to select Auto Volume Level, then press **◀ / ▶** button to select On or Off.

SPDIF Mode

Press **▼ / ▲** button to select SPDIF Mode, then press **◀ / ▶** button to select Off / PCM / Auto

AD Switch

Press **▼ / ▲** button to select AD Switch, then press **◀ / ▶** button to select On or Off.

Amblyopia function for the blind, the tracks will be mixed describe the current screen .

It needs code stream to support.

Note:

Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.

Auto Volume: This item is used for reducing the difference between channel and program's volume automatically.

BASIC OPERATION

Channel

Press **MENU** button to display the main menu.

 
Press **◀ / ▶** button to select **CHANNEL** in the main menu



1. Press **▼ / ▲** button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu

Auto Tuning

Press **▼ / ▲** button to select Auto Tuning, then press **Enter/▶** button to enter

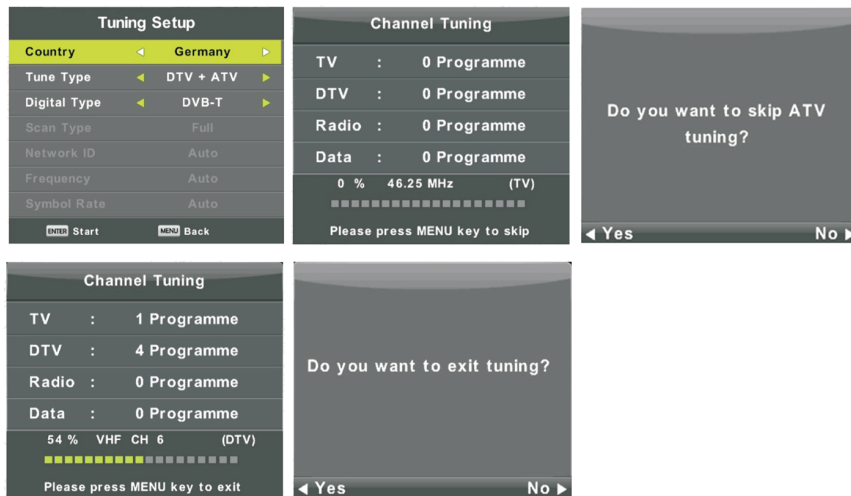

BASIC OPERATION

ATV Manual Tuning

Current CH>

Set the channel number.

Color System>

Select the color system

Sound System>

Select the Sound system

Fine-Tune>

Adjust the frequency of the channel finely.
(Available System: AUTO, PAL , SECAM)

Search>

Start searching channel

 


DTV

Press **▼ / ▲** button to select Manual Tuning, then press **Enter** button to enter sub-menu.

Press **◀ / ▶** button to select channel, then press **Enter** button to search program.

Manual Tuning

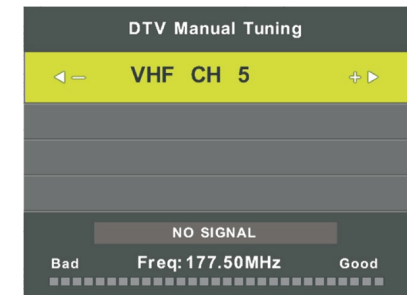


Program Edit

Press **▼ / ▲** button to select Program Edit, then press **Enter** button to enter sub-menu

The three **● ● ●** colored key is the shortcut key for programming the channel

 First press **▼ / ▲** to highlight the channel you want to select, then:

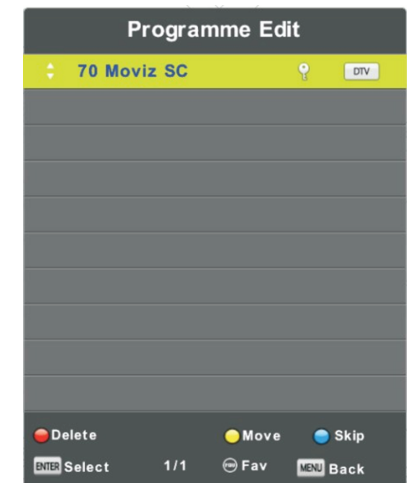


BASIC OPERATION

Press the **Red** button to delete the program in the list.
 Press the **Yellow** button to move the channel in favorite list.
 Press the **Blue** button to skip the selected channel.
 Press Fav button to add or remove the channel to your favorite list.
 (Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Schedule List

 Press **▼ / ▲** button to select Schedule List, then press **Enter** button to enter sub-menu.
 It is available in source

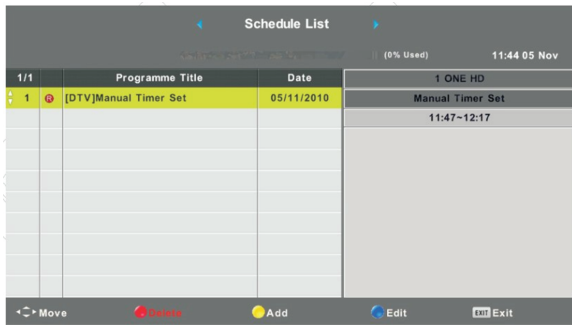


Press the **YELLOW** button to enter the interface below:




When the time appointment is conflict, it will produce a warning message:

 BASIC OPERATION

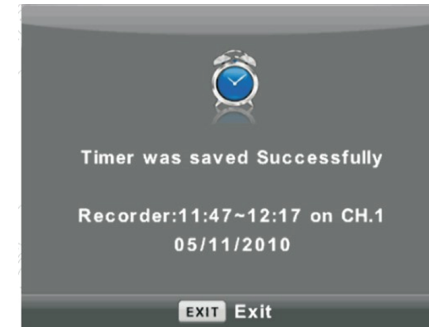

Signal Information

 Press **▼ / ▲** button to select **Signal Information**, press the **Enter** button to see the detail information about the signal. Only available when there is signal in DTV.

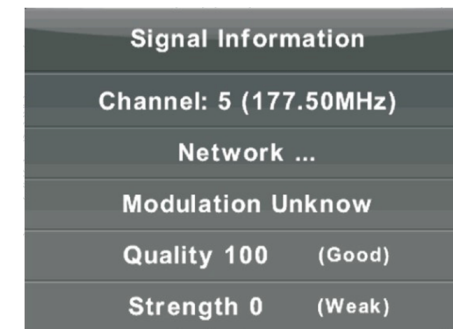


The CHANNEL List in Satellite Source



BASIC OPERATION

Auto Tuning

 Press ▼ / ▲ button to select Auto Tuning, then press **Enter/▶** button to enter

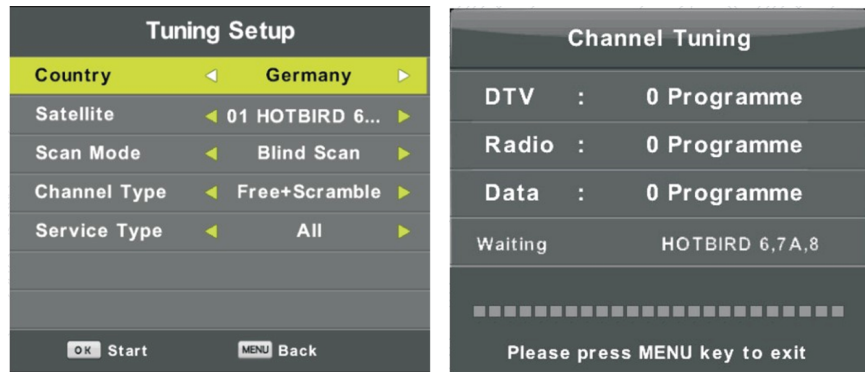

Dish Setup

Press ▼ / ▲ button to select Dish Setup, and then press **Enter/▶** button to enter.

 
Press MENU button to call out the main menu.

Highlight "Channel" using navigation buttons and press OK to enter it.

Then highlight "Dish Setup" and press OK to enter it.

Press LEFT/RIGHT navigation button to highlight Left, Middle or Right column.

Press EXIT button to return.

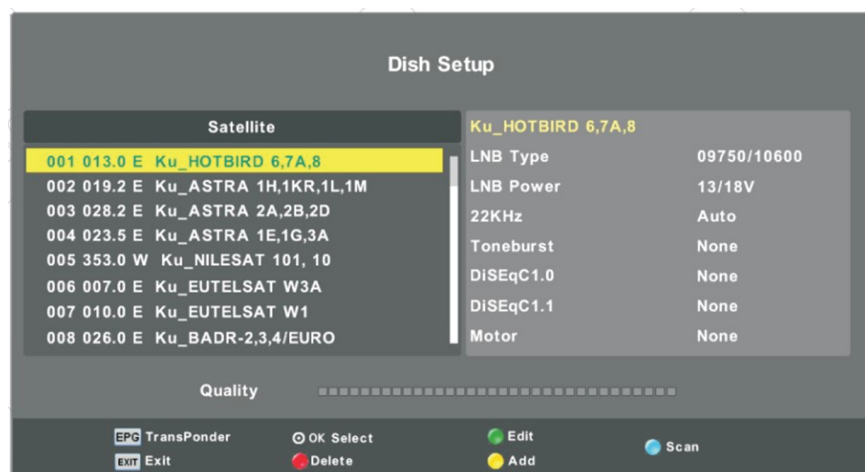

BASIC OPERATION

A. When the "Satellite" column is highlighted:

(1) Press **YELLOW** button to enter Add menu.

Satellite Name

Press RIGHT navigation button to enter rename page.

Use navigation buttons to complete a new name.

Longitude Direction

Press LEFT/RIGHT navigation button to select desired option.

Longitude Angle

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Band

Press LEFT/RIGHT navigation button to select desired option.

(2) Press **GREEN** button on remote control to enter **Edit** menu.

The operations of Edit menu are the same as Add menu.

(3) Press **BLUE** button on remote control to enter Scan menu.

Press UP/DOWN navigation button to highlighted desired item.

Press RIGHT navigation button to select desired Scan Mode,

Channel Type and Service Type.

(4) Press **RED** button to delete

Press **EPG** button to switch satellite and Transponder.

B. When the "Transponder" (Middle) column is highlighted:

(1) Press **YELLOW** button on remote control to enter Add menu.

Frequency

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Symbol (ks/s)

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Polarity

Press LEFT/RIGHT navigation button to select desired option

(2) Press **GREEN** button on remote control to enter Edit menu

The operations of Edit menu are the same with Add menu.

(3) Press **BLUE** button on remote control to enter Scan menu.

Press UP/DOWN navigation button to highlighted desired item.

Press LEFT/RIGHT navigation button to select desired Scan Mode, Channel Type and Service Type

BASIC OPERATION

C. When the “Ku_ASTRA...” (Right) column is highlighted:

LNB (Low Noise Block) Type

Press LEFT/RIGHT navigation button to enter submenu. Then use UP/DOWN navigation button to select desired option.

LNB Power

Press LEFT/RIGHT navigation button to select desired option.

22 kHz

Press LEFT/RIGHT navigation button to select desired option.

Toneburst

Press LEFT/RIGHT navigation button to select desired option.

DisEqc1.0 (Digital Satellite Equipment Control)

Press LEFT/RIGHT navigation button to select desired option.

DisEqc1.1

Press LEFT/RIGHT navigation button to select desired option.

Motor

Press LEFT/RIGHT navigation button to select desired option

EPG

Press EPG in the remote control to record the programs.

7 Day TV GUIDE			
12:00 - 12:59	05 Nov 2010	Sports	Age 09
Another high octane hour of ANDRA Drag Racing only on ONE. The Rocket Allstars fire up at the Sydney Dragway for another action packed Friday Night on the quarter mile. #bJ(¶◊◊ Ten]w TD3C4 yÿÿheTEDU,ii(UiElyXJkfv\$y\$@W3#rli)VTC333X3 ◊T◊◊◊◊◊ [phkr] ~-~]tkg]¶			
05 Nov 2010 12:03:58		05 Nov 2010	
1 ONE HD	12:00-12:59	Drag Racing: ANDRA Pro Series	Now
2 AFD0, 4:3	12:59-15:00	Rugby: Grand Slam Tour 2009	Next
3 AFD1, 16:9	15:00-15:30	Sports Tonight Late	
4 AFD1, 4:3	15:30-16:01	MVP	
5 AFD2, 16:9	16:01-16:31	Real NBA	
6 AFD2, 4:3	16:31-17:01	Omnisport	
7 AFD3, 16:9	17:01-20:00	Football: Arsenal TV	
8 AFD3, 4:3	20:00-21:00	Football: Bundesliga Weekly Highlights	
Record Remind Prev Day Next Day Move View Info Details EXIT Exit			

Press UP/DOWN navigation button to select preferred program.

Press LEFT/RIGHT navigation button to switch between left column and right column.

When a program is highlighted (cursor moved to Right column):

Press **RED** button to record program.

Press **GREEN** button repeatedly to set a reminder.

Press **YELLOW** button to display program guide of previous day.

Press **BLUE** button to display program guide of next day.

BASIC OPERATION

Time

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **TIME** in the main menu.



Press ▼ / ▲ button to select the option that you want to adjust in the **TIME** menu.2.

Press **Enter** button to adjust.

 
After finishing your adjustment, Press **Enter** button to save and return to the previous menu

Off Time Press ◀ / ▶ button to select On/Off

On Time Press ◀ / ▶ button to select On/Off


Time Zone Press ▼ / ▲ button to select Time Zone, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ / ◀ / ▶ button to select time zone

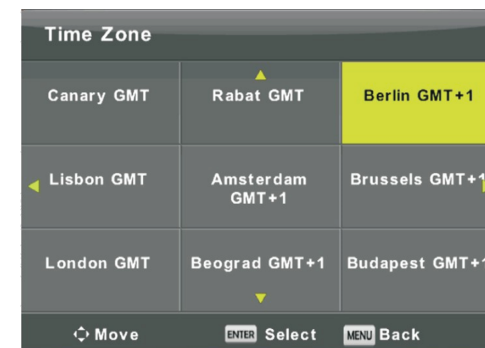

BASIC OPERATION

 Sleep Timer

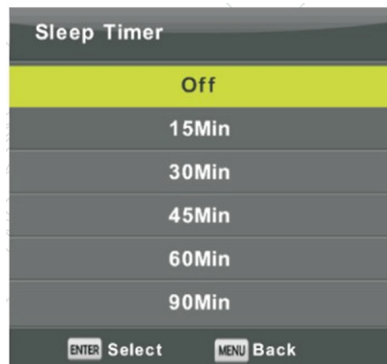

Press ▼ / ▲ button to select Sleep Timer, then press **Enter** button to enter sub-menu.
Press ▼ / ▲ button to select.

(Available options are:
Off, 10min, 20min, 30min, 60min, 90min,
120min, 180min, 240min).

Auto Standby



Press ▼ / ▲ button to select Auto Standby, then press **ENTER** button to enter sub-menu

Press ▼ / ▲ button to select

Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically. If you do any operation, it will reset time.

OSD Timer



Press ▼ / ▲ button to select OSD Timer, then press **ENTER** button to enter sub-menu

Press ▼ / ▲ button to select

BASIC OPERATION

Lock

Press **MENU** button to display the main menu.

 
Press ◀ / ▶ button to select **Lock** in the main menu



Press ▼ / ▲ button to select the option that you want to adjust in the **LOCK** menu.

Press **Enter**/◀ / ▶ button to adjust.

After finishing your adjustment, Press **MENU** button to return back to the previous menu

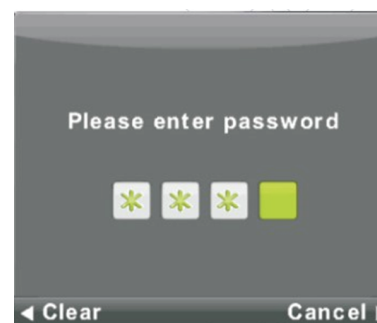

System Lock

Press ▼ / ▲ button to select System Lock, Then press **ENTER** button to make following four options valid.

Default Password is 0000, if you forget what you set, please call service center.

 


Set Password

Press ▼ / ▲ button to select Set Password, then press **Enter** button to enter sub-menu to set new password.

BASIC OPERATION

Channel Lock

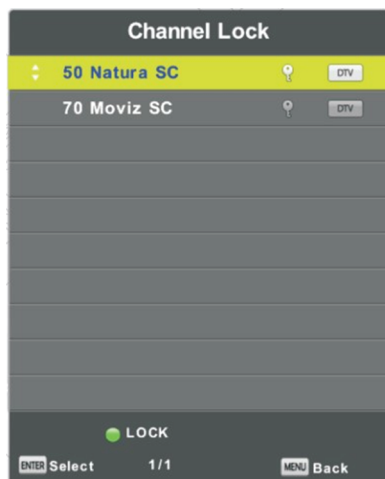

Press ▼ / ▲ button to select Channel Lock
then press **Enter** button to enter sub-menu to select.
Press **GREEN** button to lock or unlock the channel.

Parental Guidance



 
Press ▼ / ▲ button to select Parental Guidance,
then press **Enter** button to enter sub-menu to
select the number of age which is suitable for
your children.

Key Lock

Press ▼ / ▲ button to select Key Lock, then press ◀ / ▶ button to select Off or On.
When Key Lock's statue is on, you can't use the Key panel button.

BASIC OPERATION

Hotel

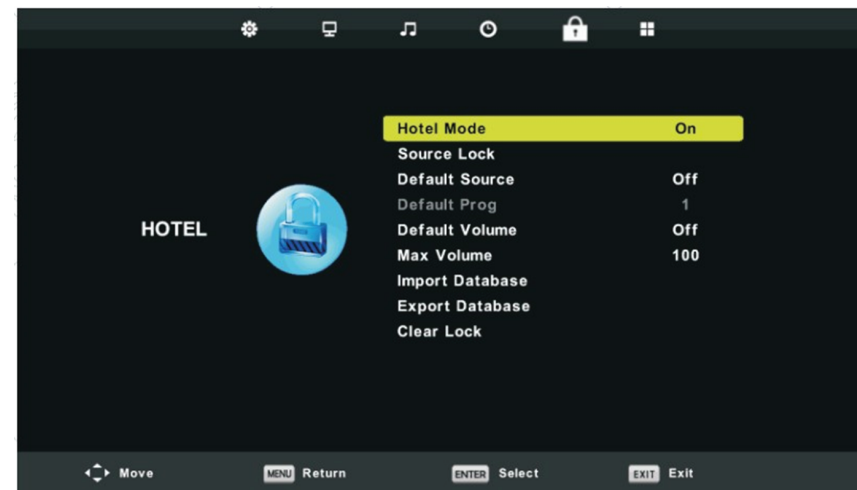

Press ▼ / ▲ button on the remote control to select hotel mode in the **Lock** menu.
Press **Enter** button on the remote control to enter the sub-menu.
After finishing your adjustment, Press **MENU** button to save and return back to the
previous menu.

Hotel Mode

Press ▼ / ▲ button to select Hotel Mode, then press ◀ / ▶ button to select on or off.

Source Lock

Press ▼ / ▲ button to select Source Lock to lock the source you want,
then press **Enter** button to enter sub-menu to select.

Default Source

Press ▼ / ▲ button to select Default Source, then press **ENTER** button to enter sub-menu
to select.

Default Prog

Press ▼ / ▲ button to select Default Prog, then press ◀ / ▶ button to adjust.
It is available when the default source is TV.

Max Volume

Press ▼ / ▲ button to select Max Volume, then press ◀ / ▶ button to adjust.

Clear Lock

Press ▼ / ▲ button to select Clear Lock, then press **Enter** button to clear the setting you
have done before

MULTIMEDIA OPERATION



Media

Note: Before operating **Media** menu, Plug in USB device, then press INPUT button to set the Input Source to **Media** .

Press **▼ / ▲** button to select **Media** in the Source menu, then press **Enter** button to enter.

Press **◀ / ▶** button to select the option you want to adjust in the main **Media** menu, then press **Enter** button to enter.

Movie

 
Press **◀ / ▶** button to select MOVIE in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit. Press **◀ / ▶** button to select drive disk you want to watch, then press **Enter** button to enter.

Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press **Enter** button to operate.

Press **Exit** button to back to the previous menu and exit button to quit the entire menu

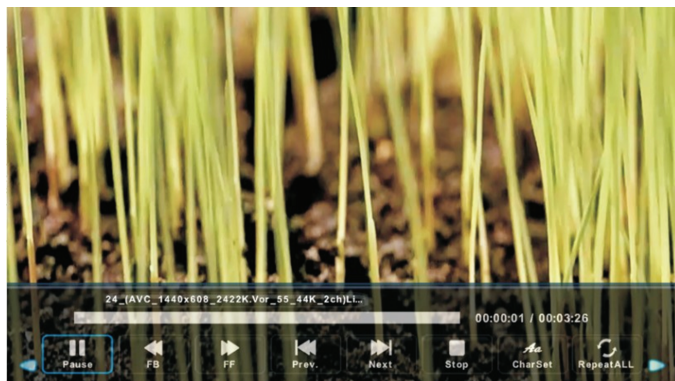


MULTIMEDIA OPERATION

Music

Press **◀ / ▶** button to select MUSIC in the main menu, then press **Enter** button to enter.

 Press **Exit** button to return to the previous menu and exit menu to quit.

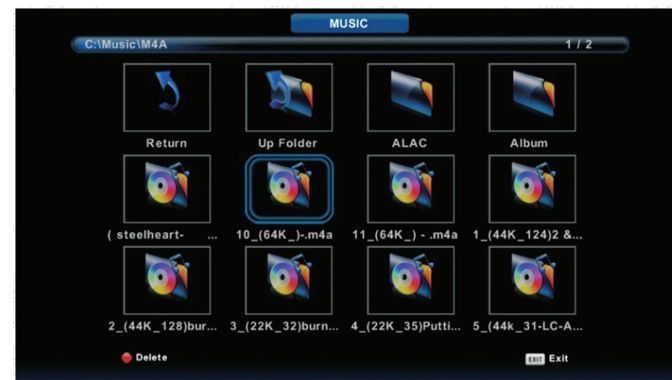

Press **◀ / ▶** button to select drive disk you want to watch, then press **Enter** button to enter.

 
Press **◀ / ▶** button to select return option to the previous menu.




MULTIMEDIA OPERATION

Photo

Press ◀ / ▶ button to select PHOTO in the main menu, then press **Enter** button to enter.
Press **Exit** button to return to the previous menu and exit menu to quit.

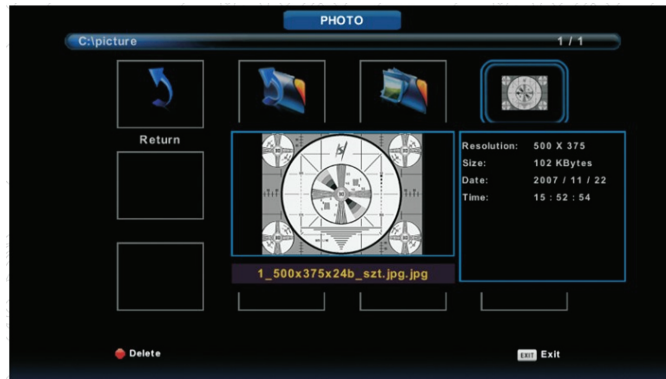

 Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.
When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

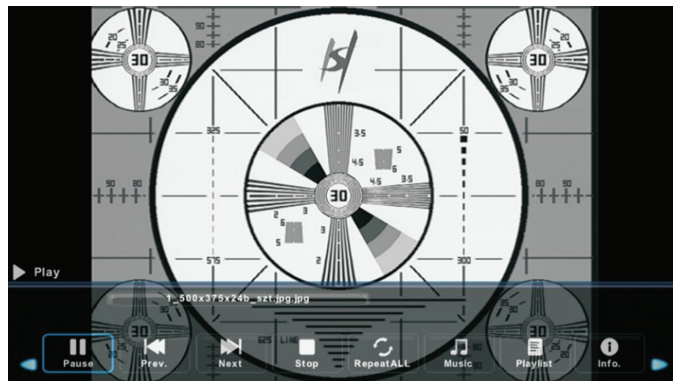


MULTIMEDIA OPERATION



Text

Press ◀ / ▶ button to select TEXT in the main menu, then press **Enter** button to enter.
Press **Exit** button to return to the previous menu and exit menu to quit.
Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.
Press ◀ / ▶ button to select return option to back to the previous menu.

 ENERGY LABEL

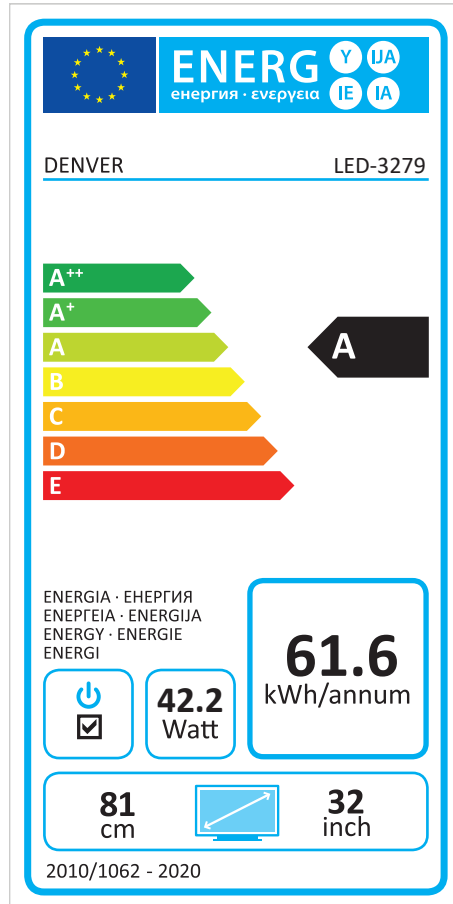

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER[®]

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type LED-3279 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: LED-3279. Now enter product page, and red directive is found under downloads/other downloads.

<http://www.denver-electronics.com/denver-cau-438/> Operating Frequency Range: VHF (50MHz ~ 230 MHz), UHF (474MHz ~ 862 MHz)

Max Output Power: 45W

DENVER ELECTRONICS A/S

Omega 5A, Soefften, DK-8382 Hinnerup, Denmark

www.facebook.com/denverelectronics