

 
Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.


1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes AAA batteries. Only use AAA batteries on remote control.
3. Keep product and batteries out of the reach of children and pets to avoid chewing and swallowing.
4. Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion.
5. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
6. Only use the original adaptor which are supplied with the model.
7. Never open the product: the device may contain parts with deadly voltage
8. Repairs or service should only be performed by qualified personnel
9. Please notice that the standby button on the remote control only put the unit in standby.
10. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable. So make sure there is space around the power outlet for easy access.
11. Do not expose to heat, water, moisture, direct sunlight!
12. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

1 Front Panel and Back

POWER Standby button

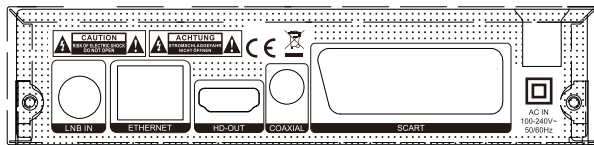

2 Remote Control

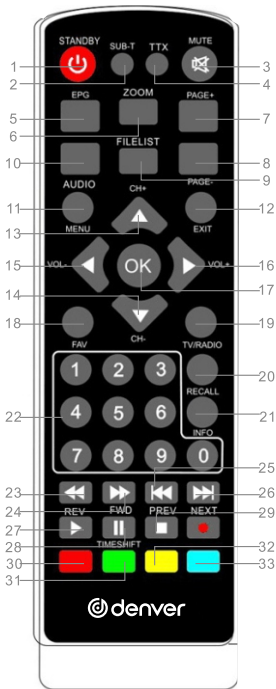 

1. STANDBY: Switch The Standby Mode
2. SUBTITLE: Select Subtitle Language
3. MUTE: Mute Or Restore Audio Output
4. TTX
5. EPG: Electronic Program Guide
6. ZOOM
7. P+: Page Up
8. P-: Page Down
9. FILELIST
10. AUDIO: Choose Audio language Or Audio Mode
11. MENU: Enter The Main Menu
12. Exit: Exit The Current Menu
13. CH+: Change Channel+
14. CH-: Change Channel-
15. 16. V+/-: Change Vol
17. OK
18. FAV: Enter Favorite List
19. TV/RADIO
20. RECALL: Return To Last Playing Program Or Last Operation
21. INFO: Show The Current Program Information
22. Number(0~9): Select A Channel Or Setting
23. REV: Return
24. FWD: Forward
25. PRVE: Return To Last Page
26. Next
27. 28. Play/Pause
29. Stop
30. 31. 32. 33. Multi-Function Key

3 Installation

Satellite List

When you enter to “Satellite List” menu, there will display the screen like below: ([OK] key to select satellite)



 
- 1 Press [Red] key, you can enter edit satellite menu. You can edit Satellite name and satellite longitude.



- 2 Press [Green] key, you can enter add satellite menu.



- 3 Press [Blue] key, you will be asked “Are you sure to delete?”. Select “Yes” to delete the satellite that highlight focus on. Select “No” to cancel the operation.

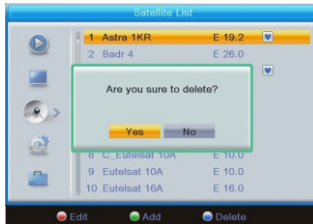

Antenna Setup

If you select “Fixed Antenna” in “Antenna Connection” menu, there will display the screen like below:



In Antenna Setup mode:

- 1 Satellite: In this item, press [Volume Up/Volume Down] key can switch Satellites and press [OK] key can enter satellite list for you to select directly.
- 2 LNB Freq: In this item, press [Volume Up/Volume Down] key can select the parameter. Option is
5150/5750/5950/9750/10000/10050/10450/10600/10700/10750/11250/11300/5150-5750/5750-5150/Universal(9750-10600)
- 3 DiSEqC1.0: You can use [Volume Up/Volume Down] key to switch options. There are several options for your selection: Disable/LNB1/LNB2/LNB3/LNB4
- 4 22K: You can use [Volume Up/Volume Down] key to switch “ON/Off”. When this item is switched to “ON”, receiver will receive TV and radio input signal from 22K port. If the item is switched to “Off”, the receiver will receive all signal from 0K port.

Single Satellite Search

 
When you enter to “Single Search” menu, there will display the screen like below:



- 1 In “Satellite” item, press [Volume Up/Volume Down] key to select satellite, which you to scan. Otherwise, press [OK] key can open the “satellite list” for you to select directly.
- 2 In “FTA Only” item, press [Volume Up/Volume Down] key to select scans all channels or just scans free channels. If you select “Yes”, it will scan free channels only.
- 3 In “Scan Channel” item, press [Volume Up/Volume Down] key to select scans TV + Radio Channels, or just TV channels or just Radio channels.
- 4 In Network Search, press [Volume Up/Volume Down] key to select whether network search or not.

4 System Setup


When you press [Menu] key to enter menu, there will display the picture like below:

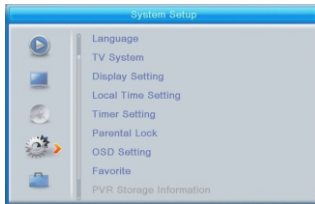

- 1 Press [Up/Down] key to select menu
- 2 Press [OK] or [Right] key to enter the "Installation". If Menu Lock is "On", it will display an dialogue for user to key in password. The default Password is "0000".
- 3 Press [Up/Down] key to select menu items.
- 4 Press [Left] key or [Exit] key to go back to main menu.

TV System

 When you enter to “TV System” menu, you will see the screen like below:

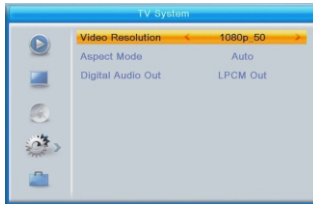

- 1 Video Resolution is for switching the system outputting video resolution. Move highlight on it and press left or right key, it will switch video resolution circularly by the sequence 480i <-> 480P<-> 576i <-> 576P <-> 720P50 <-> 720P60 <-> 1080i25 <-> 1080i30 <-> 1080P50 <->1080P60 <-> 1080P25 <-> 1080P30 <-> 1080P24.

 
 
Aspect Mode is for switching the screen aspect ratio mode. Now we provide below options: 4:3 PS/4:3 LB/16:9/Auto.

- 2 Digital Audio Out is for setting the both SPDIF and HDMI's digital audio output mode, it has options LPCM Out, BS Out and Auto, You can press [Left/Right] Key to select each mode circularity.
- 3 Press [Exit] key to draw back from “TV System” menu.

5 Tool

Parental lock

- 1.The input default password is“0000”.
- 2.If“menu lock”on, then you can lock the menu of channel edit and searching.
- 3.If parental rating choose“18 years”, that can lock the adult channels.

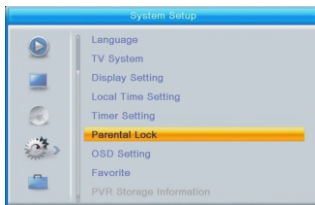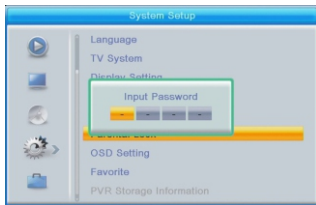

Upgrade By USB

When you enter to “Upgrade By USB” menu, you will see a screen as below:



Upgrade Mode has only 1 option: All Code, it means that you can only upgrade whole file to your STB's flash. Please rename your new fw file name to be the format “all*.bin”, * means any others string is acceptable, but the initial 3 letters must be “all” and the extension name must be “.bin”. Then Press OK key to start upgrade by USB.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S


www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type DVBS-206HD is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: DVBS-206HD. Now enter product page, and red directive is found under downloads/other downloads.
Operating Frequency Range:950~2150MHz
Max Output Power:10W

DENVER ELECTRONICS A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denverelectronics