

DENVER REC-34 - QUICK START GUIDE

www.facebook.com/denver.eu

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Start-up (radio controlled clock)

1. Open the battery compartment and pull the batteries in it.
2. When inserting the batteries, the clock will scan the DCF frequency signal (📡) flashes on the LCD if the signal is OK).
3. The clock manually scans the time signal by pressing wave for 2 seconds. For failed reception in 5 minutes, scanning stops.
4. (📡) turns on indicate signal received successfully.

Manual time setting

1. When the LCD display the TIME, hold "TIME" button for 2 seconds to enter clock/Calendar setting.
2. Press "UP" or "DOWN" buttons to adjust the setting and press "TIME" button to confirm each setting.
3. The setting sequence is shown as follow: 12/24H display, Hour, Minute, Year, Month, Date and Language.

Adjust the Daily Alarm


1. Hold the "ALARM" button for 2 seconds to enter ALARM time setting. Press "UP" or "DOWN" button to adjust the ALARM time.
2. Press "ALARM" button to switch ALARM on or off. If it is on.

Time Zone

By standard unit is set to GMT+1. To change this push TIME button for 2 seconds, then choose first 24h, push time once, then change Time zone (standard is 00=GMT+1) to the Time zone at your place and confirm by pushing time again. Then either set the time manually, or wait until unit returns to normal mode and push WAVE button to start scanning after RCC time.

Other usage

Press "DOWN" button to select temperature in Celsius mode or Fahrenheit mode.

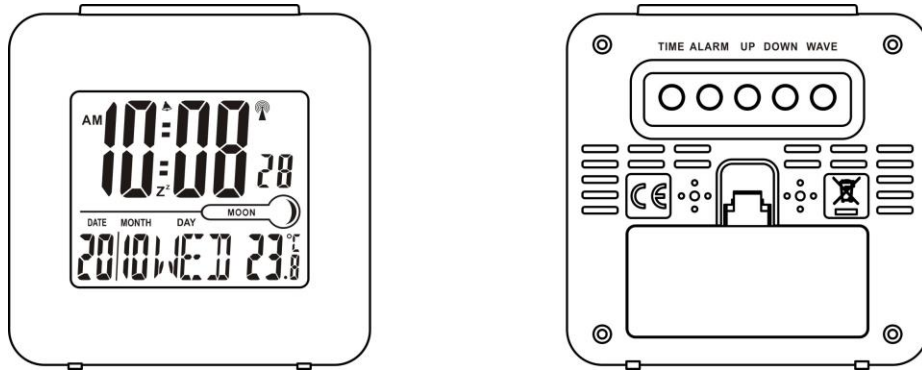

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S



www.facebook.com/denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type REC-34 is in compliance with Directive

2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

Now enter product page, and red directive is found under downloads/other downloads

Operating Frequency Range:77.5KHz±250Hz

Max Output Power:0.2mw

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

If the user manual is not printed in your local language, then please enter our website to see if it is found online under the model you have. The website address is: www.denver-electronics.com