



**GCO-610**

**denver.eu**

**March 2022**

## Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of the reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degrees Celsius to 40 degrees Celsius. Environments under and above this temperature might affect functionality.
4. Never open the product. Repair or service are only to be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop using it immediately.
7. The mouse sensor can be a hazard to your eyes. Avoid looking directly into the light.

The USB power plug is used as disconnecting device, and must remain readily operable. Make sure there is space around the USB cable connection on the PC for easy access.


Do not use non original accessories together with the product as this can make the product functionality abnormal.

# Gaming Keyboard



## SETUP AND USE


- This keyboard is Plug and Play! Simply plug the USB cable into your PC's USB port.
- Be sure to check the PC's keyboard settings if the keyboard is not detected.
- The Scroll Lock key toggles LED Backlight ON/OFF (PC only).

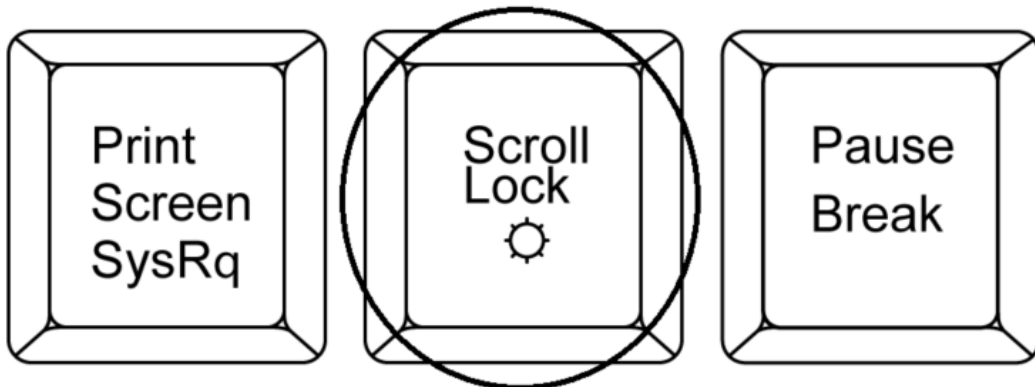

# LED Headset with Microphone

## SETUP AND USE

- Adjust the headset for a snug but comfortable fit.
- Plug the 3.5mm cable into your controller or mobile device.
- To light up the LEDs on the headset plug the USB cable into any powered USB port.
- Flip down the boom microphone for clear communication.

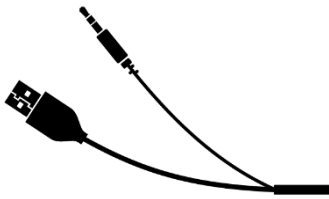

# LED Gaming Mouse

## - 1000 DPI



## SETUP AND USE

- Gaming mouse is Plug and Play! Simply plug the USB cable into your PC's USB port.
- Be sure to check your PC's settings if the mouse is not detected.

Make sure to clean the mouse sensor pointing to the table. Any particles of dust or dirt deposits on the plastic will cause a major drop in performance. If you find your cursor jumping around on-screen or just freezing randomly, this might be the issue. The mouse sensor can be a hazard to your eyes. Avoid looking directly into the light during cleaning.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
[www.facebook.com/denver](http://www.facebook.com/denver)