

 
Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

- 1.This product is not a toy. Keep it out of reach of children.
- 2.Warning: This product includes AAA batteries. Only use AAA batteries in remote control.
- 3.Keep product and batteries out of the reach of children and pets to avoid chewing and swallowing.
- 4.Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion.
- 5.Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
- 6.Never open the product: the device may contain parts with deadly voltage
- 7.Repairs or service should only be performed by qualified personnel
- 8.Please notice that the standby button on the remote control only put the unit in standby.
- 9.The direct plug-in Cable is used as disconnect device, the disconnect device shall remain readily operable. So make sure there is space around the power outlet for easy access.
- 10.Do not expose to heat, water, moisture, direct sunlight!
- 11.To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.


1. Control Elements

Front Panel

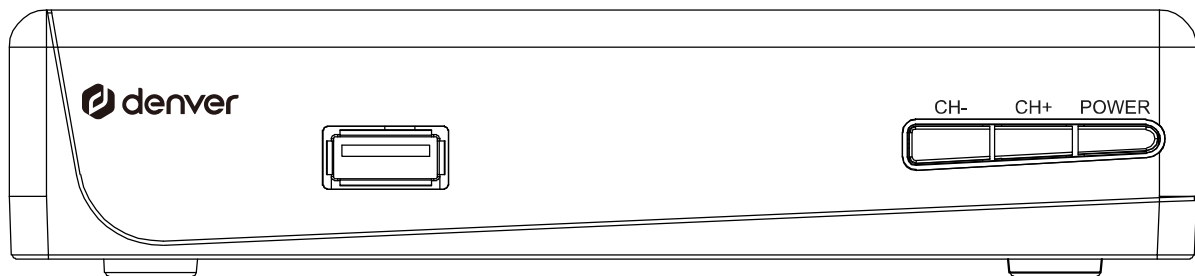

- POWER Standby button
- CH Channel up and down
- USB USB Port

 
Rear Panel

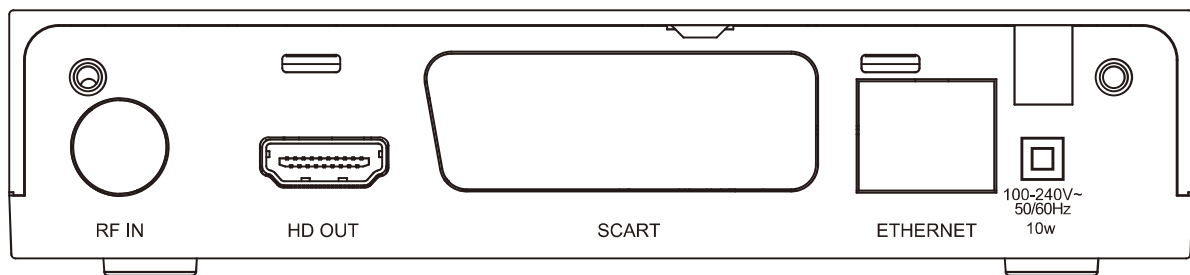

- RF IN (ANTENNA)
- HD OUT (HDMI OUT)
- SCART OUT
- ETHERNET (FOR INTERNET CONNECTION)
- AC 100-240V (POWER CABLE)

USER'S MANUAL

 2. Remote control tekst ændringer

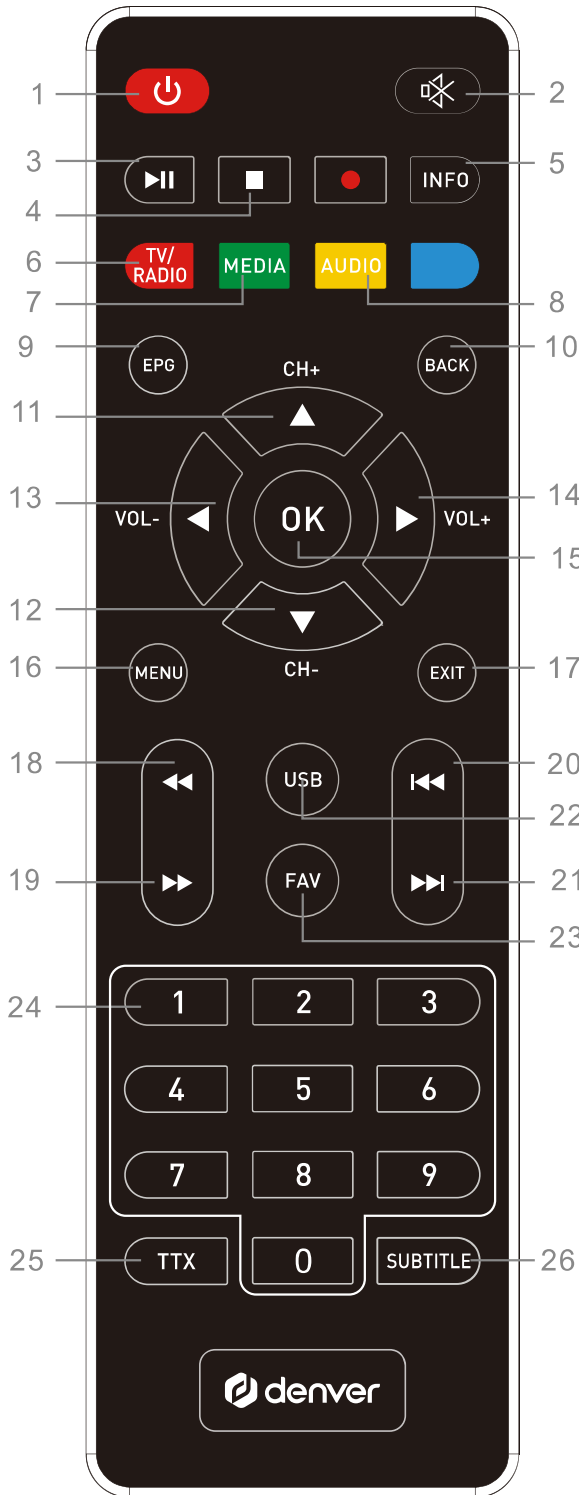

1. : Switch unit ON or in Standby mode
2. Mute On /Off
3. Play /Pause
4. Stop
5. INFO: Show The Current Program Information
6. TV/RADIO
7. MEDIA
8. AUDIO: Choose Audio language Or Audio Mode
9. EPG: Electronic Program Guide
10. BACK. Return to previous program or previous function
11. Navigation up. Change channel+
12. Navigation down. Change channel-
13. Navigation left. Change volume-
14. Navigation right. Change volume+
15. OK. Confirm change.
16. MENU: Enter The Main Menu
17. Exit: Exit The Current Menu
18. Rewind.
19. Forward
20. Previous
21. Next
22. Activate USB function.
Insert USB flash drive (not included)
23. FAV. Enter favorite list
24. Number(0 ~ 9): Select A Channel Or Setting
25. Teletext.
26. SUBTITLE: Select Subtitle Language

ENG 3

3. Basic Functions

3.1 First Installation

When you turn on the box you will see the installation guide. Change language and country.

 


It automatically starts to scan for channels in 9 seconds and Then you can start watching TV.




3.2 Display Information

Press INFO button on the remote to show information about current programs.

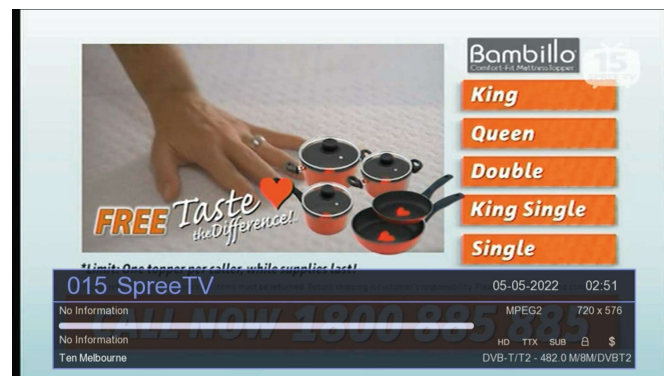

USER'S MANUAL

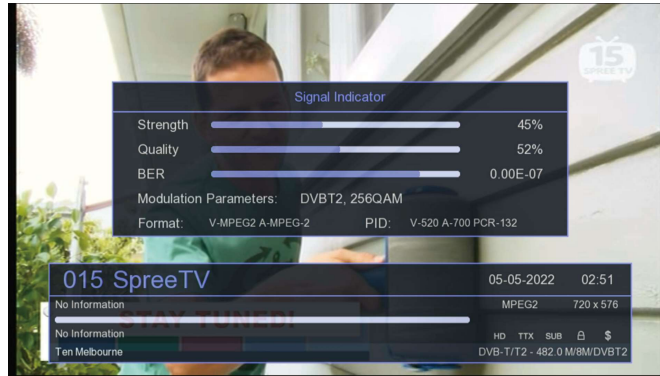 


3.3 User menu

Press the MENU button on the remote control. Inside this user menu you can change settings, languages etc. Please use the navigation buttons on the remote control. Press OK on the remote control to confirm the choice.



3.4 Parental lock

 In this menu you can lock menu and channel edit with a code. Default password to this menu is: 000000

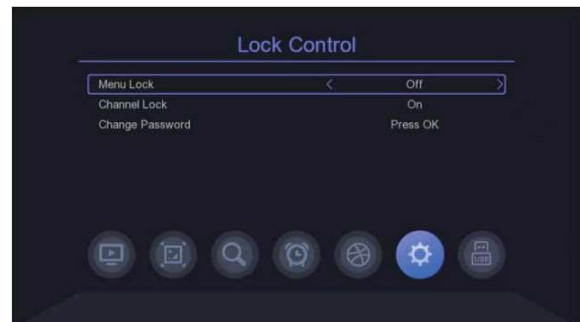

4. Installation

There are two kinds of installation mode as follow:

- 1 Manual Search
- 2 Auto Search



 
 
You can press “Right ”button to enter into this menu, then press “up/down/ right/left” to choose and change below functions:

- Manual Search
- Auto Search
- Country
- Antenna Power

5. Tool

Parental Lock

1. The input default password is “000000”.
2. If “menu lock ” on,You can lock the menu of channel edit and searching.
3. If parental rating choose”18 years”,that can lock the adult channels.

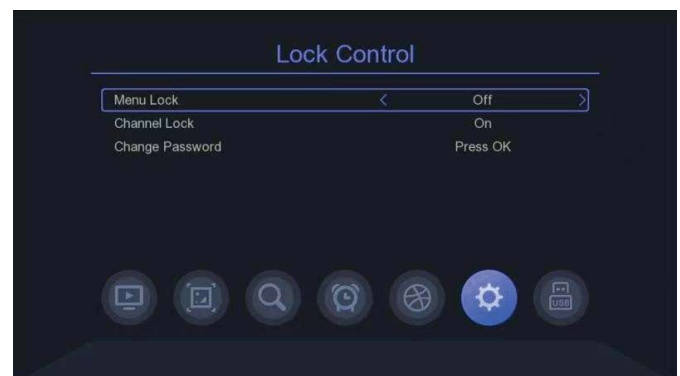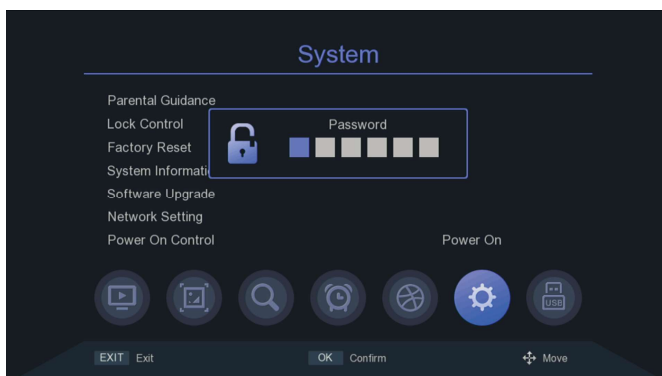

USER'S MANUAL

6. System Setup

System setup menu can provide convenient system setup, as shown below:



Press “Right” button to enter this menu and press up/down to choose and do the edit as you want.

OSD Language

EPG Language

Subtitle Language

HOH Subtitles

 
TTX Language

First Audio Language

Second Audio Language

7. Software Update

Upgrade by USB

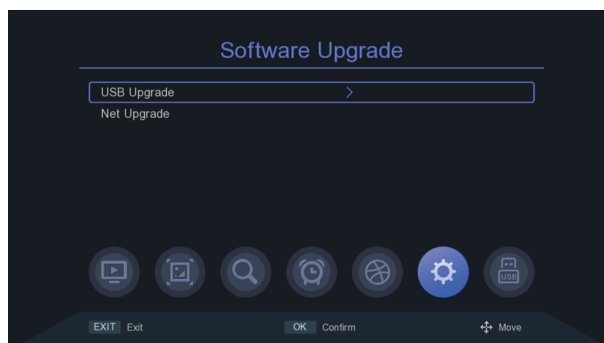

Please make sure don't shut down the power in the upgrade process;
When upgrade finish, system will automatic restart with the new firmware

ENG 7

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type DTB-139 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: DTB-139. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range:50~60MHz
Max Output Power:10W

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

ENG 9