



Denver NBQ-15147SES

[denver.eu](http://denver.eu)

October 2021

# Important safety information

**WARNING:** Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference. Read all the safety information below before using this netbook.

1. For the electrostatic discharge (ESD) test of EN55035, it was found that manual operation (by switching power ON/OFF) is needed to resume normal operation as intended after the test.
2. This product is not a toy. Keep it out of the reach of children. If operated by children, please always ensure adult supervision.
3. Please keep the product away from pets.
4. Warning: This netbook is equipped with a lithium battery; please follow below instructions:



Caution

Do not try to open the netbook! The device may contain parts with deadly high voltage.

Do not expose to heat, water, moisture, direct sunlight!

 
Only charge with the original adapter supplied with this product!

Do not attempt to replace the netbook battery yourself - you may damage the battery, which can cause overheating and injuries. The lithium-ion battery inside the netbook should be only replaced by skilled personnel and must be recycled or disposed of separately from household waste. Do not incinerate the battery.

Repair or service are only to be performed by qualified personnel.

5. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing water and no objects filled with liquids, such as vases, are to be placed on the apparatus.
6. The direct plug-in adapter is used as a disconnecting device, and shall remain readily operable. Ensure there is space around the power outlet for easy access.
7. Product operating and storage temperature is from 0 degrees Celsius to 40 degrees Celsius. Environments under and above this temperature might affect functionality.

# Unit at a Glance

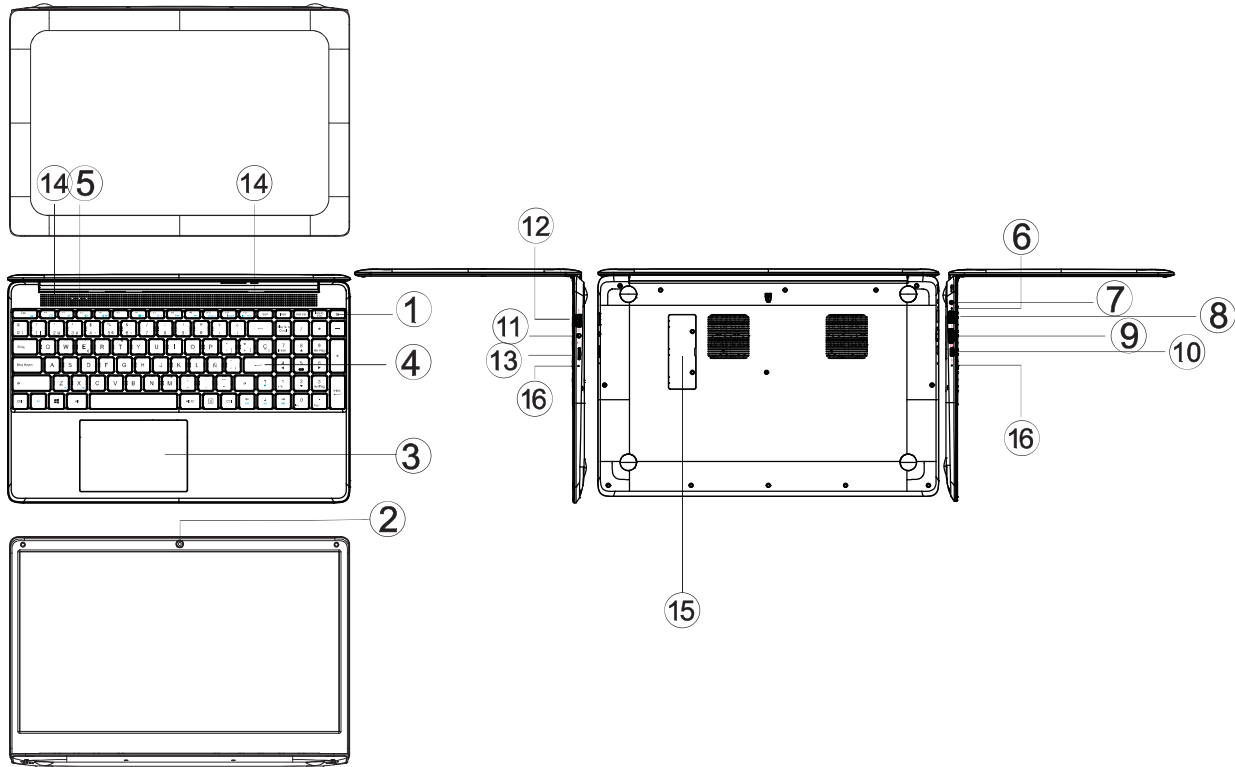

1. Power button: \_Press to turn the computer on/off  
You can also press this button to turn the sleep mode on or off.
2. Front camera: For webcam use – pictures and video
3. Touchpad
4. Keyboard
5. Indicators:
  1. is caps lock. It will light up green when caps lock is enabled.
  2. is charging indicator. It will light up red when computer is charging.
  3. is ON light. It will light up green when computer is turned on.
6. Charge indicator: Will light up red when it is charging.
7. DC charging base: use the included 19V/3A charger.
8. USB port
9. Mini-HDMI interface - for connection with external monitor or TV.
10. USB-C port.
11. Headphone jack.
12. USB port.
13. MicroSD card slot.
14. Speakers.
15. SSD slot: open and insert M.2 SSD drive into the computer.

# Interface Introduction

Windows 10 start menu: On the start menu, you can see many application icons are fixed. These applications are displayed in the form of “magnet”. You can click to launch them. You need to login your Microsoft account before running applications completely.

 
 


## Applications Introduction

In addition to apps already installed on the start page, you can open all apps in the Homepage.


If you want to add applications on the start menu, refer to the operations as shown below

- (1) Right-click or tap on one icon
- (2) Select "Pin to Start" at the beginning of the list

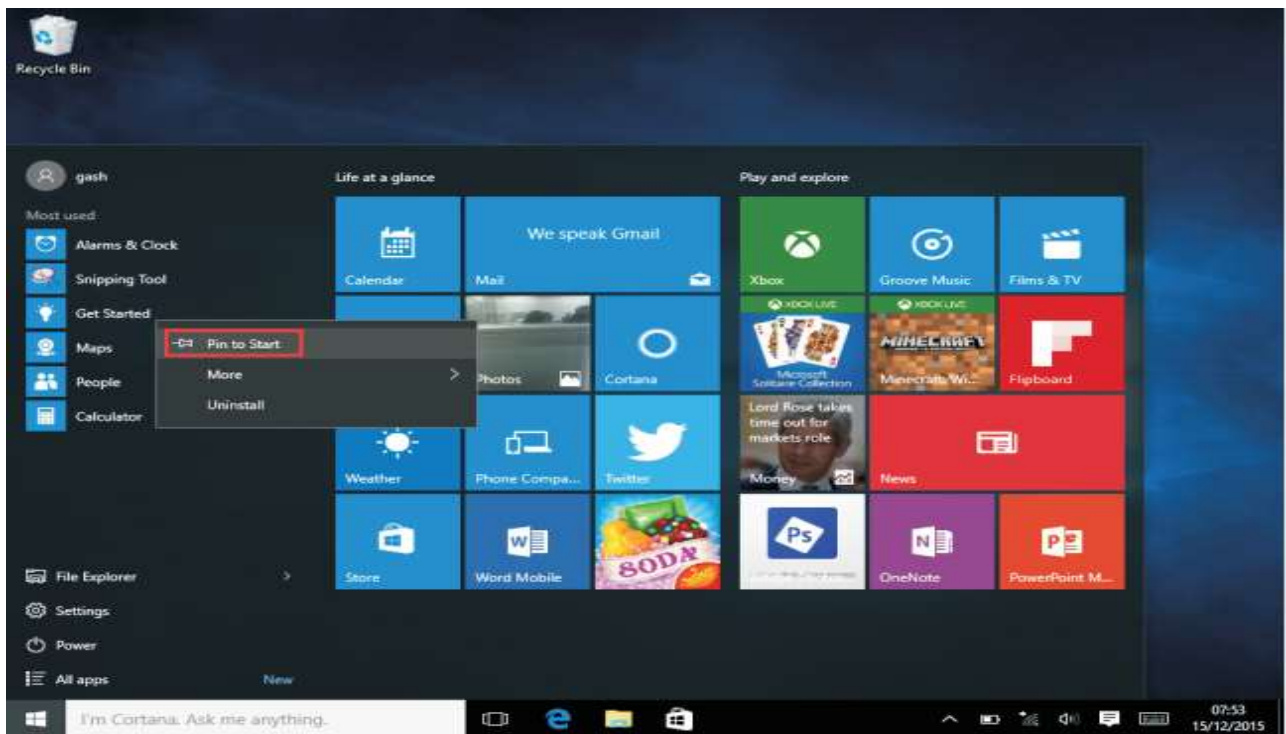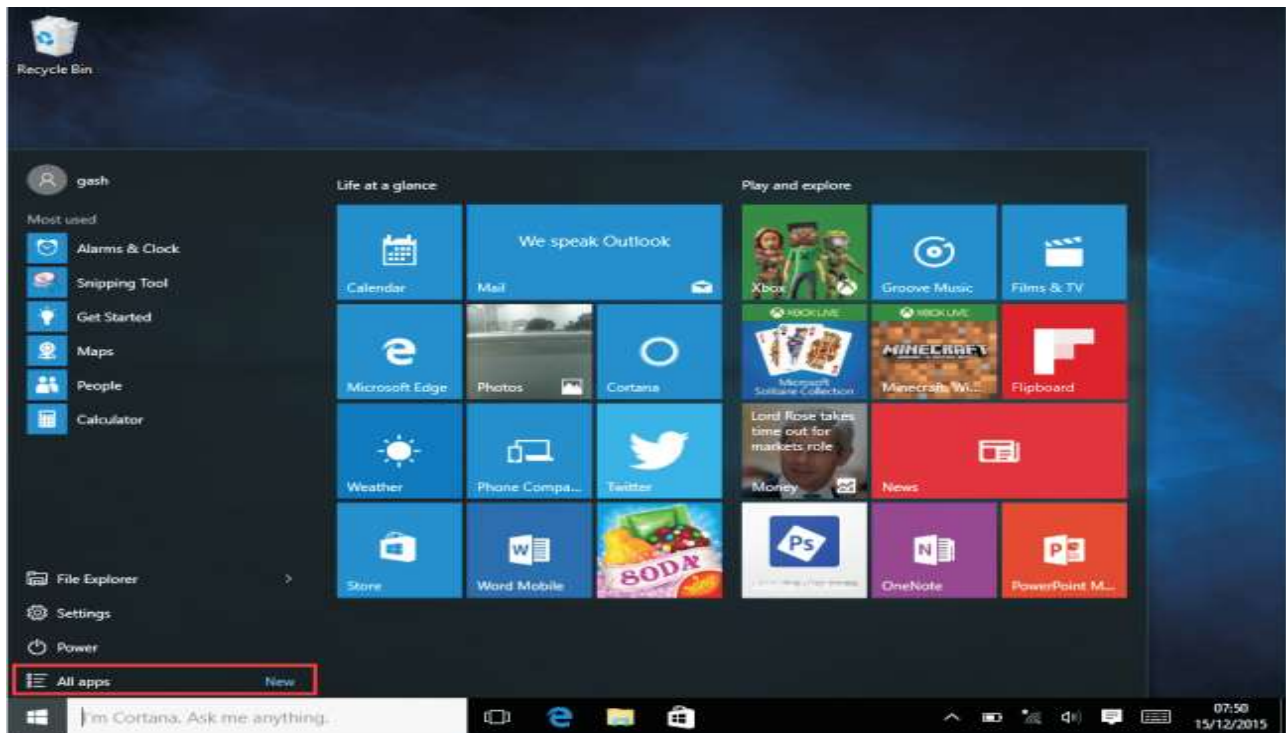


ENG-3

 Conversely, if you want to cancel or delete a certain app on the start page, (1) Right-click, (2) and then select unpin.

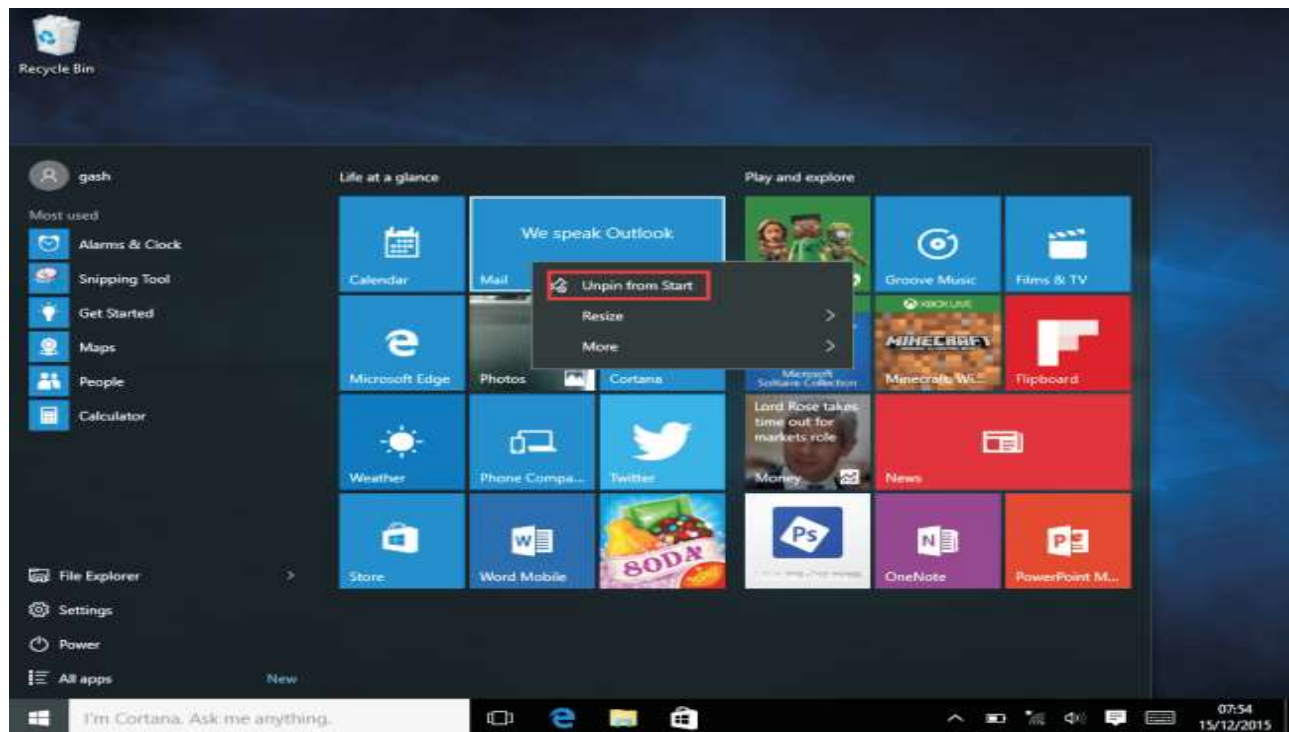


# Menu bar

 
Touch or use the mouse to click the Windows home button on the menu bar.

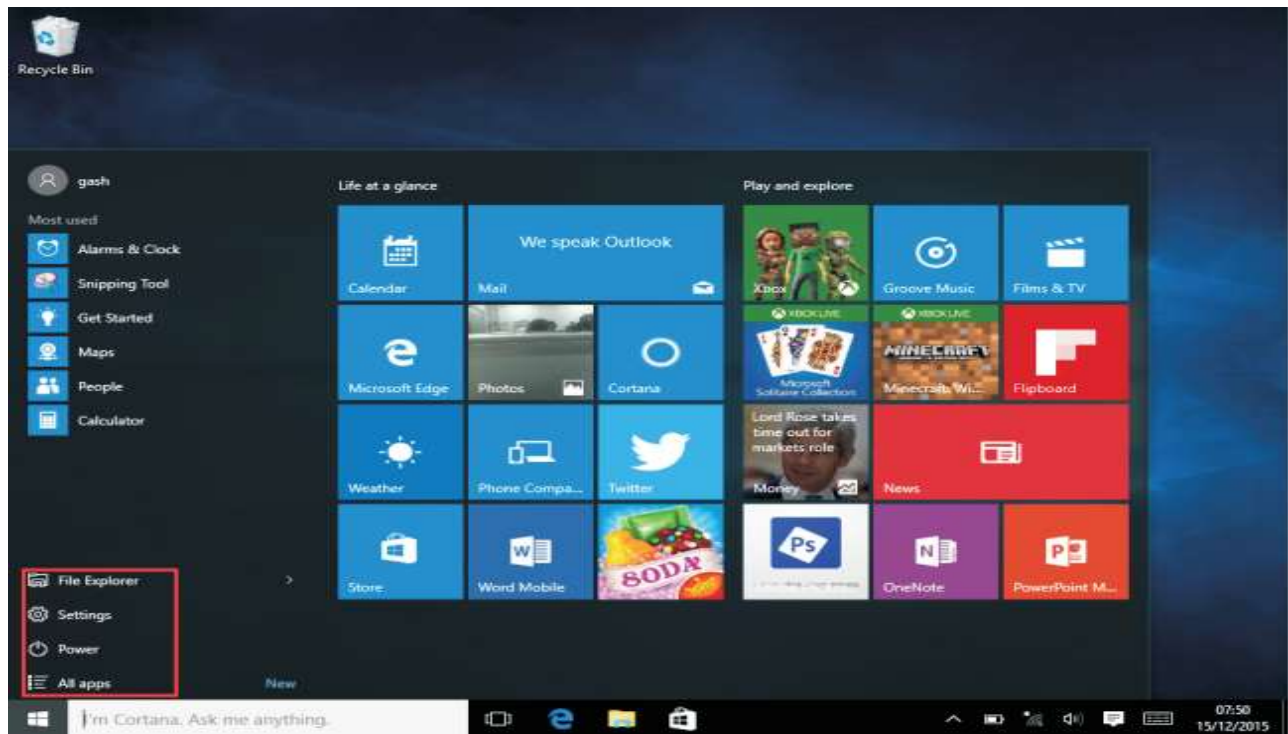

 
Expand the menu bar from the screen: file manager, settings, power supply and all apps, you can sleep / shutdown / restart the device.



 
With File Explorer button, you can manage your files and applications in the device.



 With Settings button, you can set up your device.




You can choose more apps.

 


# Search menu

 If you are logged on, you can setup search function to use both text and speech. If you are not logged on, you can only do text searches.

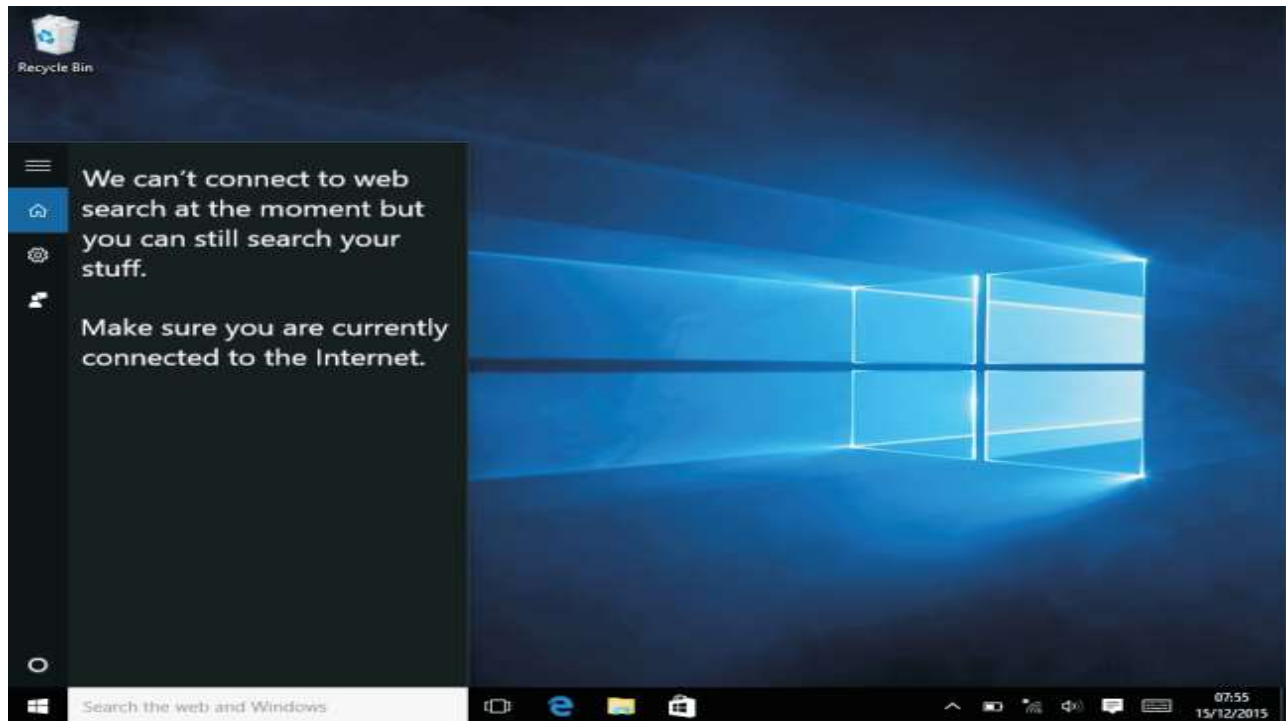

 
For the device menu, click on the notification menu.

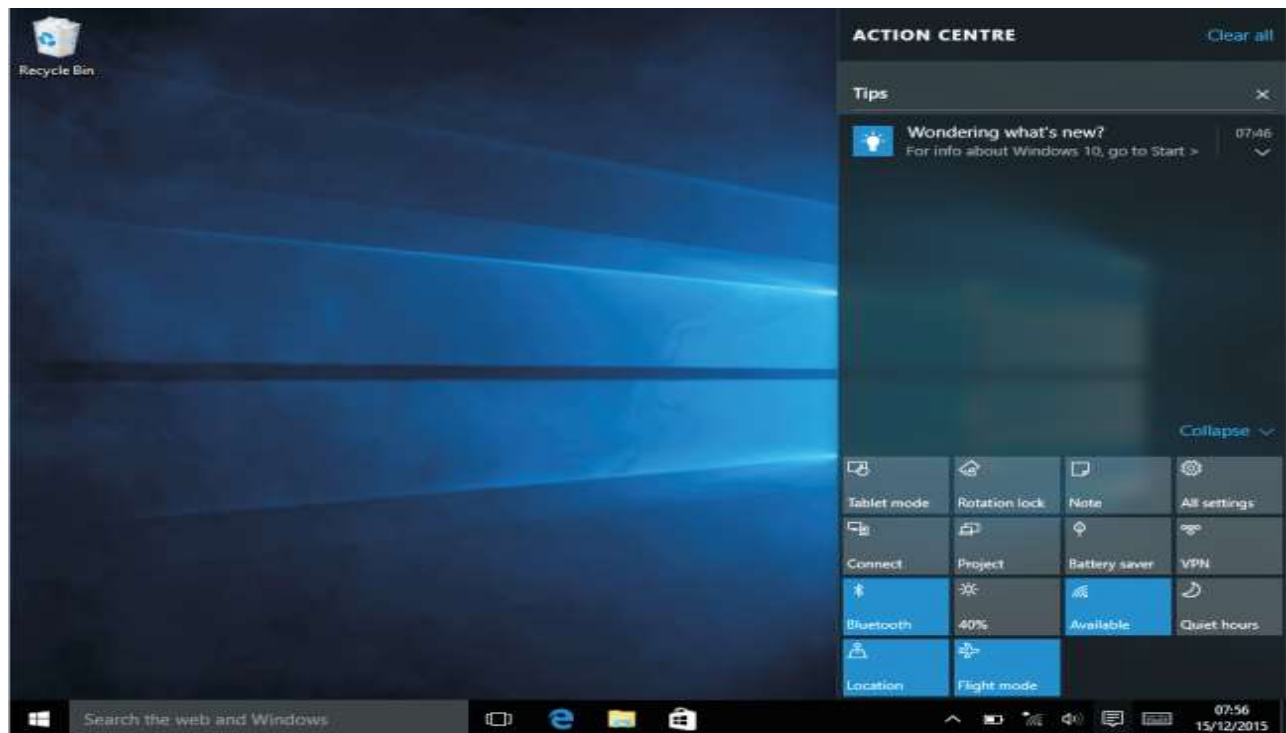




# Virtual Desktop interface

 Click on Desktop task view to operate a multi-tasking and multi-desktop window.

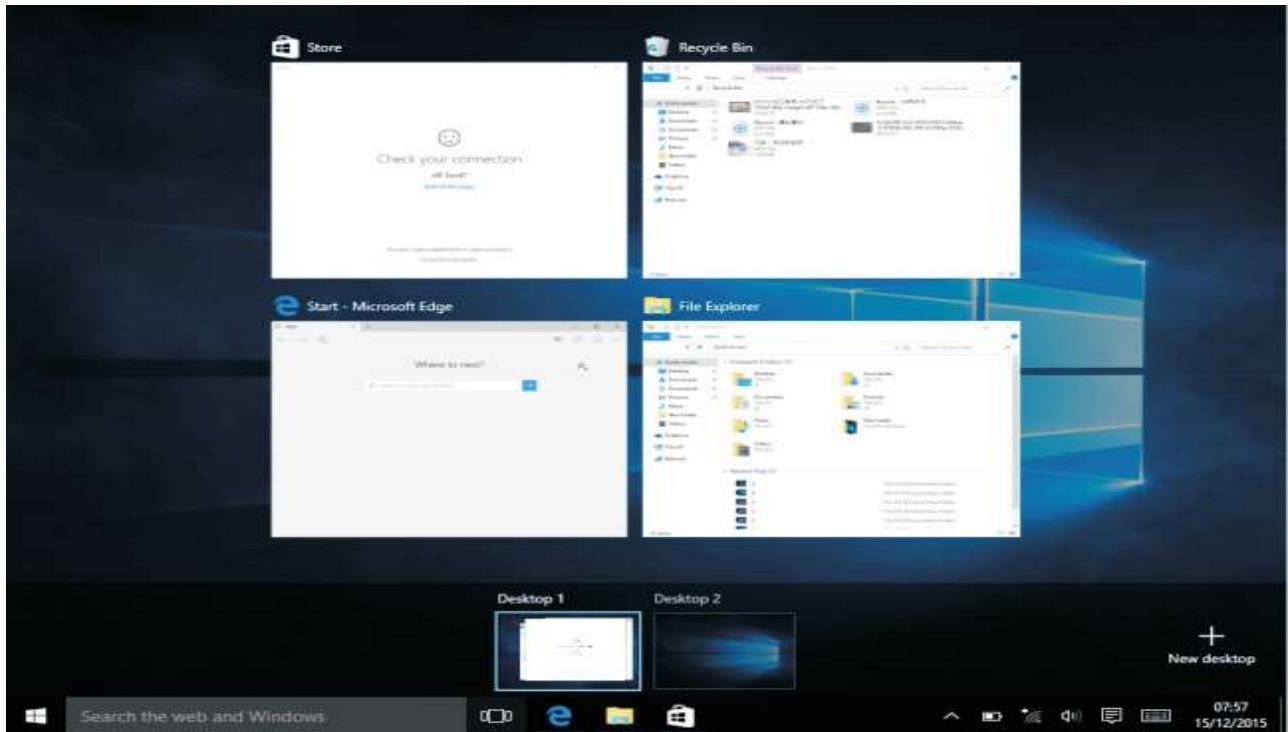


## Basic Operations

 Sleep, Shut down, and Restart  
Press the power button for hibernation.

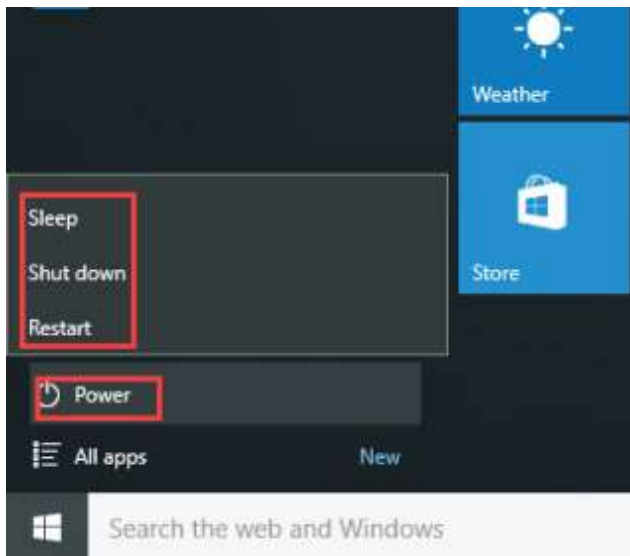

# Changing the language

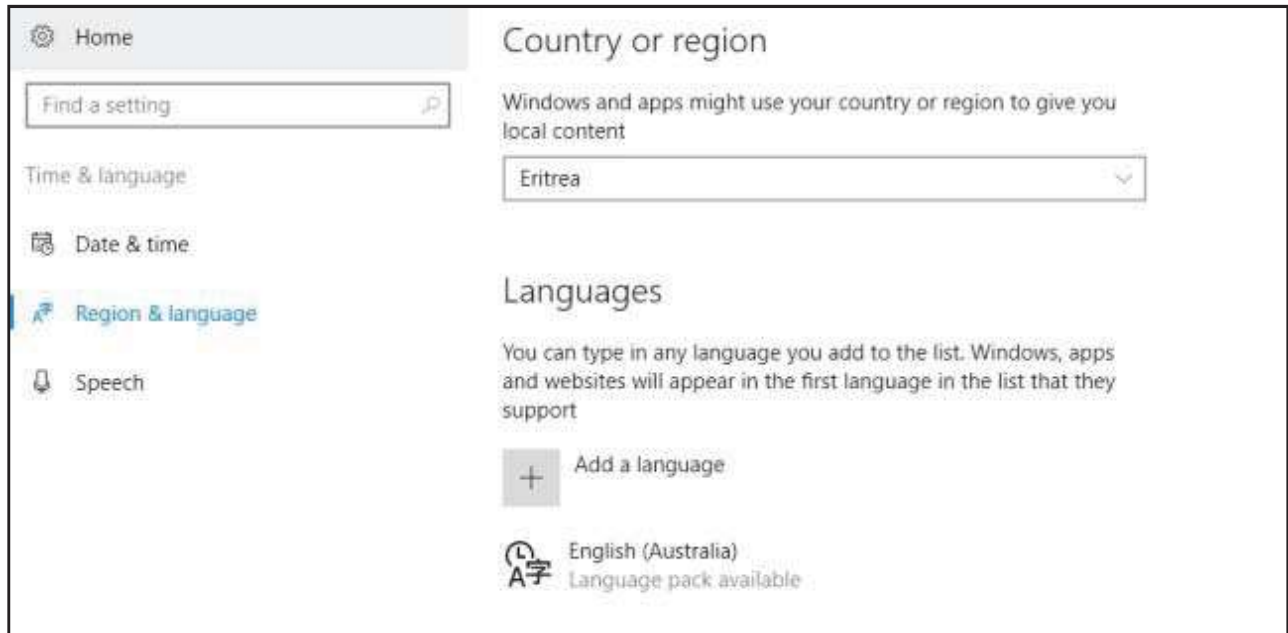 

# Specifications

Processor	Intel Coffee Lake i5-8259U	
Storage	SODIMM DDR	8GB
	SSD	256GB
Display	15.6" TN Panel	
Wi-Fi Networking	IEEE 802.11 b/g/n/ac	
Audio Output	3.5mm headphone	
USB Host	2xUSB3.0, 1xUSB Type C	
HDMI	MINI HDMI x1	
Bluetooth	4.2	
Camera	Front 0.3MP	
Operating System	WINDOWS 10 HOME	
Power	Rechargeable Li-poly battery Power Adapter(DC IN 19V, 3A)	
Speakers	2x1W speakers	



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Operating Frequency Range Wifi: 2.40G~ 5.85GHz  
Operating Frequency Range Bluetooth: 2.400 ~ 2.4835GHz  
Max output Power: Wifi 17dBm BT10dBm

Hereby, DENVER A/S declares that the radio equipment type NBQ-15147SES is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write modelnumber: NBQ-15147SES. Now enter product page, and red directive is found under downloads/other downloads.

DENVER A/S  
Omega 5A, Soefften  
DK-8382 Hinnerup  
Denmark  
facebook.com/denver.eu

Manufacturer's name or trade mark, commercial registration number and address	Shenzhen Teka Technology Co., Ltd. Commercial registration number:914403007703151648 Address: Building A, No. 21, XiFu Road, Red Star Community, SongGang Street,Baoan District, Shenzhen, Guangdong Province, 518105, P.R. China.
Model identifier	TEKA-EG1900300
Input voltage	100-240V
Input AC frequency	50/60Hz
Output voltage	19V
Output current	3A
Output power	57.0W
Average active efficiency	> 89.2%
Efficiency at low load (10%)	> 86%
No-load power consumption	< 0.165W

# Contact

## Nordics

### Headquarter

#### Denver A/S

Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

Phone: **+45 86 22 51 00**  
(Push "2" for support)

#### E-Mail

For technical questions, please write to:  
**support@denver.eu**

For all other questions please write to:  
**denver@denver.eu**

---

## Benelux/France

### Denver Benelux BV

Barwoutswaarder 13C+D  
3449 HE Woerden  
The Netherlands

Phone: **+31 348 420 029**

E-Mail: **support-nl@denver.eu**

---

## Spain/Portugal

### Denver AS Spain S.A.

C/ Moscú, 1 Pol.Ind.Mas de Tous  
46185 La Pobla de Vallbona  
Valencia (Spain)

#### Spain

Phone: +34 960 046 883  
Mail: **serviciotecnico.denver@denver.eu**

#### Portugal:

Phone: **+35 1255 240 294**  
E-Mail: **denver.service@satfiel.com**

## Germany

### Denver Germany GmbH Service

Gutenbergstrasse 1  
94036 Passau

Phone: **+49 851 379 369 40**

#### E-Mail

**repair-germany@denver.eu**

### Fairfixx GmbH

Repair and service  
Rudolf-Diesel-Str. 3 TOR 2  
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/  
Balanceboards, Smartphones & Tablets)

Tel.: **+49 851 379 369 69**

E-Mail: **denver@fairfixx.de**

---

## Austria

### Lurf Premium Service GmbH

Deutschstrasse 1  
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

---

If your country is not listed above,  
please write an email to  
**support@denver.eu**



Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

[denver.eu](http://denver.eu)  
[facebook.com/denver.eu](https://facebook.com/denver.eu)