Important safety instructions

WARNING: Please read the safety information carefully before using the product for the first time and keep the instructions for future reference.

This product is not a toy. Keep it out of the reach of

- Keep the product away from pets.
- Warning: There is a lithium polymer battery in this power
- Do not try to open the power bank.
- Protect from heat, water and moisture.
- Do not attempt to replace the battery yourself damaging
- the battery could result in overheating and personal injury. Repair and maintenance work may only be carried out by qualified personnel.
- The battery must be recycled or disposed of separately from household waste. Do not incinerate the battery.
- To reduce the risk of fire or electric shock, do not expose
- this product to rain or moisture.
- Please remove the USB charging cable when the power
- bank is fully charged.
- The operating and storage temperature of the product is
- 10 between 5 °C to 40 °C. Falling below or exceeding this temperature can impair the function.
- Do not drop the product or subject it to vibrations or

11. knocks.

Weithium battery inside!

- Do not try to open the product!

- Do not expose to water and moisture.

Item Overview

- 1. 5V Output (USB-A1)
- 2. 5V Output (USB-A2)
- 3. 5V Input (USB-C)
- 4. Solar panel
- 5. Battery indicators
- 6. Solar charging indicator
- 7. ON/OFF Button



ENG 2

Package contains

Power bank USB-C charging cable User Manual

Specification

- * Battery capacity: 20000mAh
- * Micro/Type-C Input: 5V/2A
- * Charging Input by Solar: 5V/0.3A
- * USB Output1: 5V/2A
- * USB Output2: 5V/2A

CHARGING THE POWER BANK

Plug in the supplied cable to your USB charger or computer (not included) USB port. The USB connector goes to your charger, the micro USB goes to your power bank. If fully depleted the power bank will take around 11 hours to charge fully. Alternatively, leave the product in the sun and it will charge

CHARGING YOUR DEVICE USING THE POWER BANK

Plug the cable into the USB port on the power bank, the other end goes into your device. Battery LED indicator will turn blue, and your device will show it is charging. Battery capacity display: press the ON/OFF button (7), there are 4 LEDS displaying the battery capacity, if there is only one or two LEDS, it needs to be charged more. After you have charged your device, recharge the power bank before using again.

Long press the button (7) 4S, flashlight on, then long press 4S to turn off the flashlight.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accor with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

> DENVER A/S Omega 5A, Soeften DK-8382 Hinnerup www.facebook.com/denver.eu

manual.