



KCA-1350 MK2

02/2023



FR

Cet appareil
est recyclable

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE

OU



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !


Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Warning: This product includes lithium polymer batteries.
2. WARNING: CHOKING HAZARD – Children under 3 yrs. can choke or suffocate on camera because of its small size. Adult supervision required. Keep camera away from toddlers and pets to avoid chewing and swallowing. Discard broken buttons or parts at once.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Only charge with supplied USB cable.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Flip Lens Kids Camera User Manual

Camera Diagram

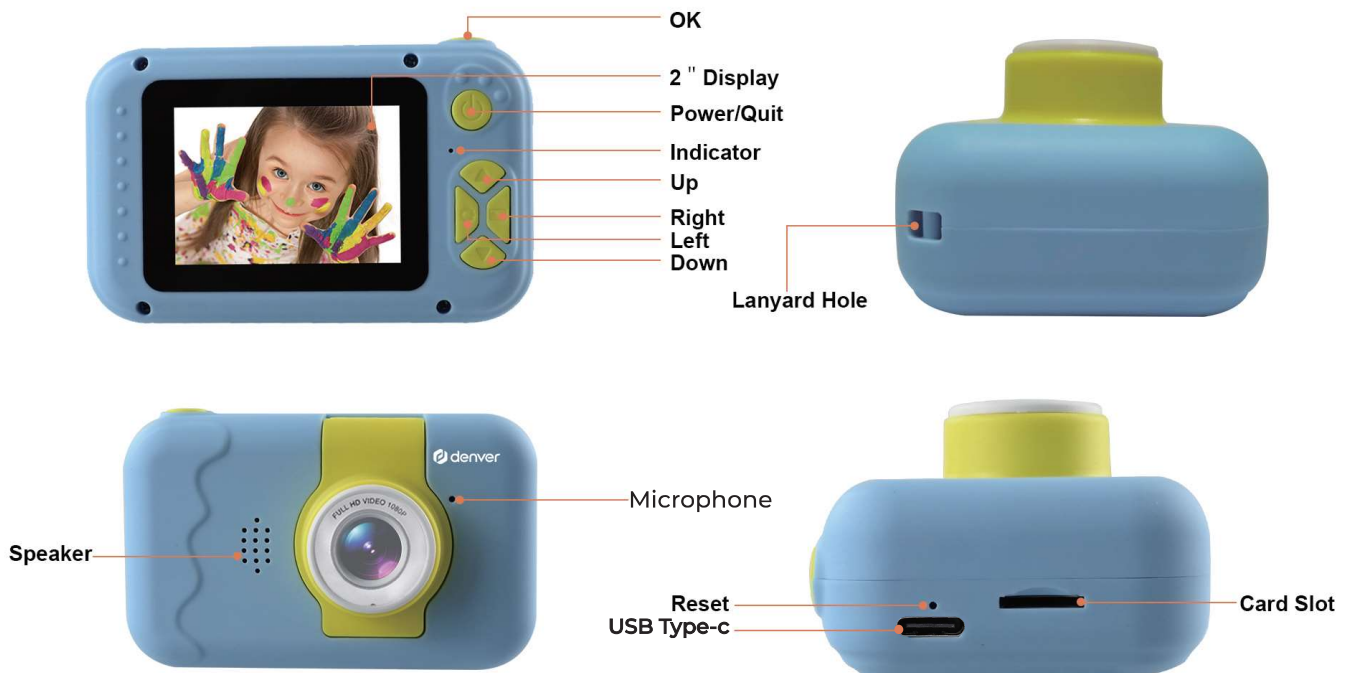

Detail Instructions

1. Insert Micro SD card

Note: please use brand Micro SD card, format it on a computer before using, a low quality card may not be guaranteed to work properly.

2. Battery Charge

- A. With a home daily using mobile adapter connect USB cable to charge the camera
- B. When fully charged, screen battery icon will show 100%.

3. Turn on/ off camera

- A. Long press the Power button for about 1 seconds, camera will turn on.
- B. Long press the Power button 1 seconds, camera will turn off.

4. Mode switch

As below picture, the upside 3 icon is : Photo Mode, Video Mode, Playback Mode
The downside 3 icon is: Setup, Game, MP3 Music(Only support MP3 format)



5. Video recording

- A. Insert Micro SD card, then turn on the camera..
- B. Select Video mode, then click "OK" button to start recording video.
- C. To stop recording video, press the "OK" button again.
- D. In video mode, click UP/Down button to choose different filter
- E. In video mode, click LEFT button one time ,switch to slow motion video mode, click LEFT again switch to Time-Lapse video mode. Click LEFT again back to normal video mode.
- F. In video mode, click Power button to quit video mode.

6. Photo taking

- A. Switch the camera to photo mode ,then Short press the "OK" button to take a photo.
- B. In photo mode, click UP or Down button change to different filters and different photo effects, different cartoon frame.
- C. In photo mode, click left button switch to photo timer function mode.
- D. In photo mode, long press UP/Down button to setup Zoom.
- E. In photo mode, click Power button to quit photo mode.

7. Playback mode

Select Playback mode and click OK button to review the recorded video and photo. Then click Right/Left button to choose different photo and videos. To delete a photo or video, then click UP or Down button to delete the current video or photo. To quit Playback mode, click Power button.

8. Menu settings

Switch to setup mode and click OK button to start menu setup.

9. Puzzle Games

There are total 5 Puzzle games built-in this camera, select the game mode click OK button to start game.

10. Connecting to computer

With USB cable connect camera to the computer, then can read the recorded video and photos from computer only when SD card is input.

Music Play

Please note, this camera only support MP3 format music.

Download the MP3 music first and copy into Micro SD card, then inset the card into this camera, select the MP3 music mode click OK button into music play mode.

Specifications

Screen	2.0Inch
Battery	400mAh
Charging Time	3Hours
Working Time	100minutes
Video Resolution	FHD (1920*1080P Interpolation) HD (1280*720P Interpolation) VGA (640*480P)
Photo resolution	40M,20M,18M,16M ,12M, 8M , 5M , 3M ,2M
Material	ABS with rubber oil painting
External Storage Media	Max support 32GB(Not include)
Features	Take Photo, Video,5Puzzle Games, 28 Photo Cartoon Frame, 4XDigital Zoom, 10 Different Photo effect, 7Filters, Slow Motion Video, Time-Lapse Video,
Product Size	9.1*5.6*4.1cm
Built-In Memory	Built-in memory (can take and store 10 photos) but cannot record video without memory card. Pictures taken with the built-in memory can only be saved to another device via USB if SD-card has been inserted.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



www.denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 5

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Warning : lithium battery inside

Contact

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900 -3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: +34 960 046 883
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Fairfixx GmbH

Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: **+49 851 379 369 69**

E-Mail: **denver@fairfixx.de**

Austria

Lurf Premium Service GmbH

Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

Version 1.1