



KCA-1330 MK2

09/2022



FR

Cet appareil  
est recyclable

À DÉPOSER  
EN MAGASIN



À DÉPOSER  
EN DÉCHÈTERIE



OU

Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !



## Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Warning: This product includes lithium polymer batteries.
2. WARNING: CHOKING HAZARD – Children under 3 yrs. can choke or suffocate on camera because of its small size. Adult supervision required. Keep camera away from toddlers and pets to avoid chewing and swallowing. Discard broken buttons or parts at once.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Only charge with supplied USB cable.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

## Appearance



## Start to use

### 1. Recharge

Use Micro-USB cable to charge if it is low battery. As shown in the figure below.

### 2. How to use the memory card

2.1. Properly insert the Micro SD into the card holder as per the instructions near the card holder.

2.2. To remove the Micro SD, press the end of memory card gently, the card will be rejected.

Note: With the built-in memory, you can take around 50 photos without memory card. Please insert memory card before using it to take video.



### 3. Power on/off

3.1. Power on: Long press the power Button  the screen will be on and the camera will be started

3.2. Power off: Hold on Power Button for 3 seconds when the camera is in the idle state to turn it off.




3.3. Auto screen off: The screen will be turned off automatically when the time that

the camera is in the idle state for automatic-screen off to save power.


3.4. Power off when the camera is lacking-power. When battery power is very low, an icon will be displayed on the LCD screen, prompting you to charge it in time. When the icon flickers the camera will be turned off automatically.

## 4. Recording mode,photo mode,playback mode, game, music and system settings

### 4.1. Recording Mode

When you turn on your camera, you are in main menu, find icon , short press  will enter video recording mode, short press  to start video recording; short press it again to stop shooting.


Tip: If you want return menu, kindly short press power button 




4.1.1. Short press page up button  to choose color effect of images, there are seven kinds of color effects, such as normal,black and white, retro, negative, red, green and blue.


4.1.2. Short press page down button  to enter the mode of Automatic breath screen.


4.1.3 Short press left button  to choose fast or slow motion.

### 4.2. Photo Mode

4.2.1. When you turn on your camera, you are in main menu, find icon , short press

the take photos button  to enter photo mode, short press power button  to capture your photo. Then short press page up button  to choose color effect of images. You can long press it to enlarge focal length (2-3-4-8 times)





Tip: If you want to return to menu or exit, kindly short press power button 



4.2.2. Short press page down button  to enter different frames or vibrato effects mode. (28 cartoon frames and 5 vibrato effects) You can long press it to minify focal length. (2-3-4-8 times)



4.2.3. Short press  to turn on/off timed photo function.

Tip: You can set timed photo function at setting menu, there are three kinds of modes:2 sec, 5 sec,10 sec.

### 4.3. Playback mode





4.3.1. Enter main menu, find icon , short press  into playback mode, you can short press left  or right  button to see the photos and videos you took.

4.3.2. Short press up button  to delete one photo or video. (you can see Execute and Cancel, short press right or left button to choose, short press  to confirm)

4.3.3. Short press down button  to delete ALL photos or videos. (you can see Execute and Cancel, short press right or left button to choose, short press  to confirm)



Tip: If you want to return to menu or exit, kindly short press power button 

#### 4.4. Game mode:

Enter main menu, find icon , short press  into game mode, you can short press  or right  button to choose, then short press  to confirm. (3 games: Square game, Push Box, Snake)

Tip: If you want return to menu or exit, kindly short press power button 

#### 4.5. Setting mode:


- Enter main menu, find icon , short press  into setting mode. More functions as below:
- Photo size: 2M~3M~5M~8M~12M~16M~18M~20M ~40M
- Timed photo: Off, 2 sec, 5 sec, 10 sec
- Video format: 1080P, 720P, VGA
- Date stamp: on , off
- Language: English, German, Italian, Portuguese, Espanol, Dutch, Danish, Swedish, Finnish, Polish, Norwegian, French, Croatian
- Auto screen: off, 1min, 2 min, 3 min (to save power when you do not use)
- Auto off: off, 3 min, 5min (To conserve battery power, the camera will shut off if no keys are pressed within the selected time)
- Format: execute, cancel (Erase all data on the SD Card)
- Date: Year/Month/ Day (setting the date and time of the camera)
- System reset: execute, cancel (Reset settings of the camera to factory default)





## 5. Connect to PC

The camera has a plug-and-play function. Connect the powered device to the computer with the USB cable, and the mode will automatically switch to the removable hard disk. Removable disk icon will appear in the "My Computer" window. The pictures and video files you shot are stored in the removable disk H: \ DCIM folder (H is this equipment removable disk).

 Note: During file downloading, it is prohibited to disconnect USB connection, and plugging out the memory card when USB connected is also prohibited to avoid loss of data.

## Technical parameters

Speaker	1W
Battery	600mah (full capacity +with protective board)
Resolution	1080P/720P/VGA
Video Resolution	Real: 640*480 (VGA) Interpolation: 1920 * 1080 (with filters, slow, fast)
Photo Resolution	Real: 640*480 Interpolation: 3000 * 4000
Charging Time	1~2hours
Working Time	1.5~2.5 hours
Screen Size	2 Inch IPS screen
Material	ABS with rubber oil painting
Storage Media:	Max support 32GB
Features	Photography , take videos , 3 Puzzle games , 28 Cartoon Stickers, 6 Filters, auto on/off, 8 x Digital Zoom ,13 Languages, 5 Vibrato Effects,Automatic Breath Screen , Timed Photo Function, Date Input, Time Stamp, Voice Record, Delete, Format, Reset System, Photo Size,Slow Motion
Product Size	8.8 x 6.1 x 4.8cm
Product Weight	176g (includes package)
Memory	Built-in memory (can take and store 50 photos) but cannot record video without memory card. Pictures taken with the built-in memory can only be saved to another device via USB if SD-card has been inserted.
Operation Requirements	Windows XP/Vista/7/8, Mac 10.8

**Note:** The product design specification is made based on updated information when

compiling this product manual. The specification is subject to change without further notice. The product is subject to the actual camera. When the camera is crashed from drop and please restart the camera

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



[www.denver.eu](http://www.denver.eu)



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denver.eu](http://www.facebook.com/denver.eu)

Warning: lithium battery inside





# Contact

## Nordics

### Headquarter

Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

Phone: **+45 86 22 61 00**  
(Push "1" for support)

E-Mail  
For technical questions, please write to:  
**support.hq@denver.eu**

For all other questions please write to:  
**contact.hq@denver.eu**

## Benelux

---

### DENVER BENELUX B.V.

Barwoutswaarder 13C+D  
3449 HE Woerden  
The Netherlands

Phone: **0900 -3437623**

E-Mail: **support.nl@denver.eu**

## Spain/Portugal

---

### DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave 16  
Parque Tecnológico  
46980 PATERNA  
Valencia (Spain)

### Spain

Phone: +34 960 046 883  
Mail: **support.es@denver.eu**

### Portugal:

Phone: **+35 1255 240 294**  
E-Mail: **denver.service@satfiel.com**

## Germany

### Denver Germany GmbH Service

Max-Emanuel-Str. 4  
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail  
**support.de@denver.eu**

### Fairfixx GmbH

Repair and service  
Rudolf-Diesel-Str. 3 TOR 2  
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,  
Smartphones & Tablets)

Tel.: **+49 851 379 369 69**

E-Mail: **denver@fairfixx.de**

## Austria

---

### Lurf Premium Service GmbH

Deutschstrasse 1  
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

If your country is not listed above,  
please write an email to  
**support@denver.eu**

---



DENVER A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

denver.eu  
facebook.com/denver.eu

Version 1.1