



PBH-4002

denver.eu



FR

Cette batterie est recyclable

À DÉPOSER EN MAGASIN



OU

À DÉPOSER EN DÉCHÈTERIE



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

07/2022

## Important safety information

WARNING: Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Please keep the product away from pets.
3. Warning! This power bank is with lithium polymer battery inside.
4. Do not try to open the power bank.
5. Do not expose to heat, water, moisture or direct sunlight!
6. Do not attempt to replace the battery yourself- you may damage the battery, which could cause overheating and injury. Repairs or service should only be performed by qualified personnel.
7. Battery must be recycled or disposed of separately from household waste. Do not incinerate the battery.
8. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
9. Please remove the charging cable when the power bank is fully charged.
10. Product operating and storage temperature is from 5 degrees Celsius to 35 degrees Celsius. Under and over this temperature might affect the function.
11. Do not drop or expose to impact or shock in any way.

## Item Overview



1. Type-C Input
2. USB Output
3. LED Indicator
4. Power Button

## Package Contents

Hand warmer power bank

USB-A to Type-C charging cable

User Manual

## Specifications

\*Battery capacity: 4000mAh

\* Type-C Input: 5 V/2 A

\* USB Output: 5V/2A

\*3 heating levels

\*With battery level indicator

## Charging the power bank

1. Fully charge the power bank before using at the first time.
2. Connect Type-C cable to the Type-C input jack of the device.
3. Connect the other end of the cable to a USB power source.
4. When all 3 LEDs are lit the power bank is fully charged.

## Using hand warmer

1. Press and hold the power button for 2 seconds to start heating mode.
2. The LEDs will be red in heating mode.
3. The hand warmer will be in high heat mode (48°C) to start, press the power button again for medium heat (40°C), press a third time for low heat (35°C).
4. To exit heating mode, double click the power button.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denver.eu](http://www.facebook.com/denver.eu)