



MP-1820

denver.eu

09 / 2023



FR

Cet appareil et ses accessoires sont recyclables

À DÉPOSER EN MAGASIN



À DÉPOSER EN DÉCHÈTERIE



ou

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes lithium polymer battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degrees Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
7. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
8. Only charge with the supplied USB cable.
9. Using accessories other than the ones delivered with the product can cause abnormal functionality.

Denver A/S reserve the rights for print errors.


Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

User Manual

1.Function Overview

- 1.77" 128*160 TFT LCD display
- Audio playback: MP3, WMA, WAV, FLAC, APE
- Video playback: AMV
- Picture viewer: JPG, BMP, GIF
- Video recorder function and E-book reader
- Supports multiple languages and preset EQ
- Micro USB port, 2.0 high speed
- 250mAh built-in rechargeable battery;
- 4GB built-in flash memory

Player Overview

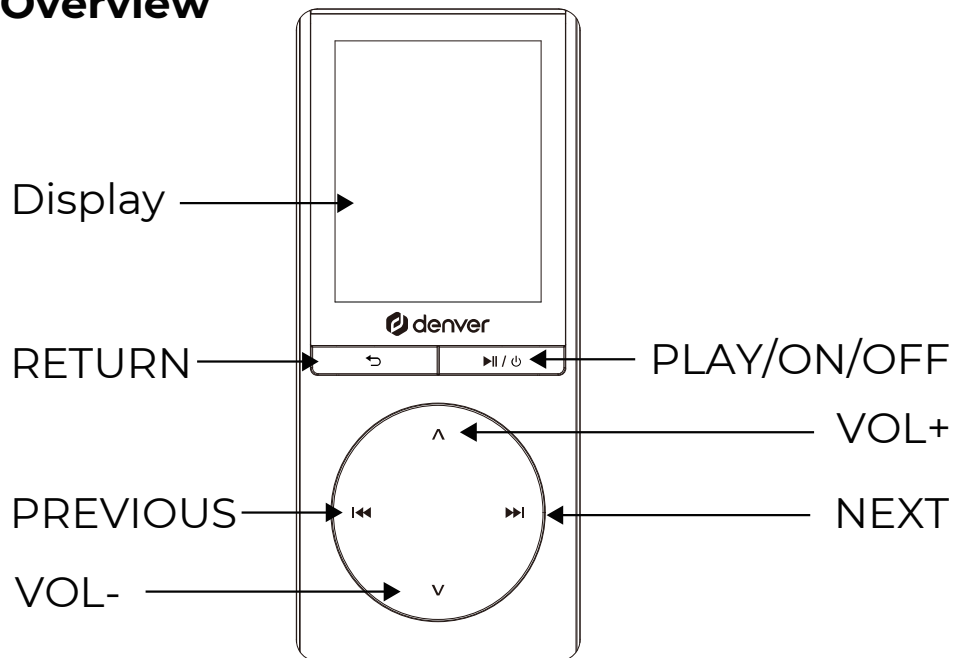

Button Definition

1. ↶ button: Return to previous menu
2. ▶||/⏻ button: Select and enter different modes/Play/Pause/Power On/Off (press and hold)
3. NEXT button: Press to skip to the next file; press and hold to fast forward, move right in menu options
4. PREVIOUS button: Press to skip to previous file; press and hold to fast rewind, move left in menu options
5. VOL+ button: Increase volume
6. VOL- button: Decrease volume

Battery Level Indicator

- Battery is full.
- Low battery; the player should be charged as soon as possible.

Important: Charge the player for at least 8 hours before using it for the first time.

Basic Operation

To turn the player off, press and hold the ▶||/⏻ button until the display shuts off.

Note: "Press and hold" means long press for approx. 2 seconds.

Music

Music Playback Controls

1. **PREVIOUS** button: Previous track /Rewind (press and hold)
2. **NEXT** button: Next track /Fast forward (press and hold)
3. **▶||/⏸** button: Enter music playback submenu, Play / Pause
4. **↶** button: Return to last viewed menu
5. **VOL+** button: Increase volume
6. **VOL-** button: Decrease volume

Music Playback Submenu

Press and hold the **▶||/⏸** button in the Music menu to enter the Music Playback Submenu as below:



Music Submenu

In music PAUSE or PLAYBACK mode, press and hold the **↶** button to access **Music Menu 2** to select the following options:

- Play mode
- Sound settings
- Add to playlist
- Remove from playlist
- Delete

Video

To watch movies, select **Video** from the main menu and press the ►||/⏻ button to confirm. The video playback screen will be displayed.

Movie Playback Controls

1. **PREVIOUS** button: Previous video /Rewind (press and hold)
2. **NEXT** button: Next video /Fast forward (press and hold)
3. ►||/⏻ button: Play /Pause
4. ⏪ button: Return to previous menu/enter **Menu 2** (press and hold)
5. **VOL+** button: Increase volume
6. **VOL-** button: Decrease volume

Movie Submenu

In this submenu, press the ►||/⏻ button to start the movie.

While a video is PAUSED, hold the ⏪ button to access the Video menu where you can select the following options:

Repeat: Video repeat options

Delete file: Delete a single video file

Delete all: Delete all video files

Pictures

To view pictures, select **Pictures** from the main menu and press the ►||/⏏ button to enter the photo browser.

1. Use the **PREVIOUS** or **NEXT** button to scroll through the **ROOT** folder and select a photo you would like to view, then press the ►||/⏏ button.
2. Use the **PREVIOUS** or **NEXT** button to scroll through your pictures.
3. Press the ⏪ button to return to the **ROOT** folder.

Photo Menu

In the **ROOT** folder, press and hold the ⏪ button to access the Pictures menu where you can select the following options.

Brightness: Adjust brightness

Slideshow settings: Adjust playback method

Delete picture

Update playlist

Recordings

To record voice memos, select **Recordings** from the main menu and press the ►||/⏏ button to enter recording mode.

1. Press the ►||/⏏ button to start recording.

2. To pause the recording, press the ►||/⏻ button again.
3. To save the recording and exit to the main menu, press the ↵ button.
4. ⚠ If "Capacity is full" is shown on the display, it means that there is no space for saving the recorded files, and you need to delete other documents to free space.
5. ⚠ If "Content is full" is shown on the display, it means that there are 99 files in this folder, please change to a different folder for saving.

Record Types

32KBPS	Wav format. Average sound quality.
128KBPS	Wav format. Medium quality

Play

To play back recorded voice memos, select **Recordings library** from the main menu and press the ►||/⏻ button to enter the voice memos mode.

Voice Playback Controls

1. **PREVIOUS** button: Previous memo /Rewind (press and hold)
2. **NEXT** button: Next memo /Fast forward (press and hold)

3. ▶||/⏸ button: Play or pause recording
4. ↶ button: Return to previous menu /Save recording (press and hold)
5. **VOL+** button: Increase volume
6. **VOL-** button: Decrease volume

Folder view

Press the ▶||/⏸ button to open **Folder**, where you can find all files in the folder.

E-book

The E-book mode allows reading text files. To use this mode, please follow below instructions:

1. Use the **PREVIOUS** or **NEXT** button to scroll through the **ROOT** folder and select a text you would like to read, then press the ▶||/⏸ button to confirm.
2. Use the **PREVIOUS** or **NEXT** button to scroll through your texts.
3. Press the ↶ button to return to the **ROOT** folder.

In the **ROOT** folder, press and hold the ↶ button to access the **E-book** menu where you can select the following options.

Playback setting: Setting the time to turn the pages automatically

Delete E-book: Delete

Book select: Select bookmark
Delete bookmark
Add bookmark
Page select

Calendar

Press the ►||/⏻ button to open the calendar.

Settings

In the **Settings** menu you can customize various player settings:

- Display setting
- Set off
- Date & time
- Volume limit
- Language
- Information
- Format the device
- Factory settings

Bluetooth


Press the ►||/⏻ button to enter the Bluetooth menu, where you can press the ►||/⏻ button to enter the submenus:

Bluetooth switch control

Search for device
Device List
All songs

Select **Bluetooth switch control**, and press the ►||/⏻ button to enter the submenu:

- Bluetooth open
- Bluetooth off

Select **Bluetooth open**, the icon  will appear on the player, and then select "Select for device". Turn on the Bluetooth device you want to connect with, the player will show the Bluetooth device name and then connect. After being connected, the Bluetooth device will playback the songs which the MP4 player plays.

Warning!

- Lithium battery inside!
- Do not try to open the product!
- Do not expose to heat, water, moisture or direct sunlight!
- Only charge with the original charger supplied with this product!

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

ENG 12

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type MP-1820 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: MP-1820. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range:2402-2480GHz
Max Output Power:3.30dBm

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Contact

Nordics

Headquarter

Denver A/S

Omega 5A, Soefte
DK-8382 Hinnerup
Denmark

Phone: **+45 8622 6100** (Push "1" for support)

E-Mail

For technical questions, please write to:

support.hq@denver.eu

For all other questions please write to:

contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: support.nl@denver.eu

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n°23 - nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: +34 960 046 883

Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**

E-Mail: **denver.service@satfiel.com**

Austria

Lurf Premium Service GmbH

Deutschstrasse 1
1230 Wien

Phone: **+431904 3085**

E-Mail: **denver@lurfservice.at**

Germany

Denver Germany GmbH Service

Max-Emanue-Str.4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Fairfixx GmbH

Repair and service
Rudolf-Diesel-Str.3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: +49 851 379 369 69

E-Mail: denver@fairfixx.de

If your country is not listed above,
please write an email to

support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu



Version 1.1