



DMP-391

denver.eu

11/2023



FR

Cet appareil et
ses accessoires
sont recyclables

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !


Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Getting to Know the Portable CD Player

LOCATION OF CONTROLS

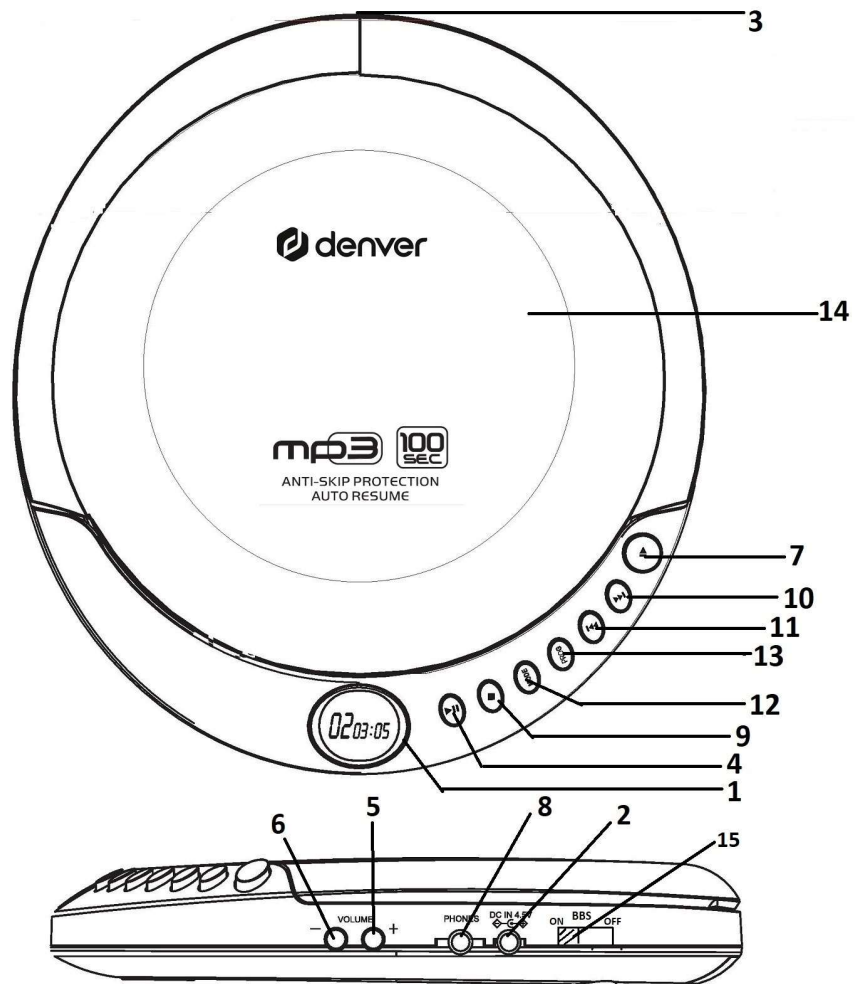

- | | |
|------------------------|--------------------------------|
| 1. LCD display | 9. STOP/POWER OFF button |
| 2. DC input jack | 10. SKIP/SEARCH FORWARD button |
| 3. Battery compartment | 11. SKIP/SEARCH REVERSE button |
| 4. PLAY/PAUSE button | 12. MODE button |
| 5. VOLUME+ button | 13. PROG button |
| 6. VOLUME- button | 14. CD door |
| 7. OPEN button | 15. BBS switch |
| 8. Earphones jack | |

How to Operate the Portable CD Player

Powering the Portable CD Player

The CD Player can be powered with either two AA (UM-3) batteries or an AC adaptor.

Note: both the batteries or AC adaptor are not supplied.

Using batteries (NOT SUPPLIED)

1. Open the battery compartment (3) on the back of the CD player by sliding open and gently pulling upwards the battery door.
2. Check the polarity (+/-) inside the battery compartment.
3. Insert two AA (UM-3) batteries according to the polarity.
4. Close the battery compartment again.

For best performance and extended operating time, we recommend using alkaline batteries.

IMPORTANT!

- Please always ensure batteries are correctly installed. Incorrect polarity can damage the CD Player.
- Never mix old and new batteries.
- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.
- If you are not planning to use the CD Player for an extended period of time, always remove the batteries. Old or leaking batteries can cause damage to the CD Player and may void the warranty.
- Never dispose of batteries in a fire - batteries can leak or explode.

Using an AC adaptor (NOT SUPPLIED)

1. Insert the DC plug (at the end of the AC adaptor cord) into the DC input jack (2).
2. Plug the AC adaptor into a 220/230 V/AC, 50Hz AC power socket.
3. The CD Player will automatically disconnect from using battery power and operate using the AC adaptor.

IMPORTANT!

- Only use an adaptor with an output voltage rated as DC 4.5V 800mA, and a centre positive plug.

IMPORTANT!

- If there is no MP3/CD or CD inside the unit, “NoCd” will appear on the LCD display (1).

Loading an MP3/CD or CD

1. Gently press the OPEN button (7) to open the CD door (14).
2. Load the MP3/CD or CD into the CD player, label side up.
3. Gently close the CD door (14).

MP3/CD or CD playback

1. Connect your earphones to the earphones jack (8)
2. Press the PLAY/PAUSE button (4) to start the CD player and play the loaded MP3/CD or CD.
 - i. Anti-shock protection will be activated automatically and “ESP” will appear on the display.

- ii. “CD” will appear on the LCD display (1) when a CD is loaded.
 - iii. “MP3” will appear on the LCD display (1) when an MP3/CD is loaded.
3. Adjust the volume by pressing the VOLUME+ button (5) and VOLUME- button (6) to your preferred sound level.
4. Press the PLAY/PAUSE button (4) to pause playback anytime you want.
5. Press the PLAY/PAUSE button (4) again to resume playback.

Skip/Search when playing an MP3/CD or CD

1. Press the SKIP/SEARCH FORWARD button (10) once or several times to skip forward to the desired track.
2. Press and hold the SKIP/SEARCH FORWARD button (10) to search forward in the current track.
3. Press the SKIP/SEARCH REVERSE button (11) once or several times to skip backward to the desired track.
4. Press and hold the SKIP/SEARCH REVERSE button (11) to search backward in the current track.

Stopping an MP3/CD or CD

1. Press the STOP button (9) at any time to stop the MP3/CD or CD during playback.
2. Press the STOP button (9) again to switch off the CD player.

Playing MP3/CD or CD tracks in programmed sequence

1. Press the PROG button (13) “P01” and “PROG”, “P01”, “00” will appear on the LCD display (1).

2. Press the SKIP/SEARCH FORWARD button (10) or SKIP/SEARCH REVERSE button (11) to select the track to be programmed.
3. Press the PROG button (13) to save the selected track to the program.
4. Repeat steps 2 and 3 to program up to 20 tracks (CD) or respectively 99 tracks (MP3/CD).
5. Press the PLAY/PAUSE button (4) to start playing the programmed tracks.

Other playback modes

1. Press the MODE button (12) once, "REP 1" will appear on the LCD display (1), and the CD player will repeat playing the current track continuously.
2. Press the MODE button (12) once again, "REP ALL" will appear on the LCD display (1), and the CD player will repeat playing the entire MP3/CD or CD continuously.
3. Press the MODE button (12) once again, "REP DIR" will appear on the LCD display (1), and the CD player will repeat playing the current directory of the MP3/CD continuously.

(NOTE: This operation is applicable for MP3/CD only)

4. Press the MODE button (12) once again, "INTRO" will appear on the display, and the CD player will play the first 10 seconds of every track on the MP3/CD or CD.
5. Press the MODE button (12) once again, "RND" will appear on the display, and the CD player will play the tracks on the MP3/CD or CD in random order.
6. Press the MODE button (12) once again, and the CD player will resume normal playback.


Auto resume function

1. If the CD player turns off during playback due to power failure or the CD door accidentally being opened, you can resume playback from the same position after restarting the unit or closing the CD door again. Auto resume also works if you turn the CD player off, and want to continue listening at a later time.

BBS function

1. You can use the BBS switch (15) to enable or disable the bass boost system.
2. Slide the BBS switch (15) to “ON” position; it will enhance the low frequency (Bass) response of the sound output.

Low battery indicator

When the battery replacement indicator  flashes on the display, replace the batteries.

Care and maintenance

- Clean with a soft, damp cloth slightly moistened with water or a mild detergent.
- Do not use any chemical cleaners such as alcohol, benzene or thinners.
- Never leave the CD Player in direct sunlight or in hot, humid or dusty places.
- Keep the CD Player away from heating appliances and sources of electrical noise such as fluorescent lamps and motors.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, n° 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: +34 960 046 883
Mail: **support.es@denver.eu**

Portugal:
Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Fairfixx GmbH
Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: +49 851 379 369 69
E-Mail: denver@fairfixx.de

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

