



WCT-8016

denver.eu

January 2024



FR

Cet appareil et  
ses accessoires  
sont recyclables

À DÉPOSER  
EN MAGASIN



OU

À DÉPOSER  
EN DÉCHÈTERIE



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

## Safety precautions

Please read the safety precautions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep the product out of reach of children and pets to avoid chewing and swallowing.
3. Never use old and new batteries or different types of batteries together in main unit. Remove the batteries when you are not using the device for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included.
4. Product operating and storage temperature is from  $-20^{\circ}\text{C}$  to  $+40^{\circ}\text{C}$ . Higher and lower temperature might affect the function.

5. Never open the product. Touching electric parts may cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat or direct sunlight!
7. Do not use non-original accessories together with the product as this can make the product functionality abnormal.

## ***Product Introduction***

---

### **Some Tips before Using**

- ◆ **If you see a red flash when you take photos, push the switch from “TEST” to “ON”.**
- ◆ **After you push the switch from “TEST” to “ON”, you will see a 15s countdown, and then the screen will shut down. This is completely normal. You can walk in front of the camera to check if it takes photos and videos.**
- ◆ Do not dip the camera into water.
- ◆ The camera can work at temperatures under -20°C, but please keep it far away from heat sources to protect the batteries.
- ◆ Alkaline batteries are recommended because they are able to provide strong and stable power to the camera.
- ◆ Please do not mix old batteries and new batteries.
- ◆ If a DC 6V power adapter is used to power the camera, please make sure there are no batteries in the camera to prevent overcharging.





◀ **Mounting Strap**

**USB Cable** ▶



## 2. Specifications

Photo Resolution	50/36/24/20/16/12/8/5/3 /1MP
Video Resolution	4K/2.7K/1080p/720p/480 p
Detection Angle	Up to 120°
Detection Distance	20 meters
Fill Light LED Wavelength	940nm (Low glow)
Trigger Time	0.2s - 0.5s
Waterproof Level	IP65
Working Temperature	-20°C to +40°C
Memory Card Type	Up to 256GB microSD card (C10)
Power Supply Type	Battery/External
Battery Type	AA Battery
Working Voltage	6 V
External Power Supply	DC 6V (not incl.)
Standby Time	Up to 6 months
Photo Format	JPEG
Video Format	AVI
Screen Size	2.0 inches
Dimensions	135x90x76mm
Weight	0.38 kg

### 3. Menu Functions

Mode	Select the working mode you need	Photos (default) Videos Photos & Videos
Photo Resolution	Select a different photo resolution	50/36/24/20/16/12/8/5/3/1MP
Photo Series	You can set the photo quantity when the camera is activated	1 photo (default) 2 photos in series 3 photos in series 10 photos in series
Video Resolution	Select a different video resolution	3840*2160p 2688*1520p 1920*1080p 1280*720p 848*480p 720*480p 640*480p
Video length	You can choose the length of video	3 seconds to 10 min
Audio Recording	Set if you want the camera to record sound	On (default) Off
Shot Lag	The time interval between each trigger <sup>(1)</sup>	5 seconds (default) to 60 minutes max.
Side Motion Sensors	Turn the side motion sensors	On/Off



	on/off	
Sensitivity Motion Sensors	You can adjust the sensitivity of the motion detection sensor.	Low Middle (default) High
Target Recording Time <sup>(2)</sup>	Set the camera to record at certain intervals	On (to set the interval) Off (default)
Time Lapse	Set up time lapse mode and the length of the lapse.	On/Off (default)
Language	Choose a different display language	English/German/ Danish/Finnish/ Swedish/Spanish/ French/Italian/ Dutch/Polish/ Portuguese/ Norwegian/ Croatian
Endless Capture	If Endless Capture mode is on, the camera will not stop recording when the memory card is full but will delete the oldest videos or photos to keep recording	On Off (default)

	continuously	
Time & Date	To set time and date. You can also choose the time format (24h or 12h) and choose the date format (dd/mm/yyyy, yyyy/mm/dd or mm/dd/yyyy)	Set Time & Date Time Format Date Format
Photo Stamp	To choose if there will be time and date on the photo.	Time & Date (default) Date Off
Password Protection	Set up a password to secure your camera	On Off (default)
Format Memory Card	Choose with caution! You will lose all data on the memory card when formatting.	Yes No (default)
Serial No.	To set up the serial number of the camera <sup>(3)</sup>	On Off (default)
Reset Settings	Reset all the settings to the original settings	Yes No (default)

- (1) For example, we set the 1 minute video length and 30 seconds shot lag. When the camera detects an animal, it will start to record a 1-minute video. However, the camera will not detect continuously. When the video is done, the camera will not detect immediately. It will attempt detection again 30 seconds after the video has completed to conserve battery life.
- (2) To use the “Target Recording Time” function, make sure you have already turned on the “Time Lapse” function and set the length of the lapse.
- (3) If you use several cameras at the same time and you want to recognize which camera took which photos and videos, set up a serial number could help you. The serial number will show on the bottom right of the photos or videos.

## ***Frequently Asked Questions***

---

### **1. I can't turn on my camera!**

- ✓ Check if the batteries have full power;
- ✓ Check if the battery polarity is correct;
- ✓ Please re-install the batteries.

### **2. My camera is not taking photos or recording videos!**

- ✓ Check if the microSD card is Class 10;
- ✓ Check if the microSD card works normally on other devices;
- ✓ Format the microSD card.

### **3. The camera does not detect anything!**

- ✓ Make sure that the camera is not behind glass;
- ✓ Check the settings in the menu to adjust the *detection distance and the detection sensitivity of the camera and then try again.*

### **4. Why does the camera not record at night but works well during the day?**

- ✓ Please check the battery level of the camera. If the battery is low (< 1/3 of the full capacity), the night vision function will automatically shut down. Change the batteries to restore the night vision function.

### **5. My "Target Recording Time" function does not work!**

- ✓ Check if you have also turned on the "Time Lapse" function and set the lapse length.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED,  
COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denver.eu](http://www.facebook.com/denver.eu)